



- 1 - Timing Lead
- 2 - Shift Interrupt Switch (Alpha)
- 3 - Knock Sensor (5.7L)
- 4 - Oil Pressure Switch
- 5 - Water Temperature Switch
- 6 - Oil Pressure Sender
- 7 - Water Temperature Sender

- 8 - Trim Sender
- 9 - Starter Solenoid
- 10 - Circuit Breaker (5.7L)
- 11 - Fuel Pump
- 12 - Oil Pressure Switch
- 13 - Ground Stud