

CONTENTS

1

GENERAL INFORMATION, SAFETY & TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-19
FASTENERS, MEASUREMENTS AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION (WHAT EVERYONE SHOULD KNOW ABOUT MAINTENANCE)	2-2
LUBRICATION	2-5
ENGINE MAINTENANCE	2-12
BOAT MAINTENANCE	2-30
TUNE-UP	2-34
TIMING & SYNCHRONIZATION	2-47
STORAGE (WHAT TO DO BEFORE & AFTER)	2-87
CLEARING A SUBMERGED MOTOR	2-91
SPECIFICATIONS	2-91

3

ENGINE MECHANICAL - GM IN-LINE ENGINES

ENGINE MECHANICAL	3-2
EXPLODED VIEWS	3-19
SPECIFICATIONS	3-21

4

ENGINE MECHANICAL - GM V6 & V8 ENGINES

ENGINE MECHANICAL	4-2
EXPLODED VIEWS	4-56
SPECIFICATIONS	4-69

5

ENGINE OVERHAUL

ENGINE RECONDITIONING	5-2
-----------------------	-----

6

FUEL SYSTEM - CARBURETORS

FUEL & COMBUSTION	6-2
CARBURETED FUEL SYSTEM	6-3
MERCARB 2 bbl CARBURETOR	6-8
WEBER WFB 4bbl CARBURETOR	6-18
WIRING DIAGRAMS	6-28
SPECIFICATIONS	6-32

7

FUEL SYSTEM - FUEL INJECTION (EFI)

FUEL & COMBUSTION	7-2
DESCRIPTION & OPERATION	7-5
ELECTRONIC FUEL INJECTION	7-5
SYSTEM DIAGNOSIS - TBI ENGINES & EARLY 2001 MPI ENGINES	7-38
SYSTEM DIAGNOSIS - MPI ENGINES	7-57
SPECIFICATIONS	7-96

8

COOLING SYSTEM

COOLING SYSTEMS	8-2
MAINTENANCE & TESTING	8-2
FLOW DIAGRAMS	8-12

CONTENTS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	9-2
BATTERY	9-8
CHARGING SYSTEM	9-10
STARTER CIRCUIT	9-18
IGNITION SYSTEMS	9-26
ELECTRONIC SPARK TIMING SYSTEM (EST)	9-28
THUNDERBOLT V IGNITION SYSTEM	9-33
DISTRIBUTOR ELECTRONIC IGNITION (DEI) SYSTEM - ECM 555	9-38
DISTRIBUTORLESS ELECTRONIC IGNITION (DIS) SYSTEM - PCM 555	9-41
INSTRUMENTS & GAUGES	9-41
SENDING UNITS & SWITCHES	9-45
WIRING DIAGRAMS	9-51
SPECIFICATIONS	9-52

IGNITION & ELECTRICAL SYSTEMS

9

DESCRIPTION	10-2
TROUBLESHOOTING	10-2
STERN DRIVE UNIT	10-3
GEAR HOUSING (LOWER UNIT)	10-5
DRIVESHAFT HOUSING (UPPER UNIT)	10-27
TRANSOM ASSEMBLY	10-37
SPECIFICATIONS	10-54

DRIVE SYSTEMS - ALPHA

10

STERN DRIVE UNIT - BRAVO	11-2
TROUBLESHOOTING	11-2
GEAR HOUSING (LOWER UNIT)	11-4
DRIVESHAFT HOUSING (UPPER UNIT)	11-19
TRANSOM ASSEMBLY	11-33
SPECIFICATIONS	11-49

DRIVE SYSTEMS - BRAVO

11

VELVET TRANSMISSIONS	12-2
ZF/HURTH TRANSMISSIONS	12-7
SPECIFICATIONS	12-10

DRIVE SYSTEMS - TRANSMISSIONS

12

STANDARD POWER TRIM & TILT	13-2
DESCRIPTION & OPERATION	13-2
TROUBLESHOOTING	13-3
AUTO TRIM II SYSTEM	13-27
WIRING SCHEMATICS	13-28

TRIM & TILT

13

DESCRIPTION	14-2
MANUAL STEERING SYSTEM	14-2
POWER STEERING SYSTEM	14-4
COMPACT HYDRAULIC SYSTEM	14-18
TROUBLESHOOTING	14-18

STEERING

14

CONVENTIONAL REMOTE CONTROLS	15-2
DESCRIPTION & OPERATION	15-10
SMARTCRAFT DIGITAL THROTTLE & SHIFT (DTS)	15-10
PRECISION PILOT	15-34
TROUBLESHOOTING	15-34

REMOTE CONTROLS

15

MASTER INDEX	15-41
--------------	-------

MASTER INDEX

ALTERNATOR	9-12	BAILING DEVICES	1-10
CIRCUIT TESTING	9-13	COMPASS	1-10
COMPONENT TESTING - DELCO	9-15	FIRST AID KIT	1-10
COMPONENT TESTING - MANDO	9-15	OAR/PADDLE	1-10
DISASSEMBLY & ASSEMBLY	9-16	TOOLS & SPARE PARTS	1-12
PRECAUTIONS	9-12	VHF-FM RADIO	1-10
REMOVAL & INSTALLATION	9-12	BOATING SAFETY	1-4
SYSTEM INSPECTION	9-12	COURTESY MARINE EXAMINATIONS	1-10
ANCHORS	1-10	REGULATIONS FOR YOUR BOAT	1-4
ANODES (ZINCS)	2-64	REQUIRED SAFETY EQUIPMENT	1-5
INSPECTION	2-66	BOOSTER CYLINDER - POWER STEERING SYSTEM	14-12
LOCATIONS	2-65	REMOVAL & INSTALLATION	14-12
SERVICING	2-64	BRAVO & LATER ALPHA MODELS	14-12
AUDIO WARNING SYSTEM	9-45	EARLY ALPHA MODELS ONLY	14-12
TESTING	9-45	TESTING	14-12
AUTO TRIM II SYSTEM	13-27	BUY OR REBUILD?	5-3
CONTROL MODULE	13-27	CABLE ADJUSTMENT	15-2
DESCRIPTION	13-27	CONVENTIONAL REMOTE CONTROLS	15-2
OPERATION	13-27	CAMSHAFT, BEARINGS & GEAR - 3.0L	3-16
AVOIDING THE MOST COMMON MISTAKES	1-3	CHECKING LIFT	3-16
AVOIDING TROUBLE	1-2	REMOVAL & INSTALLATION	3-17
BAILING DEVICES	1-10	CAMSHAFT & BEARINGS - V6/V8	4-48
BALANCE SHAFT	4-48	CHECKING LIFT	4-48
REMOVAL & INSTALLATION	4-48	REMOVAL & INSTALLATION	4-48
BASIC ELECTRICAL THEORY	9-2	CAN YOU DO IT?	1-2
HOW ELECTRICITY WORKS	9-2	CARBURETED FUEL SYSTEM	6-3
OHM'S LAW	9-2	ELECTRIC FUEL PUMP	6-26
BASIC OPERATING PRINCIPLES	1-13	MECHANICAL FUEL PUMP	6-25
2-STROKE MOTORS	1-14	MERCARB 2 bbl CARBURETOR	6-8
4-STROKE MOTORS	1-16	OPERATION	6-6
COMBUSTION	1-16	TROUBLESHOOTING	6-3
BATTERIES		WEBER WFB 4bbl CARBURETOR	6-18
BATTERY CHARGERS	2-68	CHARGING SYSTEM	9-10
BATTERY TERMINALS	2-67	ALTERNATOR	9-12
CLEANING	2-67	GENERAL INFORMATION	9-10
DESCRIPTION & OPERATION	9-8	GENERAL SYSTEM TROUBLESHOOTING	9-11
GENERAL INFORMATION	9-8	TESTING	9-11
REPLACING BATTERY CABLES	2-68	COOLANT TEMPERATURE GAUGE	9-41
SAFETY PRECAUTIONS	2-68	REMOVAL & INSTALLATION	9-42
SPECIFIC GRAVITY	2-67	TESTING	9-42
STORAGE	2-68	TROUBLESHOOTING	9-41
BATTERY/VOLT METER GAUGE	9-41	CHEMICALS	1-17
REMOVAL & INSTALLATION	9-41	CLEANERS	1-18
TESTING	9-41	LUBRICANTS & PENETRANTS	1-18
BELL HOUSING		SEALANTS	1-18
ALPHA	10-46	COMPASS	1-10
BRAVO	11-42	INSTALLATION	1-11
BELTS	2-10	PRECAUTIONS	1-12
ADJUSTMENT	2-11	SELECTION	1-10
SERPENTINE BELTS	2-12	COMBINATION MANIFOLD - 3.0L	3-9
V-BELTS	2-11	REMOVAL & INSTALLATION	3-9
INSPECTION	2-10	CARBURETED MODELS	3-9
REMOVAL & INSTALLATION	2-12	MPI MODELS	3-10
SERPENTINE BELTS	2-12	COMBUSTION	6-3, 7-4
V-BELTS	2-12	COMPACT HYDRAULIC SYSTEM	14-18
SERPENTINE BELT ROUTING	2-12	DESCRIPTION	14-18
BOAT MAINTENANCE	2-63	HYDRAULIC FLUID	14-19
ANODES (ZINCS)	2-64	STEERING UNIT	14-20
BATTERIES	2-66	TROUBLESHOOTING	14-18
CONTINUITY CIRCUIT	2-66	COMPONENT LOCATIONS	7-6
INSIDE THE BOAT	2-63	CONTINUITY CIRCUIT	2-66
THE BOAT'S EXTERIOR	2-63	CONTROL MODULE - PTT	13-27
BOATING EQUIPMENT	1-10	ADJUSTMENT	13-27
ANCHORS	1-10	CONTROL VALVE - POWER STEERING SYSTEM	14-10

15-42 MASTER INDEX

BALANCING.....	14-11	REMOVAL & INSTALLATION	
EARLY ALPHA MODELS ONLY.....	14-11	3.0L ENGINES.....	3-18
DISASSEMBLY & ASSEMBLY.....	14-10	V6/V8 ENGINES.....	4-50
BRAVO & LATER ALPHA MODELS.....	14-11	CYLINDER HEAD COVER	
EARLY ALPHA MODELS ONLY.....	14-10	REMOVAL & INSTALLATION	
REMOVAL & INSTALLATION.....	14-10	3.0L ENGINES.....	3-7
BRAVO & LATER ALPHA.....	14-10	V6/V8 ENGINES.....	4-18
EARLY ALPHA MODELS ONLY.....	14-10	DESCRIPTION & OPERATION	
CONTROLLER.....	15-38	AUTO TRIM II SYSTEM.....	13-27
REMOVAL & INSTALLATION.....	15-38	BATTERY.....	9-8
CONVENTIONAL REMOTE CONTROLS.....	15-2	CLOSED COOLING SYSTEM.....	8-2
CABLE ADJUSTMENT.....	15-2	COMPACT HYDRAULIC SYSTEM.....	14-18
EXPLODED VIEWS.....	15-2	TRANSOM ASSEMBLY.....	11-33
COOL FUEL SYSTEM (GEN II) - V6/V8 ENGINES.....	7-15	DRIVESHAFT HOUSING	
REMOVAL, DISASSEMBLY & INSTALLATION.....	7-15	ALPHA.....	10-27
COOL FUEL MODULE (GEN III) - V6/V8 ENGINES.....	7-16	BRAVO.....	11-19
DISASSEMBLY & ASSEMBLY.....	7-17	EFI MODES OF OPERATION.....	7-10
REMOVAL & INSTALLATION.....	7-16	EFI SUBSYSTEMS.....	7-10
COOLING SYSTEM		ELECTRONIC SPARK TIMING SYSTEM (EST).....	9-28
DRAINING & FILLING.....	2-45, 8-2	FLAME ARRESTOR.....	2-3
DRIVE BELTS.....	8-3	GEAR HOUSING (LOWER UNIT)	
FLUID LEVEL CHECK.....	8-3	ALPHA.....	10-5
FLUSHING THE CLOSED SYSTEM.....	2-45, 8-2	BRAVO.....	11-4
FLUSHING THE SEAWATER SYSTEM - INBOARDS & TOW SPORTS.....	2-43	FLOW CONTROL VALVE - POWER STEERING SYSTEM.....	14-14
FLUSHING THE SEAWATER SYSTEM - STERNDRIVES.....	2-42	MANUAL STEERING SYSTEM.....	14-2
LEVEL CHECK - CLOSED COOLING SYSTEM ONLY.....	2-41	MULTI-POINT INJECTION (MPI).....	7-5
PRESSURE CAP TESTING -		POWER STEERING SYSTEM.....	14-4
CLOSED COOLING SYSTEM ONLY.....	2-41, 8-3	SEAWATER COOLING SYSTEM.....	8-2
PRESSURE TEST.....	2-42, 8-3	SMARTCRAFT DIGITAL THROTTLE & SHIFT (DTS).....	15-10
RAW WATER COOLING TEST.....	8-3	STANDARD POWER TRIM & TILT.....	13-2
RAW WATER FLOW TEST.....	8-3	STARTER CIRCUIT.....	9-18
COOLING SYSTEMS.....	8-2	STERN DRIVE UNIT	
DESCRIPTION & OPERATION.....	8-2	ALPHA.....	10-2
TROUBLESHOOTING.....	8-2	BRAVO.....	11-2
COOLANT TEMPERATURE GAUGE.....	9-41	THROTTLE BODY INJECTION (TBI).....	7-5
REMOVAL & INSTALLATION.....	9-42	THUNDERBOLT V IGNITION SYSTEM.....	9-33
TESTING.....	9-42	TRANSOM ASSEMBLY	
TROUBLESHOOTING.....	9-41	ALPHA.....	10-37
COURTESY MARINE EXAMINATIONS.....	1-10	BRAVO.....	11-33
CRANKSHAFT PULLEY - V6/V8.....	4-45	UPPER UNIT.....	10-27
REMOVAL & INSTALLATION.....	4-45	DETERMINING ENGINE CONDITION.....	5-2
CROSSOVER.....	4-55	COMPRESSION TEST.....	5-2
REMOVAL & INSTALLATION.....	4-55, 8-3	OIL PRESSURE TEST.....	5-2
8.1L V8 ENGINES.....	8-3	DIRECTIONS & LOCATIONS.....	1-2
8.2L V8 ENGINES.....	8-4	DISTRIBUTOR.....	9-30
CRUISELOG METER.....	9-42	DISASSEMBLY & ASSEMBLY	
REMOVAL & INSTALLATION.....	9-42	DEI.....	9-39
TESTING.....	9-42	EST.....	9-32
CYLINDER COMPRESSION.....	2-24	THUNDERBOLT V.....	9-38
CHECKING COMPRESSION.....	2-24	REMOVAL & INSTALLATION	
CYLINDER HEAD		DEI.....	9-38
ASSEMBLY.....	5-10	EST.....	9-30
DISASSEMBLY.....	5-5	THUNDERBOLT V.....	9-37
GENERAL INFORMATION.....	5-4	DISTRIBUTOR CAP	
INSPECTION.....	5-6	REMOVAL & INSTALLATION	
CYLINDER HEAD SURFACE FLATNESS.....	5-8	DEI.....	9-38
SPRINGS, RETAINERS & VALVE LOCKS (KEEPERS).....	5-7	EST.....	9-30
VALVE GUIDES.....	5-8	THUNDERBOLT V.....	9-35
VALVE SEATS.....	5-8	DISTRIBUTOR ELECTRONIC IGNITION (DEI) SYSTEM - ECM 555 ..	9-38
VALVES.....	5-6	DISTRIBUTOR CAP.....	9-38
REFINISHING & REPAIRING.....	5-9	DISTRIBUTOR CAP.....	9-38
CYLINDER HEAD.....	5-9	GENERAL INFORMATION.....	9-38
SPRINGS, RETAINERS & VALVE LOCKS (KEEPERS).....	5-9	IGNITION COIL.....	9-40
VALVES.....	5-9		

DISTRIBUTORLESS ELECTRONIC IGNITION (DIS) SYSTEM -

PCM 555	9-41
GENERAL INFORMATION	9-41
IGNITION COIL	9-41
DRIVE PLATE	4-44
REMOVAL & INSTALLATION	4-44
DRIVESHAFT HOUSING - ALPHA	10-28
DISASSEMBLY & ASSEMBLY	10-28
DRIVEN GEAR/DRIVESHAFT ASSEMBLY	10-33
EXPLODED VIEWS	10-28
U-JOINT/DRIVE GEAR ASSEMBLY	10-30
PRE-LOAD & SHIM ADJUSTMENTS	10-35
DRIVE (PINION) GEAR SHIMMING	10-37
DRIVEN GEAR SHIMMING	10-36
GENERAL INFORMATION	10-35
UPPER DRIVESHAFT BEARING PRELOAD	10-35
REMOVAL & INSTALLATION	10-28
DRIVESHAFT HOUSING - BRAVO	11-20
EXPLODED VIEWS	11-20
REMOVAL & INSTALLATION	11-20
DISASSEMBLY & ASSEMBLY	11-20
UPPER UNIT COMPONENTS - SERIAL #0M99999 & BELOW	11-20
UPPER UNIT COMPONENTS - SERIAL #0W10000 & ABOVE	11-25
DRIVESHAFT HOUSING (UPPER UNIT) - ALPHA	10-27
DESCRIPTION	10-27
DRIVESHAFT HOUSING (UPPER UNIT)	10-28
GEAR RATIO IDENTIFICATION	10-27
DRIVESHAFT HOUSING (UPPER UNIT) - BRAVO	11-19
DESCRIPTION	11-19
DRIVESHAFT HOUSING (UPPER UNIT)	11-20
GEAR RATIO IDENTIFICATION	11-19
DRIVESHAFT OIL SEAL CARRIER	10-26
REMOVAL & INSTALLATION	10-26
DUAL HANDLE CONSOLE MOUNT & SHADOW MOUNT	
CONSOLE REMOTE CONTROLS	15-13
REMOVAL, DISASSEMBLY & INSTALLATION	15-13
DUAL POWER TRIM SYSTEM	13-25
DIODE MODULE REPLACEMENT	13-26
RELAY REPLACEMENT	13-26
TESTING	13-25
DIODE MODULE	13-25
GENERAL	13-25
PORT TRIM SWITCH	13-26
RELAY NO. 1	13-25
RELAY NO. 2	13-25
STARBOARD TRIM SWITCH	13-26
TRAILER SWITCH	13-25
TRIM CONTROL SWITCH REPLACEMENT	13-26
ELECTRIC FUEL PUMP	6-26
DESCRIPTION	6-26
PRESSURE TEST	6-27
REMOVAL & INSTALLATION	6-27
ELECTRICAL COMPONENTS	9-2
CONNECTORS	9-4
GROUND	9-3
LOAD	9-4
POWER SOURCE	9-2
PROTECTIVE DEVICES	9-3
SWITCHES & RELAYS	9-3
WIRING & HARNESSSES	9-4
ELECTRONIC CONTROL MODULE (ECM)	7-32
REMOVAL & INSTALLATION	7-32
ELECTRONIC FUEL INJECTION	7-5
COMPONENT LOCATIONS	7-6

COOL FUEL MODULE (GEN III) - V6/V8 ENGINES	7-16
COOL FUEL SYSTEM (GEN II) - V6/V8 ENGINES	7-15
DESCRIPTION & OPERATION	7-5
ELECTRONIC CONTROL MODULE (ECM)/PROPULSION CONTROL	
MODULE (PCM)	7-32
ENGINE COOLANT TEMPERATURE SENSOR (ECT)	7-33
EXHAUST MANIFOLD COOLANT TEMPERATURE SENSOR (EMCT)	7-33
FUEL BOOST PUMP (ELECTRIC)	7-18
FUEL FILTER	7-13
FUEL INJECTORS	7-20
FUEL METER COVER - TBI ENGINES	7-19
FUEL PRESSURE REGULATOR	7-19
FUEL PUMP - ELECTRIC	7-18
FUEL PUMP - MANUAL	7-18
FUEL PUMP RELAY	7-19
FUEL RAIL & INJECTORS	7-20
FUEL SUPPLY MODULE - 4 CYL. ENGINES	7-14
IDLE AIR CONTROL VALVE (IAC)	7-33
INTAKE MANIFOLD AIR TEMPERATURE SENSOR (MAT)	7-35
KNOCK SENSOR (KS)	7-35
KNOCK SENSOR MODULE	7-36
MAIN POWER RELAY	7-36
MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP) &	
MANIFOLD AIR	
PRESSURE AND TEMPERATURE SENSOR (MAPT)	7-36
OIL PRESSURE SWITCH/SENSOR	7-37
OXYGEN SENSOR	7-37
RELIEVING FUEL PRESSURE	7-13
THROTTLE BODY	7-25
THROTTLE POSITION SENSOR (TP)	7-38
ELECTRONIC SHIFT CONTROL (ESC)	15-11
ACTUATOR ADJUSTMENT	15-12
SHIFT ACTUATOR REMOVAL & INSTALLATION	15-11
SHIFT OVERRIDE PROCEDURE	15-12
ELECTRONIC SPARK TIMING SYSTEM (EST)	9-28
DESCRIPTION	9-28
DISTRIBUTOR	9-30
DISTRIBUTOR CAP	9-30
IGNITION COIL	9-33
TROUBLESHOOTING	9-29
ELECTRONIC THROTTLE CONTROL (ETC)	15-12
REMOVAL & INSTALLATION	15-12
ELECTRONIC TOOLS	1-24
BATTERY CHARGERS	1-24
BATTERY TESTERS	1-24
GAUGES	1-24
MULTI-METERS (DVOMS)	1-24
EMERGENCY (LANYARD) STOP SWITCH	9-45
TESTING	9-45
ENGINE - 3.0L ENGINES	3-2
PRIMING THE ENGINE	3-5
REMOVAL & INSTALLATION	3-2
ENGINE - V6/V8 ENGINES	4-3
REMOVAL & INSTALLATION	4-3
INBOARDS - 5.7L & 6.2L ENGINES	4-11
INBOARDS - 8.1L & 8.2L V8 ENGINES	4-13
STERNDRIVES w/o DRIVESHAFT EXTENSION	4-3
STERN DRIVE w/DRIVESHAFT EXTENSION	4-7
STERN DRIVE - 8.1L ENGINES	4-8
ENGINE & DRIVE MAINTENANCE	2-2
BELTS	2-10
CYLINDER COMPRESSION	2-24
FLAME ARRESTOR	2-3
FUEL FILTER	2-6

15-44 MASTER INDEX

IDLE AIR CONTROL VALVE (IAC) MUFFLER	2-10	ENGINE IDENTIFICATION	4-2
IDLE SPEED & MIXTURE	2-31	EXHAUST ELBOW & CATALYST	4-39
IGNITION TIMING	2-29	EXHAUST ELBOW & RISER	4-37
IMPELLER/WATER PUMP	2-21	EXHAUST HOSES (BELLOWS) & INTERMEDIATE EXHAUST PIPE ..	4-40
PCV VALVE	2-33	EXHAUST MANIFOLD	4-30
PROPELLER	2-33	EXHAUST VALVE (FLAPPER/SHUTTER)	4-41
SEAWATER STRAINER	2-21	FRONT COVER & OIL SEAL	4-46
SERIAL NUMBER IDENTIFICATION	2-2	FRONT ENGINE MOUNTS	4-16
SPARK PLUG WIRES	2-29	GENERAL INFORMATION	4-2
SPARK PLUGS	2-25	HEAT EXCHANGER (EXC. 8.2L)	4-53
THERMOSTAT	2-14	HEAT EXCHANGER & CROSSOVER (8.2L)	4-55
VALVE ADJUSTMENT	2-33	HYDRAULIC VALVE LIFTER	4-22
ENGINE BLOCK	5-10	INTAKE MANIFOLD	4-24
DISASSEMBLY	5-10	LOWER EXHAUST PIPE (Y-PIPE)	4-41
GENERAL INFORMATION	5-10	OIL FILTER BYPASS VALVE	4-44
INSPECTION	5-11	OIL PAN	4-41
REFINISHING	5-13	OIL PUMP	4-43
ASSEMBLY	5-14	REAR ENGINE MOUNTS	4-17
ENGINE COOLANT TEMPERATURE (ECT) SENSOR		REAR MAIN SEAL	4-51
REMOVAL & INSTALLATION	7-33, 8-11	REAR MAIN SEAL RETAINER	4-53
TESTING	8-11, 9-45	ROCKER ARMS & PUSH RODS	4-19
ENGINE COUPLER & FLYWHEEL		TIMING CHAIN & SPROCKETS/GEARS	4-47
REMOVAL & INSTALLATION		WATER (ENGINE) CIRCULATING PUMP	4-53
3.0L ENGINES	3-14	ENGINE MOUNTS - 3.0L ENGINES	
V6/V8 ENGINES	4-44	REMOVAL & INSTALLATION	
ENGINE IDENTIFICATION		FRONT	3-5
3.0L	3-2	REAR	3-6
V6/V8 ENGINES EXC. 8.1L	4-2	SIDE	3-6
8.1L V8 ENGINES	4-3	ENGINE MOUNTS - V6/V8 ENGINES	
ENGINE MECHANICAL - 3.0L ENGINES	3-2	FRONT	4-16
CAMSHAFT, BEARINGS & GEAR	3-16	REAR	4-17
COMBINATION MANIFOLD	3-9	ENGINE OVERHAUL TIPS	5-3
CYLINDER HEAD	3-18	CLEANING	5-3
CYLINDER HEAD COVER	3-7	OVERHAUL TIPS	5-3
ENGINE	3-2	REPAIRING DAMAGED THREADS	5-4
ENGINE COUPLER & FLYWHEEL	3-14	TOOLS	5-3
ENGINE IDENTIFICATION	3-2	ENGINE PREPARATION	5-4
EXHAUST ELBOW	3-11	ENGINE RECONDITIONING	5-2
EXHAUST ELBOW & CATALYST	3-11	BUY OR REBUILD?	5-3
EXHAUST HOSE (BELLOWS)	3-12	CYLINDER HEAD	5-4
EXHAUST PIPE(S)	3-12	DETERMINING ENGINE CONDITION	5-2
EXHAUST VALVE (FLAPPER/SHUTTER)	3-12	ENGINE BLOCK	5-10
FRONT COVER & OIL SEAL	3-16	ENGINE OVERHAUL TIPS	5-3
FRONT ENGINE MOUNTS	3-5	ENGINE PREPARATION	5-4
GENERAL INFORMATION	3-2	ENGINE START-UP & BREAK-IN	5-16
HYDRAULIC VALVE LIFTER	3-9	ENGINE START-UP & BREAK-IN	5-16
OIL FILTER BYPASS VALVE	3-14	BREAKING IT IN	5-16
OIL PAN	3-12	KEEP IT MAINTAINED	5-16
OIL PUMP	3-13	STARTING THE ENGINE	5-16
PUSH ROD COVER	3-7	EQUALIZER	15-38
REAR ENGINE MOUNTS	3-6	REMOVAL & INSTALLATION	15-38
REAR MAIN SEAL	3-14	EXHAUST BELLOWS	
ROCKER ARMS & PUSH RODS	3-8	REMOVAL & INSTALLATION	
SIDE ENGINE MOUNTS	3-6	ALPHA	10-44
TORSIONAL DAMPER	3-15	BRAVO	11-36
ENGINE MECHANICAL - V6/V8 ENGINES	4-2	EXHAUST ELBOW	3-11
BALANCE SHAFT	4-48	REMOVAL & INSTALLATION - CARBURETED MODELS	3-11
CAMSHAFT & BEARINGS	4-48	EXHAUST ELBOW & CATALYST	
CRANKSHAFT PULLEY & TORSIONAL DAMPER/BALANCER	4-45	REMOVAL & INSTALLATION	
CROSSOVER	4-55	3.0L MPI ENGINES	3-11
CYLINDER HEAD	4-50	V6/V8 ENGINES	4-39
CYLINDER HEAD COVER	4-18	EXHAUST ELBOW & RISER - V6/V8 ENGINES	4-37
ENGINE	4-3	REMOVAL & INSTALLATION	4-37
ENGINE COUPLER/DRIVE PLATE & FLYWHEEL	4-44	EXHAUST HOSE (BELLOWS) - 3.0L ENGINES	3-12

<p>REMOVAL & INSTALLATION 3-12</p> <p>EXHAUST HOSES (BELLOW)S & INTERMEDIATE EXHAUST PIPE -</p> <p>V6/V8 ENGINES 4-40</p> <p>REMOVAL & INSTALLATION 4-40</p> <p>EXHAUST MANIFOLD - V6/V8 ENGINES 4-30</p> <p>REMOVAL & INSTALLATION 4-30</p> <p>ALL ENGINES EXC. 8.1L/8.2L V8 & MODELS W/EC 4-30</p> <p>5.0L, 5.7L & 6.2L V8 ENGINES w/EC 4-33</p> <p>8.1L V8 ENGINES (w/o CATALYST) 4-34</p> <p>8.2L V8 ENGINES (w/o CATALYST) 4-35</p> <p>8.1L & 8.2L V8 ENGINES (w/CATALYST) 4-36</p> <p>EXHAUST MANIFOLD COOLANT TEMPERATURE SENSOR (EMCT) 7-33</p> <p>REMOVAL & INSTALLATION 7-33</p> <p>EXHAUST PIPE(S)</p> <p>REMOVAL & INSTALLATION</p> <p>3.0L ENGINES 3-12</p> <p>V6/V8 ENGINES 4-41</p> <p>EXHAUST TUBE - BRAVO 11-37</p> <p>REMOVAL & INSTALLATION 11-37 EXHAUST VALVE</p> <p>(FLAPPER/SHUTTER)</p> <p>REPLACEMENT</p> <p>3.0L ENGINES 3-12</p> <p>V6/V8 ENGINES 4-41</p> <p>EXPLODED VIEWS</p> <p>3.0L ENGINES 3-19</p> <p>4.3L V6 ENGINES 4-56</p> <p>5.0L, 5.7L & 6.2L V8 ENGINES 4-59</p> <p>8.1L V8 ENGINES 4-63</p> <p>8.2L V8 ENGINES 4-63, 4-65</p> <p>FASTENERS, MEASUREMENTS & CONVERSIONS 1-27</p> <p>BOLTS, NUTS & OTHER THREADED RETAINERS 1-27</p> <p>STANDARD & METRIC MEASUREMENTS 1-27</p> <p>TORQUE 1-27</p> <p>FIRING ORDERS 2-72</p> <p>FIRST AID KIT 1-10</p> <p>FLAME ARRESTOR 2-3</p> <p>DESCRIPTION & OPERATION 2-3</p> <p>REMOVAL & INSTALLATION 2-4</p> <p>ALL MODELS W/CARBURETOR OR TBI 2-4</p> <p>3.0L MPI & 2012-13 SCORPION ECT MODELS 2-4</p> <p>4.3L, 5.0L, 5.7L & 6.2L MPI ENGINES (EXC. SCORPION MODELS) 2-4</p> <p>SCORPION MODELS (EXC. 2012-13) 2-5</p> <p>8.1L & 8.2L MPI ENGINES 2-5</p> <p>FLOW DIAGRAMS 8-12</p> <p>INDEX 8-12</p> <p>3.0L ENGINES 8-13</p> <p>4.3L V6 ENGINES 8-15</p> <p>5.0L, 5.7L & 6.2L V8 ENGINES 8-19</p> <p>8.1L V8 ENGINES 8-26</p> <p>8.2L V8 ENGINES 8-28</p> <p>ENGINES WITH DRY JOINT EXHAUST 8-30</p> <p>FLUID DISPOSAL 2-36</p> <p>FLUIDS & LUBRICANTS 2-36</p> <p>COOLING SYSTEM</p> <p>FLUID DISPOSAL 2-36</p> <p>FUEL & OIL RECOMMENDATIONS 2-36</p> <p>POWER STEERING 2-40</p> <p>POWER TRIM PUMP 2-57</p> <p>STERN DRIVE UNIT 2-55</p> <p>TRANSMISSION FLUID 2-52</p> <p>FLYWHEEL</p> <p>REMOVAL & INSTALLATION</p> <p>3.0L ENGINES 3-14</p> <p>V6/V8 ENGINES 4-44</p>	<p>FRONT COVER & OIL SEAL</p> <p>REMOVAL & INSTALLATION</p> <p>3.0L ENGINES 3-16</p> <p>V6/V8 ENGINES 4-46</p> <p>FRONT ENGINE MOUNTS</p> <p>REMOVAL & INSTALLATION</p> <p>3.0L ENGINES 3-5</p> <p>V6/V8 ENGINES 4-16</p> <p>FRONT SAFETY GUARD 15-38</p> <p>REMOVAL & INSTALLATION 15-38</p> <p>FUEL</p> <p>ALCOHOL-BLENDED FUELS 6-2,</p> <p>7-4</p> <p>HIGH ALTITUDE OPERATION 6-3</p> <p>OCTANE RATING 6-2,</p> <p>7-4</p> <p>RECOMMENDATIONS 6-3,</p> <p>7-4</p> <p>VAPOR PRESSURE 6-2,</p> <p>7-4</p> <p>FUEL & COMBUSTION</p> <p>APPLICATIONS 7-2</p> <p>COMBUSTION 6-3,7-4</p> <p>FUEL 6-2,7-4</p> <p>FUEL & OIL RECOMMENDATIONS 2-36</p> <p>ENGINE OIL 2-36</p> <p>FUEL 2-36</p> <p>OIL LEVEL CHECK 2-36</p> <p>OIL & FILTER CHANGE 2-38</p> <p>FUEL BOOST PUMP (ELECTRIC) 7-18</p> <p>REMOVAL & INSTALLATION 7-18</p> <p>FUEL FILTER 2-6</p> <p>REMOVAL & INSTALLATION 2-7</p> <p>FUEL PUMP FILTER - 2001-03 3.0L ENGINES ONLY 2-7</p> <p>FUEL INLET FILTER - 2 BBL CARBURETORS 2-8</p> <p>FUEL INLET FILTER - 4 BBL CARBURETOR 2-8</p> <p>INLINE FUEL FILTER - MPI ENGINES 2-8</p> <p>WATER SEPARATING FILTER - ALL ENGINES EXC. 2004 & LATER</p> <p>MODELS W/GEN III COOL FUEL MODULE 2-9</p> <p>WATER SEPARATING FILTER - 2004 & LATER MODELS W/GEN III</p> <p>COOL FUEL GAUGE 9-43</p> <p>REMOVAL & INSTALLATION 9-43</p> <p>TESTING 9-43</p> <p>TROUBLESHOOTING 9-43</p> <p>FUEL INJECTORS 7-20</p> <p>REMOVAL & INSTALLATION 7-20</p> <p>FUEL METER COVER - TBI ENGINES 7-19</p> <p>REMOVAL & INSTALLATION 7-19</p> <p>FUEL MODULE 2-9</p> <p>FUEL PRESSURE REGULATOR 7-19</p> <p>REMOVAL & INSTALLATION 7-19</p> <p>FUEL PUMP - ELECTRIC</p> <p>REMOVAL & INSTALLATION 6-26, 7-18</p> <p>FUEL PUMP - MANUAL 7-18</p> <p>REMOVAL & INSTALLATION 6-25, 7-18</p> <p>FUEL PUMP RELAY 7-19</p> <p>REMOVAL & INSTALLATION 7-19</p> <p>FUEL RAIL & INJECTORS 7-20</p> <p>INJECTOR BALANCE TEST 7-24</p> <p>REMOVAL & INSTALLATION 7-20</p> <p>FUEL SUPPLY MODULE - 4 CYL. ENGINES 7-14</p> <p>REMOVAL, DISASSEMBLY & INSTALLATION 7-14</p> <p>FUEL TANK SENDING UNIT 9-45</p> <p>TESTING 9-45</p>
---	--

15-46 MASTER INDEX

FLANGE TYPE	9-45	REMOVAL, DISASSEMBLY & INSTALLATION	4-53, 8-5
CAPSULE TYPE	9-46	TESTING	8-8
GEAR HOUSING - ALPHA	10-5	HEAT EXCHANGER & CROSSOVER (8.2L)	
ASSEMBLY	10-15	CLEANING	8-7
COUNTER ROTATION	10-19	REMOVAL & INSTALLATION	4-55, 8-6
STANDARD ROTATION	10-15	TESTING	8-8
CLEANING & INSPECTION	10-14	HOW TO USE THIS MANUAL	1-2
DISASSEMBLY - COUNTER-ROTATION	10-12	AVOIDING THE MOST COMMON MISTAKES	1-3
DISASSEMBLY - STANDARD ROTATION	10-7	AVOIDING TROUBLE	1-2
BEARING CARRIER & REVERSE GEAR	10-9	CAN YOU DO IT?	1-2
MAIN COMPONENTS	10-7	DIRECTIONS & LOCATIONS	1-2
PROPELLER SHAFT	10-10	MAINTENANCE OR REPAIR?	1-2
REMOVAL & INSTALLATION	10-5	PROFESSIONAL HELP	1-2
GEAR HOUSING - BRAVO	11-4	PURCHASING PARTS	1-3
ASSEMBLY	11-15	WHERE TO BEGIN	1-2
BRAVO I & II DRIVES	11-15	HYDRAULIC FLUID - POWER STEERING SYSTEM	14-19
BRAVO III DRIVES	11-16	CHECKING THE LEVEL	14-19
CLEANING & INSPECTION	11-14	FILLING/PURGING THE SYSTEM	14-19
DISASSEMBLY	11-5	HYDRAULIC VALVE LIFTER	
BRAVO I & II DRIVES	11-5	NOISY LIFTERS	4-22
BRAVO III DRIVES	11-10	REMOVAL & INSTALLATION	
REMOVAL & INSTALLATION	11-4	3.0L ENGINES	4-22
GEAR HOUSING (LOWER UNIT) - ALPHA	10-5	V6/V8 ENGINES	4-22
DESCRIPTION	10-5	IDLE AIR CONTROL VALVE (IAC)	7-33
DRIVESHAFT OIL SEAL CARRIER	10-26	REMOVAL & INSTALLATION	7-33
GEAR HOUSING (LOWER UNIT)	10-5	IDLE AIR CONTROL VALVE (IAC) MUFFLER	2-10
PROPELLER	10-23	CLEANING	2-10
SEA WATER PUMP & IMPELLER	10-26	IDLE SPEED & MIXTURE	2-31
GEAR HOUSING (LOWER UNIT) - BRAVO	11-4	ADJUSTMENT	2-31
DESCRIPTION	11-4	IGNITION COIL	
GEAR HOUSING (LOWER UNIT)	11-4	REMOVAL & INSTALLATION	
PROPELLER(S)	11-19	DEI	9-40
GEAR RATIO IDENTIFICATION		DIS	9-41
ALPHA	10-27	EST	9-33
BRAVO	11-19	THUNDERBOLT V	9-40
GIMBAL BEARING		IGNITION CONTROL MODULE - THUNDERBOLT V	9-37
REMOVAL & INSTALLATION		REMOVAL & INSTALLATION	9-37
ALPHA	10-37	IGNITION SYSTEMS	9-26
BRAVO	11-33	APPLICATIONS	9-26
GIMBAL HOUSING/TRANSOM PLATE		GENERAL INFORMATION	9-26
REMOVAL & INSTALLATION		IGNITION SWITCH	9-46
ALPHA	10-51	TESTING	9-46
2001-04 BRAVO MODELS (SERIAL #OM99999 & BELOW)	11-46	2001-03 3.0L ENGINES	9-46
2004 & LATER BRAVO MODELS (SERIAL #OW100000 & ABOVE) ..	11-47	2004 & LATER 3.0L AND ALL V6 & V8 ENGINES	9-47
GIMBAL RING - ALPHA	10-48	IGNITION TIMING	2-29
REMOVAL & INSTALLATION	10-48	ADJUSTMENT	2-29
GIMBAL RING - BRAVO	11-43	IMPELLER/WATER PUMP	2-21
ACCESS PLUG INSTALLATION	11-45	REMOVAL & INSTALLATION	2-21, 10-26
REMOVAL & INSTALLATION	11-43	IMPELLER - PRECISION PILOT	15-38
2001-04 MODELS	11-43	REMOVAL & INSTALLATION	15-38
2004 & LATER MODELS	11-45	INSIDE THE BOAT	2-63
HAND TOOLS	1-19	INSTRUMENTS & GAUGES	9-41
BREAKER BARS	1-21	BATTERY/VOLT METER GAUGE	9-41
HAMMERS	1-22	COOLANT TEMPERATURE GAUGE	9-41
PLIERS	1-22	CRUISELOG METER	9-42
SCREWDRIVERS	1-22	FUEL GAUGE	9-43
SOCKET SETS	1-9	OIL PRESSURE GAUGE	9-43
TORQUE WRENCHES	1-20	SPEEDOMETER	9-44
WRENCHES	1-21	TACHOMETER	9-44
HARMONIC BALANCER - V6/V8 ENGINES	4-45	VACUUM GAUGE	9-44
REMOVAL & INSTALLATION	4-45	INTAKE MANIFOLD	4-24
HEAT EXCHANGER (EXC. 8.2L V8)		REMOVAL & INSTALLATION	4-24
CLEANING	8-7	ALL CARBURETED & TBI ENGINES	4-24
		4.3L, 5.0L, 5.7L & 6.2L MPI ENGINES (EXC. SCORPION w/EC) ..	4-25

SCORPION 350/377 MODELS w/EC.....	4-28	MERCARB 2 bbl CARBURETOR.....	6-8
8.1L V8 ENGINES	4-29	ADJUSTMENT.....	6-10
8.2L V8 ENGINES	4-29	ACCELERATOR PUMP LEVER.....	6-10
INTAKE MANIFOLD AIR TEMPERATURE SENSOR (MAT).....	7-35	CHOKE SETTING.....	6-11
REMOVAL & INSTALLATION	7-35	CHOKE UNLOADER	6-11
JOYSTICK	15-39	FLOAT LEVEL & DROP	6-11
REMOVAL & INSTALLATION	15-39	IDLE SPEED & MIXTURE	6-10
KNOCK CONTROL MODULE - THUNDERBOLT V	9-37	PUMP ROD	6-10
REMOVAL & INSTALLATION	9-37	THROTTLE CABLE	6-10
KNOCK SENSOR (KS)	7-35	FLOAT LEVEL & DROP	6-11
REMOVAL & INSTALLATION	7-35	ASSEMBLY	6-17
KNOCK SENSOR MODULE	7-36	MODELS w/o TKS	6-17
REMOVAL & INSTALLATION	7-36	MODELS w/TKS.....	6-17
LOWER UNIT - ALPHA	10-5	CLEANING & INSPECTION	6-15
ASSEMBLY	10-15	DESCRIPTION	6-8
COUNTER ROTATION.....	10-19	DISASSEMBLY.....	6-12
STANDARD ROTATION.....	10-15	MODELS w/o TKS	6-12
CLEANING & INSPECTION	10-14	MODELS w/TKS.....	6-14
DISASSEMBLY - COUNTER-ROTATION	10-12	DISASSEMBLY	6-12
DISASSEMBLY - STANDARD ROTATION	10-7	MODELS w/o TKS	6-12
BEARING CARRIER & REVERSE GEAR.....	10-9	MODELS w/TKS.....	6-14
MAIN COMPONENTS	10-7	REMOVAL & INSTALLATION	6-9
PROPELLER SHAFT	10-10	MOTORS - PRECISION PILOT.....	15-39
REMOVAL & INSTALLATION	10-5	REMOVAL & INSTALLATION	15-39
LOWER UNIT - BRAVO	11-4	NEUTRAL SAFETY SWITCH (INBOARDS)	9-47
ASSEMBLY	11-15	TESTING	9-47
BRAVO I & II DRIVES.....	11-15	OAR/PADDLE	1-10
BRAVO III DRIVES.....	11-16	OIL FILTER BYPASS VALVE	
CLEANING & INSPECTION	11-14	REMOVAL & INSTALLATION	
DISASSEMBLY	11-5	3.0L ENGINES	3-14
BRAVO I & II DRIVES.....	11-5	V6/V8 ENGINES.....	4-44
BRAVO III DRIVES.....	11-10	OIL PAN	
REMOVAL & INSTALLATION	11-4	REMOVAL & INSTALLATION	
LUBRICATION POINTS	2-58	3.0L ENGINES	3-13
ENGINE COUPLER/U-JOINT SPLINES.....	2-61	V6/V8 ENGINES EXC. 8.1L & 8.2L	4-41
PROPELLER SHAFT.....	2-63	8.1L & 8.2L V8 ENGINES.....	4-42
SHIFT CABLE & TRANSMISSION LINKAGE PIVOT POINTS.....	2-58	OIL PRESSURE GAUGE.....	9-43
STARTER MOTOR - INBOARD ENGINES ONLY	2-62	REMOVAL & INSTALLATION	9-44
STEERING SYSTEM.....	2-60	TESTING	9-44
THROTTLE CABLE	2-58	TROUBLESHOOTING.....	9-43
TRANSOM/GIMBAL ASSEMBLY, HINGE PINS & GIMBAL BEARING.....	2-61	OIL PRESSURE SENDING UNIT	9-47
MAIN POWER RELAY	7-36	GENERAL INFORMATION	9-47
REMOVAL & INSTALLATION	7-36	TESTING	9-47
MAINTENANCE OR REPAIR?	1-2	OIL PRESSURE SWITCH/SENSOR	9-47
MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP) &		GENERAL INFORMATION	9-47
MANIFOLD AIR PRESSURE AND TEMPERATURE SENSOR (MAPT) ..	7-36	REMOVAL & INSTALLATION	7-37
REMOVAL & INSTALLATION	7-36	TESTING	9-48
MANIFOLDS		3.0L NON-TKS CARBURETED MODELS	9-48
COMBINATION	3-9	3.0L TKS MODELS.....	9-48
EXHAUST	4-30	3.0L MPI ENGINES	9-48
INTAKE	4-24	V6 & V8 MODELS	9-48
MANUAL STEERING SYSTEM	14-2	OIL PUMP	
GENERAL INFORMATION	14-2	REMOVAL & INSTALLATION	
STEERING CABLE	14-2	3.0L ENGINES	3-13
SWIVEL RING	14-2	V6/V8 ENGINES.....	3-13
MEASURING TOOLS	1-25	OTHER COMMON TOOLS	1-22
DEPTH GAUGES	1-26	OXYGEN SENSOR	7-37
DIAL INDICATORS	1-25	REMOVAL & INSTALLATION	7-37
MICROMETERS & CALIPERS	1-25	PANEL MOUNT REMOTE CONTROL.....	15-12
TELESCOPING GAUGES.....	1-26	REMOVAL, DISASSEMBLY & INSTALLATION.....	15-12
MECHANICAL FUEL PUMP	6-25	PCV VALVE	2-33
DESCRIPTION	6-25	INSPECTION.....	2-33
FUEL LINE TEST.....	6-26	REMOVAL & INSTALLATION	2-33
PRESSURE TEST.....	6-26		
REMOVAL & INSTALLATION	6-26		

15-48 MASTER INDEX

POWER STEERING	2-40	ROTATION	10-24
BLEEDING	2-40	SELECTION	10-23
FLUID LEVEL	2-40	SHOCK ABSORBERS	10-24
POWER STEERING COOLER	14-16	VIBRATION	10-23
GENERAL INFORMATION	14-16	INSPECTION	10-25
REMOVAL & INSTALLATION	14-16	REMOVAL & INSTALLATION	2-33, 10-26
POWER STEERING PUMP	14-12	PROPELLER(S) - BRAVO	11-19
BLEEDING THE SYSTEM	14-12	GENERAL INFORMATION	11-19
DISASSEMBLY & ASSEMBLY	14-15	REMOVAL & INSTALLATION	11-19
FLUID LEVEL	14-12	PROPULSION CONTROL MODULE (PCM)	7-32
OIL SEAL REPLACEMENT	14-15	REMOVAL & INSTALLATION	7-32
PUMP PULLEY	14-14	PTT PUMP ASSEMBLY	13-10
REMOVAL & INSTALLATION	14-12	DISASSEMBLY & ASSEMBLY	13-11
3.0L INLINE ENGINES	14-12	HYDRAULIC PUMP & ADAPTOR	13-13
4.3L V6, 5.0L, 5.7L & 6.2L V8 ENGINES	14-13	PUMP MOTOR	13-15
8.1L & 8.2L V8 ENGINES	14-13	PUMP RESERVOIR	13-11
POWER STEERING SYSTEM	14-4	SOLENOIDS	13-11
BOOSTER CYLINDER	14-12	SUPPORT BRACKET	13-11
CONTROL VALVE	14-10	HYDRAULIC PUMP & ADAPTOR	13-13
DESCRIPTION	14-4	PUMP MOTOR	13-15
POWER STEERING COOLER	14-16	FLUID LEVEL	13-10
POWER STEERING PUMP	14-12	EARLY 2001 MODELS	13-10
POWER STEERING UNIT	14-9	GENERAL INFORMATION	13-10
STEERING CABLE	14-7	REMOVAL & INSTALLATION	13-10
STEERING CABLE GUIDE TUBE	14-8	PURCHASING PARTS	1-3
TESTING	14-4	PUSH ROD COVER	3-7
TIE BAR - MULTIPLE DRIVES	14-16	REMOVAL & INSTALLATION	3-7
POWER STEERING UNIT	14-9	REAR ENGINE MOUNTS - 3.0L	3-6
GENERAL INFORMATION	14-9	REMOVAL & INSTALLATION	3-6
REMOVAL & INSTALLATION	14-9	REAR ENGINE MOUNTS - V6/V8	4-17
POWER TRIM PUMP	2-57	REMOVAL & INSTALLATION	4-17
FLUID LEVEL	2-57	INBOARD MODELS	4-17
POWER TRIM & TILT	13-2	STERN DRIVE MODELS	4-17
DESCRIPTION & OPERATION	13-2	REAR MAIN SEAL	
DUAL POWER TRIM SYSTEM	13-25	REMOVAL & INSTALLATION	
PUMP ASSEMBLY	13-10	3.0L ENGINES	3-14
SERVICE PRECAUTIONS	13-7	V6/V8 ENGINES EXC. 8.1L	4-51
SYSTEM BLEEDING	13-7	8.1L ENGINES	4-52
SYSTEM TESTING	13-7	REAR MAIN SEAL RETAINER	4-53
TRIM CYLINDER	13-18	REMOVAL & INSTALLATION	4-53
TRIM LIMIT SWITCH/TRIM POSITION SENDER	13-8	REAR SAFETY GUARD	15-39
TROUBLESHOOTING	13-3	REMOVAL & INSTALLATION	15-39
PRECISION PILOT	15-34	REGULATIONS FOR YOUR BOAT	1-4
CONTROLLER	15-38	CAPACITY INFORMATION	1-4
EQUALIZER	15-38	CERTIFICATE OF COMPLIANCE	1-5
EXPLODED VIEWS	15-37	DOCUMENTING OF VESSELS	1-4
FRONT SAFETY GUARD	15-38	HULL IDENTIFICATION NUMBER	1-4
IMPELLER	15-38	LENGTH OF BOATS	1-4
JOYSTICK	15-39	NUMBERING OF VESSELS	1-4
MOTORS	15-39	REGISTRATION OF BOATS	1-4
REAR SAFETY GUARD	15-39	SALES & TRANSFERS	1-4
TROUBLESHOOTING	15-34	VENTILATION	1-5
WIRING SCHEMATICS	15-40	VENTILATION SYSTEMS	1-5
PREPPING FOR STORAGE	2-69	RELIEVING FUEL PRESSURE	7-13
THE GREAT ETHANOL DEBATE	2-69	MPI ENGINES	7-13
WHERE TO STORE YOUR BOAT	2-69	TBI ENGINES	7-13
PROFESSIONAL HELP	1-2	REQUIRED SAFETY EQUIPMENT	1-5
PROPELLER - ALPHA	10-23	FIRE EXTINGUISHERS	1-6
GENERAL INFORMATION	10-23	PERSONAL FLOTATION DEVICES	1-7
CAVITATION	10-23	SOUND PRODUCING DEVICES	1-9
CUPPING	10-24	TYPES OF FIRES	1-5
DIAMETER & PITCH	10-23	VISUAL DISTRESS SIGNALS	1-9
PROGRESSIVE PITCH	10-24	WARNING SYSTEM	1-7
RAKE	10-24	ROCKER ARM COVER	3-7
		REMOVAL & INSTALLATION	3-7

ROCKER ARMS & PUSH RODS - 3.0L	3-8	REMOVAL & INSTALLATION	11-34
REMOVAL & INSTALLATION	3-8	REMOTE CONTROL CABLE	11-34
VALVE ADJUSTMENT	3-8	TRANSOM CABLE	11-35
ENGINE NOT RUNNING	3-8	SHIFT CABLE - VELVET	12-2
ENGINE RUNNING	3-8	ADJUSTMENT	12-2
ROCKER ARMS & PUSH RODS - V6/V8	4-19	VELVET 71C & 72C IN-LINE & V-DRIVE SERIES (EXC. SCORPION) ..	12-2
REMOVAL & INSTALLATION	4-19	VELVET 71C - SCORPION (NON-EC)	12-2
V6 ENGINES	4-19	VELVET 5000 SERIES	12-3
V8 ENGINES	4-20	SHIFT CABLE - ZF/HURTH	12-7
VALVE ADJUSTMENT	4-20	GENERAL INFORMATION	12-7
ROTOR/SENSOR WHEEL - THUNDERBOLT V	9-36	ADJUSTMENT	12-7
REMOVAL & INSTALLATION	9-36	SHIFT CUT-OUT SWITCH	10-43
SAFETY IN SERVICE	1-13	ADJUSTMENT	10-43
DO'S	1-13	SHOP EQUIPMENT	1-17
DON'TS	1-13	CHEMICALS	1-17
SAFETY TOOLS	1-17	SAFETY TOOLS	1-17
EYE & EAR PROTECTION	1-17	SIDE ENGINE MOUNTS	3-6
WORK CLOTHES	1-17	REMOVAL & INSTALLATION	3-6
WORK GLOVES	1-17	SINGLE HANDLE CONSOLE MOUNT REMOTE CONTROL	15-13
SEA STRAINER		REMOVAL, DISASSEMBLY & INSTALLATION	15-13
CLEANING & INSPECTION	2-21	SLIM BINNACLE SINGLE HANDLE CONSOLE	
REMOVAL & INSTALLATION	8-8	MOUNT REMOTE CONTROL	15-15
SEAWATER PUMP/IMPELLER		ADJUSTMENT	15-16
DISASSEMBLY & ASSEMBLY	8-8	REMOVAL, DISASSEMBLY & INSTALLATION	15-15
ALPHA DRIVES	8-8	SMARTCRAFT DIGITAL THROTTLE & SHIFT (DTS)	15-10
BRAVO/INBOARD - CARBURETED & TBI ENGINES	8-8	DESCRIPTION & OPERATION	15-10
BRAVO/INBOARD - MPI ENGINES	8-9	DUAL HANDLE CONSOLE MOUNT & SHADOW MOUNT	
OUTPUT TEST	8-10	CONSOLE REMOTE CONTROLS	15-13
REMOVAL & INSTALLATION	8-8, 10-26	ELECTRONIC SHIFT CONTROL (ESC)	15-11
SEAWATER PUMP PRESSURE SENSOR - 8.1L ENGINES	8-10	ELECTRONIC THROTTLE CONTROL (ETC)	15-12
SENDING UNITS & SWITCHES	9-45	PANEL MOUNT REMOTE CONTROL	15-12
AUDIO WARNING SYSTEM	9-45	SINGLE HANDLE CONSOLE MOUNT REMOTE	15-13
EMERGENCY (LANYARD) STOP SWITCH	9-45	SLIM BINNACLE SINGLE HANDLE CONSOLE MOUNT REMOTE ..	15-15
ENGINE COOLANT TEMPERATURE (ECT) SENSOR	9-45	WIRING SCHEMATICS - SMARTCRAFT DTS (10-PIN)	15-16
FUEL TANK SENDING UNIT	9-45	WIRING SCHEMATICS - SMARTCRAFT DTS (14-PIN)	15-19
IGNITION SWITCH	9-46	ZERO EFFORT CONSOLE MOUNT REMOTE	15-14
NEUTRAL SAFETY SWITCH (INBOARDS)	9-47	SPARK PLUGS	2-25
OIL PRESSURE SENDING UNIT	9-47	HEAT RANGE	2-25
OIL PRESSURE SWITCH	9-47	INSPECTION & GAPPING	2-28
START/STOP SWITCH	9-49	READING	2-27
STERN DRIVE GEAR LUBE MONITOR SWITCH	9-49	REMOVAL & INSTALLATION	2-26
TRANSMISSION FLUID TEMPERATURE SWITCH	9-49	SERVICE	2-26
WATER TEMPERATURE SENDER	9-50	SPARK PLUG WIRES	2-29
WATER TEMPERATURE SWITCH	9-51	REMOVAL & INSTALLATION	2-29
SENSOR - THUNDERBOLT V	9-37	TESTING	2-29
REMOVAL & INSTALLATION	9-37	SPECIAL TOOLS	1-23
TESTING	9-37	SPECIFICATIONS	2-74
SERIAL NUMBER IDENTIFICATION	2-2	ALTERNATOR	9-52
ENGINE	2-2	APPLICATIONS - EFI	7-2
STERN DRIVE	2-3	CAPACITIES	2-84
TRANSMISSION	2-3	CONVERSION FACTORS	1-28
TRANSOM ASSEMBLY	2-3	ENGINE	
SHIFT CABLE - ALPHA	10-38	3.0L ENGINES	3-22
ADJUSTMENT	10-40	V6/V8 ENGINES	4-75
REMOTE CONTROL CABLE	10-40	ENGINE MODEL APPLICATIONS	2-74
REMOTE CONTROL CABLE - CHECKING OUTPUT	10-42	MAINTENANCE INTERVALS	2-87
TRANSOM CABLE - CHECKING PLAY	10-42	METRIC BOLTS - TYPICAL TORQUE VALUES	1-28
TRANSOM CABLE - ISOLATING PLAY	10-43	PRESSURE - VELVET	12-10
REMOVAL & INSTALLATION	10-38	STARTER	9-52
REMOTE CONTROL CABLE	10-38	STERN DRIVE MODELS - BRAVO	11-50
TRANSOM (INTERMEDIATE) CABLE	10-39	TORQUE	
SHIFT CABLE - BRAVO	11-34	ALPHA	10-54
ADJUSTMENT	11-36	BRAVO	11-49
		EFI	7-96

15-50 MASTER INDEX

TRANSMISSIONS	12-10	SWIVEL RING	14-2
3.0L ENGINES	3-21	DISASSEMBLY & ASSEMBLY	14-3
V6/V8 ENGINES	4-69	REMOVAL & INSTALLATION	14-2
TRANSMISSION IDENTIFICATION	12-10	SYSTEM DIAGNOSIS - MPI ENGINES	7-57
TUNE-UP	2-79	ECM/PCM PIN LOCATIONS	7-83
U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28	FAULT CODES	7-61
2 bbl MERCARB	6-32	GENERAL DIAGNOSTIC TESTS	7-78
4 bbl WEBER	6-32	VISUAL/PHYSICAL CHECKLIST	7-78
SPEEDOMETER	9-44	ON-BOARD DIAGNOSTIC (OBD) SYSTEM CHECKS	7-78
REMOVAL & INSTALLATION	9-44	A1 - ENGINE CRANKS BUT WILL NOT START	7-78
TESTING	9-44	A2 - MAIN POWER RELAY TEST	7-79
SPRING COMMISSIONING	2-72	A3 - FUEL SYSTEM ELECTRICAL TEST	7-79
SPRING COMMISSIONING CHECKLIST	2-72	A4 - FUEL SYSTEM DIAGNOSIS	7-79
START/STOP SWITCH	9-49	A5 - IGNITION SYSTEM TEST	7-79
TESTING	9-49	A6 - HARD START SYMPTOMS	7-79
STARTER CIRCUIT	9-18	A7 - ENGINE SURGE SYMPTOMS	7-80
DESCRIPTION & OPERATION	9-18	A8 - LACK OF POWER, SLUGGISH OR SPONGY SYMPTOMS	7-80
STARTER MOTOR	9-19	A9 - DETONATION/SPARK KNOCK SYMPTOMS	7-81
TROUBLESHOOTING	9-18	A10 - HESITATION, SAG OR STUMBLE SYMPTOMS	7-81
STARTER MOTOR	9-19	A11 - CUTS OUT OR MISSES SYMPTOMS	7-81
DESCRIPTION & OPERATION	9-19	A12 - ROUGH, UNSTABLE OR INCORRECT IDLE & STALLING SYMPTOMS	7-82
DELCO-REMY DIRECT DRIVE	9-19	A13 - POOR FUEL ECONOMY SYMPTOMS	7-82
DELCO-REMY GEAR REDUCTION	9-19	A14 - DIESELING OR RUN-ON SYMPTOMS	7-82
DISASSEMBLY & ASSEMBLY	9-22	A15 - BACKFIRE SYMPTOMS	7-82
DELCO-REMY - PG260	9-22	GENERAL INFORMATION	7-57
DELCO-REMY - PG260F1	9-24	INTERMITTENT FAULTS	7-57
DELCO-REMY - PG260G1 & PG260L	9-25	PRECAUTIONS	7-57
DELCO-REMY 14MT	9-25	TROUBLESHOOTING	7-60
PRECAUTIONS	9-19	WITHOUT A DDT/SCAN TOOL/CDS	7-60
REMOVAL & INSTALLATION	9-21	WITH A DIAGNOSTIC/SCAN TOOL/CDS	7-61
TESTING	9-21	SYSTEM DIAGNOSIS - TBI ENGINES & EARLY 2001 MPI ENGINES 7-38	
PINION CLEARANCE	9-21	DIAGNOSTIC TROUBLE CODES (DTC)	7-43
VOLTAGE DROP	9-21	CLEARING CODES	7-44
PG260 STARTER ONLY	9-21	READING CODES	7-43
TROUBLESHOOTING	9-19	CODE 14 - ENGINE COOLANT TEMPERATURE SENSOR (ECT)	7-44
BATTERY	9-19	CODE 15 - ENGINE COOLANT TEMPERATURE SENSOR (ECT)	7-44
CABLE CONNECTION	9-20	CODE 21 - THROTTLE POSITION SENSOR (TP)	7-45
CURRENT DRAW	9-21	CODE 22 - THROTTLE POSITION SENSOR (TP)	7-45
STARTER RELAY	9-20	CODE 23 - INTAKE AIR TEMPERATURE SENSOR (IAT)	7-46
STEERING CABLE		CODE 25 - INTAKE AIR TEMPERATURE SENSOR (IAT)	7-46
MANUAL STEERING	14-2	CODE 33 - MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	7-46
POWER STEERING	14-7	CODE 34 - MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP)	7-47
STEERING CABLE GUIDE TUBE	14-8	CODE 41 - IGNITION CONTROL CIRCUIT (IC)	7-47
REMOVAL & INSTALLATION	14-8	CODE 42 - IGNITION CONTROL CIRCUIT (IC)	7-48
EARLY MODEL ALPHA ONLY	14-8	CODE 43 - KNOCK SENSOR (KS)	7-48
STEERING UNIT - COMPACT HYDRAULIC SYSTEM	14-20	CODE 44 - KNOCK SENSOR (KS)	7-49
REMOVAL & INSTALLATION	14-20	CODE 45 - IGNITION COIL DRIVER	7-49
STERN DRIVE GEAR LUBE MONITOR SWITCH	9-49	CODE 51 - ECM CALIBRATION MEMORY FAILURE	7-49
STERN DRIVE UNIT - ALPHA	2-55	CODE 52 - ECM EEPROM FAILURE	7-49
CHECKING FOR WATER	2-56	CODE 61 - FUEL PRESSURE (FP) CIRCUIT	7-50
DRAIN & REFILL	2-56	CODE 62 - FUEL PRESSURE (FP) SENSOR CIRCUIT	7-50
FLUID LEVEL	2-55	DIAGNOSTIC TROUBLE CODE TEST SCHEMATICS	7-51
REMOVAL & INSTALLATION	10-3	ECM PIN LOCATIONS & SYMPTOMS CHARTS	7-53
STERN DRIVE UNIT - BRAVO	11-2	GENERAL DIAGNOSTIC TESTS	7-39
REMOVAL & INSTALLATION	11-2	ON-BOARD DIAGNOSTIC SYSTEM CHECK	7-39
STERN DRIVE UNIT - ALPHA	10-2	A1 - NO MIL OR NO DLC DATA	7-39
DESCRIPTION	10-2	A2 - MIL ON STEADY - WILL NOT FLASH DTC 12	7-40
STERN DRIVE UNIT	10-3	A3 - ENGINE CRANKS BUT WILL NOT RUN	7-40
TROUBLESHOOTING	10-2	A4 - FUEL SYSTEM DIAGNOSIS	7-40
STERN DRIVE UNIT - BRAVO	11-2	A5 - FUEL SYSTEM ELECTRICAL TEST	7-40
DESCRIPTION	11-2	A6 - EFI SYSTEM/IGNITION RELAY CHECK	7-41
STERN DRIVE UNIT	11-2	A7 - IGNITION SYSTEM CHECK	7-41
TROUBLESHOOTING	11-2	A8 - IDLE AIR CONTROL VALVE FUNCTIONAL TEST	7-41
		GENERAL DIAGNOSTIC TEST SCHEMATICS	7-41

<p>INTERMITTENT FAULTS 7-39 PRECAUTIONS 7-38 VACUUM DIAGRAMS 7-53</p> <p>TACHOMETER 9-44 REMOVAL & INSTALLATION 9-44 TESTING 9-44</p> <p>TEST EQUIPMENT 9-4 JUMPER WIRES 9-4 MULTI-METERS 9-5 TEST LIGHTS 9-5</p> <p>THE BOAT'S EXTERIOR 2-63 BELOW WATERLINE 2-63 HULL 2-63</p> <p>THERMOSTAT 2-14 REMOVAL & INSTALLATION 2-15 TESTING 2-20</p> <p>THROTTLE BODY 7-25 REMOVAL & INSTALLATION 7-25 THROTTLE CABLE ADJUSTMENT 7-30</p> <p>THROTTLE BODY ADAPTER PLATE 7-31 REMOVAL & INSTALLATION 7-31</p> <p>THROTTLE POSITION SENSOR (TP) 7-38 REMOVAL & INSTALLATION 7-38</p> <p>THUNDERBOLT V IGNITION SYSTEM 9-33 DESCRIPTION 9-33 DISTRIBUTOR 9-37 DISTRIBUTOR CAP 9-35 IGNITION OR KNOCK CONTROL MODULES 9-37 ROTOR/SENSOR WHEEL 9-36 SENSOR 9-37 TROUBLESHOOTING 9-33</p> <p>TIE BAR - MULTIPLE DRIVES 14-16 INSTALLATION 14-17 STEERING CABLE ATTACHED TO PORT ENGINE 14-17 STEERING CABLE ATTACHED TO STARBOARD ENGINE 14-17 TIE BAR LENGTH 14-16</p> <p>TIMING CHAIN & SPROCKETS/GEARS - V6/V8 4-47 REMOVAL & INSTALLATION 4-47</p> <p>TOOLS 1-19 ELECTRONIC TOOLS 1-24 HAND TOOLS 1-19 MEASURING TOOLS 1-25 OTHER COMMON TOOLS 1-22 SPECIAL TOOLS 1-23</p> <p>TOOLS & SPARE PARTS 1-12</p> <p>TORSIONAL DAMPER REMOVAL & INSTALLATION 3.0L ENGINES 3-15 V6/V8 ENGINES 4-45</p> <p>TRANSMISSION - VELVET 12-5 PRESSURE TEST 12-6 REMOVAL & INSTALLATION 12-5 VELVET 71C & 72C IN-LINE AND V-DRIVE SERIES 12-5 VELVET 5000 SERIES 12-6</p> <p>TRANSMISSION - ZF/HURTH 12-8 PRESSURE TEST 12-9 REMOVAL & INSTALLATION 12-8</p> <p>TRANSMISSION FLUID DRAINING FLUID 2-53 FLUID LEVEL 2-52 VELVET 12-2 ZF/HURTH FLUID 12-7</p> <p>TRANSMISSION FLUID TEMPERATURE SWITCH 9-49 TESTING 9-49</p>	<p>TRANSOM ASSEMBLY - ALPHA 10-37 BELL HOUSING 10-46 DESCRIPTION 10-37 EXHAUST BELLOWS 10-44 GIMBAL BEARING 10-37 GIMBAL HOUSING/TRANSOM PLATE 10-51 GIMBAL RING 10-48 SHIFT CABLE 10-38 SHIFT CUT-OUT SWITCH 10-43 U-JOINT BELLOWS 10-45</p> <p>TRANSOM ASSEMBLY - BRAVO 11-33 BELL HOUSING 11-42 DESCRIPTION 11-33 EXHAUST BELLOWS 11-36 EXHAUST TUBE 11-37 EXPLODED VIEWS 11-39 GIMBAL BEARING 11-33 GIMBAL HOUSING/TRANSOM PLATE 11-46 GIMBAL RING 11-43 SHIFT CABLE 11-34 U-JOINT BELLOWS 11-38 WATER HOSE & FITTING 11-39</p> <p>TRANSOM PLATE REMOVAL & INSTALLATION ALPHA 10-51 2001-04 BRAVO (SERIAL #OM99999 & BELOW) 11-46 2004 & LATER BRAVO (SERIAL #OW100000 & ABOVE) 11-47</p> <p>TRIM CYLINDER 13-18 DISASSEMBLY & ASSEMBLY 13-21 GENERAL INFORMATION 13-18 REMOVAL & INSTALLATION 13-20 ALPHA 13-20 BRAVO 13-20</p> <p>TRIM LIMIT SWITCH/TRIM POSITION SENDER 13-8 ADJUSTMENT 13-8 TRIM LIMIT SWITCH 13-8 TRIM POSITION SENDER w/o SMARTCRAFT 13-8 TRIM POSITION SENDER w/SMARTCRAFT 13-8 GENERAL INFORMATION 13-8 REMOVAL & INSTALLATION 13-8</p> <p>TROUBLESHOOTING ALPHA 10-2 BASIC OPERATING PRINCIPLES 1-13 BRAVO 11-2 CHARGING SYSTEM 9-10 COMBUSTION RELATED PISTON FAILURES 6-4 COMMON PROBLEMS - W/O TKS 6-4 COMPACT HYDRAULIC SYSTEM 14-18 COOLANT TEMPERATURE GAUGE 9-41 ELECTRICAL SYSTEM 9-6 ELECTRONIC SPARK TIMING SYSTEM (EST) 9-29 ENGINE OVERHEATS - CLOSED SYSTEM 8-2 ENGINE OVERHEATS - MECHANICAL 8-2 ENGINE OVERHEATS - SEAWATER SYSTEM 8-2 FUEL GAUGE 9-43 OIL PRESSURE GAUGE 9-43 POWER TRIM & TILT 13-3 PRECISION PILOT 15-34 STARTING SYSTEM 9-18 THUNDERBOLT V IGNITION SYSTEM 9-33 TKS DIAGNOSTICS 6-4 WATER IN CYLINDERS 8-2 WATER IN OIL 8-2</p>
--	---

15-52 MASTER INDEX

U-JOINT BELLOWS		
REMOVAL & INSTALLATION		
ALPHA	10-45	
BRAVO	11-38	
UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS. 9-2		
BASIC ELECTRICAL THEORY	9-2	
ELECTRICAL COMPONENTS	9-2	
TEST EQUIPMENT	9-4	
TROUBLESHOOTING THE ELECTRICAL SYSTEM	9-6	
WIRE & CONNECTOR REPAIR	9-8	
UPPER UNIT - ALPHA	10-28	
DISASSEMBLY & ASSEMBLY	10-28	
DRIVEN GEAR/DRIVESHAFT ASSEMBLY	10-33	
EXPLODED VIEWS	10-28	
U-JOINT/DRIVE GEAR ASSEMBLY	10-30	
PRE-LOAD & SHIM ADJUSTMENTS	10-35	
DRIVE (PINION) GEAR SHIMMING	10-37	
DRIVEN GEAR SHIMMING	10-36	
GENERAL INFORMATION	10-35	
UPPER DRIVESHAFT BEARING PRELOAD	10-35	
REMOVAL & INSTALLATION	10-28	
UPPER UNIT - BRAVO	11-20	
EXPLODED VIEWS	11-20	
REMOVAL & INSTALLATION	11-20	
DISASSEMBLY & ASSEMBLY	11-20	
UPPER UNIT COMPONENTS - SERIAL #0M99999 & BELOW	11-20	
UPPER UNIT COMPONENTS - SERIAL #0W100000 & ABOVE	11-25	
VACUUM GAUGE	9-44	
REMOVAL & INSTALLATION	9-45	
TESTING	9-44	
VALVE ADJUSTMENT	2-33	
VALVE COVER	3-7	
REMOVAL & INSTALLATION	3-7	
VELVET TRANSMISSIONS. 12-2		
GENERAL INFORMATION	12-2	
IDENTIFICATION	12-2	
SHIFT CABLE	12-2	
TRANSMISSION	12-5	
TRANSMISSION FLUID	12-2	
VHF-FM RADIO	1-10	
WATER (ENGINE) CIRCULATING PUMP - V6/V8	4-53	
REMOVAL & INSTALLATION	4-53	
WATER DISTRIBUTION HOUSING	8-10	
REMOVAL & INSTALLATION	8-10	
WATER HOSE & FITTING - BRAVO	11-39	
REMOVAL & INSTALLATION	11-39	
WATER TEMPERATURE SENDER	9-50	
GENERAL INFORMATION	9-50	
TESTING	9-50	
WATER TEMPERATURE SWITCH	9-51	
TESTING	9-51	
WEBER WFB 4bbl CARBURETOR 6-18		
ADJUSTMENT	6-19	
ACCELERATOR PUMP	6-19	
ACCELERATOR PUMP LEVER	6-19	
ELECTRIC CHOKE	6-19	
FLOAT LEVEL & DROP	6-20	
IDLE SPEED & MIXTURE	6-20	
PORTED VACUUM SWITCH (PVS)	6-20	
THROTTLE CABLE	6-21	
DESCRIPTION	6-18	
DISASSEMBLY & ASSEMBLY	6-21	
REMOVAL & INSTALLATION	6-18	
WHERE TO BEGIN	1-2	
WINTER STORAGE 2-69		
GENERAL INFORMATION	2-69	
PREPPING FOR STORAGE	2-69	
WINTER STORAGE CHECKLIST	2-69	
WINTER STORAGE CHECKLIST	2-69	
CARBURETED & TBI ENGINES	2-69	
ALL MPI ENGINES (EXC. 2001-05 8.1L)	2-70	
2001-05 8.1L MPI ENGINES	2-71	
WIRE & CONNECTOR REPAIR	9-8	
WIRING SCHEMATICS		
ENGINE	9-51	
POWER TRIM & TILT	13-28	
PRECISION PILOT	15-40	
SMARTCRAFT DTS (10-PIN)	15-16	
SMARTCRAFT DTS (14-PIN)	15-19	
TKS SYSTEM	6-28	
ZERO EFFORT CONSOLE MOUNT REMOTE CONTROL	15-14	
REMOVAL & INSTALLATION	15-14	
ZF/HURTH TRANSMISSIONS 12-7		
GENERAL INFORMATION	12-7	
IDENTIFICATION	12-7	
SHIFT CABLE	12-7	
TRANSMISSION	12-8	
TRANSMISSION FLUID	12-7	