

CONTENTS

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL 1-2 BOATING SAFETY 1-4 SAFETY IN SERVICE 1-11 TROUBLESHOOTING 1-11 TOOLS AND EQUIPMENT 1-15 TOOLS 1-17 FASTENERS, MEASUREMENTS AND CONVERSIONS 1-24 SPECIFICATIONS 1-25
2	ENGINE AND DRIVE MAINTENANCE	ENGINE AND DRIVE MAINTENANCE 2-2 FLUIDS AND LUBRICANTS 2-29 LUBRICATION POINTS 2-45 BOAT MAINTENANCE 2-47 WINTER STORAGE 2-51 FIRING ORDERS 2-52 SPRING COMMISSIONING 2-52 SPECIFICATIONS 2-55
3	ENGINE MECHANICAL FORD 4 CYLINDER ENGINES	ENGINE MECHANICAL 3-2 SPECIFICATIONS 3-19
4	ENGINE MECHANICAL GM 4 CYLINDER ENGINES	ENGINE MECHANICAL 4-2 EXPLODED VIEWS 4-18 SPECIFICATIONS 4-21
5	ENGINE MECHANICAL GM V6 AND V8 ENGINES	ENGINE MECHANICAL 5-2 EXPLODED VIEWS 5-35 SPECIFICATIONS 5-39
6	ENGINE MECHANICAL FORD V8 ENGINES	ENGINE MECHANICAL 6-2 EXPLODED VIEWS 6-24 SPECIFICATIONS 6-26
7	ENGINE OVERHAUL	ENGINE RECONDITIONING 7-2
8	FUEL SYSTEMS CARBURETORS	FUEL AND COMBUSTION 8-2 CARBURETED FUEL SYSTEM 8-3 ROCHESTER 2 BBL 8-5 ROCHESTER 4 BBL 8-10 HOLLEY 2300 2 BBL 8-16 HOLLEY 4150/4160/4175 4 BBL 8-22 WIRING DIAGRAMS 8-34 SPECIFICATIONS 8-37

CONTENTS

FUEL AND COMBUSTION	9-2	FUEL SYSTEMS FUEL INJECTION	9		
FORD ELECTRONIC MULTI-POINT FUEL INJECTION (MFI) SYSTEM DIAGNOSIS	9-3 9-14				
GM THROTTLE BODY FUEL INJECTION (TBI)	9-22				
GM MULTI-POINT FUEL INJECTION (MFI)	9-22				
SPECIFICATIONS	9-20				
WIRING SCHEMATICS	9-44				
DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	9-70				
FUEL FLOW DIAGRAMS	9-71				
COMPONENT LOCATIONS	9-73				
<hr/>					
UNDERSTANDING AND TROUBLESHOOTING		IGNITION AND ELECTRICAL SYSTEMS	10		
ELECTRICAL SYSTEMS	10-2				
BATTERY	10-8				
CHARGING SYSTEM	10-10				
STARTER CIRCUIT	10-19				
IGNITION SYSTEM	10-31				
BREAKER POINT IGNITION SYSTEM	10-32				
ELECTRONIC SPARK TIMING (EST) SYSTEM	10-39				
DISTRIBUTOR IGNITION (DI) SYSTEM	10-39				
PRESTOLITE INTEGRAL BREAKERLESS INDUCTIVE DISTRIBUTOR (BID) SYSTEM	10-45				
SPITFIRE/ELECTRONIC ENGINE MANAGEMENT (EMM) SYSTEM	10-49				
FORD THICK FILM INTEGRATED IGNITION SYSTEM (TFI-IV)	10-51				
INSTRUMENTS AND GAUGES	10-55				
SENDING UNITS AND SWITCHES	10-58				
WIRING DIAGRAMS	10-59				
SPECIFICATIONS	10-89				
<hr/>					
COOLING SYSTEM	11-2			COOLING SYSTEM	11
MAINTENANCE AND TESTING	11-3				
FLOW DIAGRAMS	11-9				
<hr/>					
STERN DRIVE UNIT - COBRA, KING COBRA, SP, SX, SX COBRA, DP AND DP DUOPROP MODELS	12-2	STERN DRIVE SP/SX/SX COBRA, KING COBRA AND DP/DP DUOPROP	12		
UPPER GEAR HOUSING	12-6				
LOWER GEAR HOUSING (LOWER UNIT)	12-36				
TRANSOM ASSEMBLY	12-62				
SPECIFICATIONS	12-71				
<hr/>					
SELECT (POWER) TRIM AND TILT - 1986-88 COBRA AND KING COBRA	13-2	TRIM AND TILT	13		
POWER TRIM AND TILT - 1989-98 COBRA, KING COBRA, SP(SX) AND DP	13-15				
WIRING SCHEMATICS	13-33				
<hr/>					
MANUAL STEERING SYSTEM	14-2	STEERING SYSTEMS	14		
POWER STEERING SYSTEM	14-4				
<hr/>					
MASTER INDEX	14-13	MASTER INDEX			

ACTUATOR VALVE AND CYLINDER ASSEMBLY	14-6	WIRING DIAGRAMS	8-34
ALTERNATOR	10-11	CHEMICALS	1-15
ASSEMBLY	10-18	COMBINATION MANIFOLD	4-8
CLEANING & INSPECTION	10-17	GM 2.5L/3.0L	4-8
DISASSEMBLY	10-14	COMPONENT LOCATIONS	9-73
INSPECTION	10-11	COOLANT FLOW DIAGRAMS	11-9
PRECAUTIONS	10-11	COBRA STERN DRIVE	11-9
REMOVAL & INSTALLATION	10-14	SP/DP STERN DRIVE	11-10
TESTING	10-11	2.3L FORD	11-11
ANODES (ZINCS)	2-48	2.5L/3.0L GM	11-11
INSPECTION	2-48	4.3L GM V6	11-14
SERVICING	2-48	5.0L/5.7L GM V8	11-17
AUXILIARY SHAFT	3-16	5.0L/5.8L FORD V8	11-20
BALANCE SHAFT	5-31	7.4L/8.2L GM V8	11-22
GM V6/V8	5-31	7.5L FORD V8	11-24
BASIC OPERATING PRINCIPLES	1-12	V6/V8 ENGINES (CARB) - CLOSED SYSTEM	11-25
BATTERY	10-8	V6/V8 ENGINES (EFI) - CLOSED SYSTEM	11-26
CABLES	10-10	COOLING SYSTEM	11-2
CHARGERS	2-51	DESCRIPTION & OPERATION	11-2
CHARGERS	10-9	DRAINING & FILLING	2-37
CHECKING SPECIFIC GRAVITY	2-49	DRIVE BELTS	11-3
CLEANING	2-49	FLUSHING THE SYSTEM	2-35
CONSTRUCTION	10-8	LEVEL CHECK	2-35
DUAL BATTERY INSTALLATION	10-9	MAINTENANCE AND TESTING	11-3
LOCATION	10-8	PRESSURE CAP TEST	11-3
MARINE	10-8	PRESSURE CAP	2-37
PRECAUTIONS	2-50	PRESSURE TEST	2-37
RATINGS	10-8	RAW WATER COOLING TEST	11-4
REPLACING CABLES	2-51	RAW WATER FLOW TEST	11-4
STORAGE	2-51	TROUBLESHOOTING	11-3
TERMINALS	2-50	CHARGING SYSTEM	10-10
BELTS	2-8	ALTERNATOR	10-11
ADJUSTMENT	2-11	ASSEMBLY	10-18
INSPECTION	2-8	CLEANING & INSPECTION	10-17
REMOVAL & INSTALLATION	2-12	DISASSEMBLY	10-14
ROUTING DIAGRAMS	2-10	GENERAL INFORMATION	10-10
BOAT MAINTENANCE	2-47	PRECAUTIONS	10-11
ANODES (ZINCS)	2-48	REMOVAL & INSTALLATION	10-14
BATTERIES	2-48	SYSTEM INSPECTION	10-11
INSIDE THE BOAT	2-47	TESTING	10-11
THE BOAT'S EXTERIOR	2-47	TROUBLESHOOTING	10-10
BOATING SAFETY	1-4	CYLINDER COMPRESSION	2-16
COURTESY MARINE EXAMINATIONS	1-11	CYLINDER HEAD	
EQUIPMENT NOT REQUIRED BUT RECOMMENDED	1-10	FORD 2.3L	3-17
REGULATIONS FOR YOUR BOAT	1-4	FORD V8	6-22
REQUIRED SAFETY EQUIPMENT	1-5	GM 2.5L/3.0L	4-17
BREAKER POINT IGNITION SYSTEM	10-32	GM V6/V8	5-33
DESCRIPTION	10-32	CYLINDER HEAD (CAMSHAFT) COVER	3-6
DISTRIBUTOR	10-35	FORD 2.3L	3-6
DISTRIBUTOR CAP & ROTOR	10-34	CYLINDER HEAD	
GENERAL TESTS	10-32	OVERHAUL	7-5
IGNITION COIL	10-36	CYLINDER HEAD (VALVE) COVER	
IGNITION VOLTAGE TESTS	10-33	FORD V8	6-7
TROUBLESHOOTING	10-32	GM 2.5L/3.0L	4-6
BREAKER POINTS AND CONDENSER	2-25	GM V6/V8	5-8
ADJUSTMENT - DWELL METER	2-26	DECCELERATION VALVE	8-34
ADJUSTMENT - FEELER GAUGE	2-26	DETERMINING ENGINE CONDITION	7-2
REMOVAL & INSTALLATION	2-25	DIAGNOSTIC TROUBLE CODES (DTC)	
BUY OR REBUILD?	7-3	FORD	9-19
CAMSHAFT		GM	9-48
FORD 2.3L	3-16	DIAGNOSTIC TROUBLE CODE (DTC) CHARTS	9-70
FORD V8	6-21	DISTRIBUTOR	
GM V6/V8	5-31	BID	10-47
CAMSHAFT, BEARINGS AND GEAR	4-15	BREAKER POINT	10-35
GM 2.5L/3.0L	4-15	DI	10-42
CARBURETED FUEL SYSTEM	8-3	EEM	10-50
DECCELERATION VALVE	8-34	EST	10-42
ELECTRIC FUEL PUMP	8-31	SPITFIRE	10-50
HOLLEY 2300 2 BBL	8-16	TFI-IV	10-52
HOLLEY 4150/4160/4175 4 BBL	8-22	DISTRIBUTOR AIR GAP	2-27
MECHANICAL FUEL PUMP	8-28	ECM PIN LOCATIONS	
OPERATION	8-4	FORD	9-21
ROCHESTER 2BBL	8-5	GM	9-60
ROCHESTER 4 BBL	8-10	ELECTRIC FUEL PUMP	8-31
SPECIFICATIONS	8-37	COMPONENT REPLACEMENT	8-33
TROUBLESHOOTING	8-3	DESCRIPTION	8-31

14-14 MASTER INDEX

FUEL SYSTEM CHECKS	8-33	ENGINE MECHANICAL - FORD V8	6-2
PRESSURE TEST	8-33	CAMSHAFT	6-21
REMOVAL & INSTALLATION	8-32	CYLINDER HEAD	6-22
ELECTRONIC SPARK TIMING (EST) SYSTEM	10-39	CYLINDER HEAD (VALVE) COVER	6-7
DISTRIBUTOR IGNITION (DI) SYSTEM	10-39	ENGINE	6-3
DESCRIPTION	10-39	ENGINE CIRCULATING PUMP	6-23
DISTRIBUTOR	10-42	ENGINE COUPLER/TIMING RING AND FLYWHEEL	6-16
DISTRIBUTOR CAP	10-42	ENGINE IDENTIFICATION	6-2
IGNITION COIL	10-45	EXHAUST ELBOW	6-13
IGNITION MODULE	10-42	EXHAUST HOSES (BELLOWS)	6-13
INDUCTOR	10-42	EXHAUST MANIFOLD	6-12
PICK-UP COIL	10-42	FRONT COVER AND OIL SEAL	6-20
TROUBLESHOOTING	10-39	FRONT ENGINE MOUNTS	6-6
VISUAL CHECKS		GENERAL INFORMATION	6-2
ELECTRONIC TOOLS	1-21	HYDRAULIC VALVE LIFTER	6-10
ENGINE		INTAKE MANIFOLD	6-10
FORD 2.3L	3-2	INTERMEDIATE EXHAUST PIPE	6-13
FORD V8	6-3	LOWER EXHAUST PIPE (Y-PIPE)	6-13
GM 2.5L/3.0L	4-2	OIL PAN	6-16
GM V6/V8	5-4	OIL PUMP	6-16
ENGINE AND DRIVE MAINTENANCE	2-2	REAR ENGINE MOUNTS	6-6
BELTS	2-8	REAR MAIN OIL SEAL	6-18
BREAKER POINTS AND CONDENSER	2-25	ROCKER ARMS AND PUSH RODS	6-7
CYLINDER COMPRESSION	2-16	TIMING CHAIN AND SPROCKETS	6-20
DISTRIBUTOR AIR GAP	2-27	VIBRATION DAMPER, PULLEY AND HUB	6-19
FLAME ARRESTOR	2-3	ENGINE MECHANICAL - GM 2.5L/3.0L	4-2
FUEL FILTER	2-6	CAMSHAFT, BEARINGS AND GEAR	4-15
IDLE SPEED AND MIXTURE	2-27	COMBINATION MANIFOLD	4-8
IGNITION TIMING	2-22	CYLINDER HEAD	4-17
OVERVIEW	2-2	CYLINDER HEAD (VALVE) COVER	4-6
PCV VALVE	2-29	ENGINE	4-2
SERIAL NUMBER IDENTIFICATION	2-2	ENGINE COUPLER AND FLYWHEEL	4-11
SPARK PLUG WIRES	2-22	ENGINE IDENTIFICATION	4-2
SPARK PLUGS	2-17	EXHAUST ELBOW	4-8
THERMOSTAT	2-13	EXHAUST HOSE (BELLOWS)	4-9
VALVE ADJUSTMENT	2-29	EXHAUST PIPE	4-10
ENGINE BLOCK OVERHAUL	7-16	FRONT COVER AND OIL SEAL	4-14
ENGINE CIRCULATING (WATER) PUMP	5-34	FRONT ENGINE MOUNT	4-6
FORD V8	6-23	GENERAL INFORMATION	4-2
GM V6/V8	5-34	HARMONIC BALANCER, PULLEY AND HUB	4-13
ENGINE COUPLER AND FLYWHEEL		HYDRAULIC VALVE LIFTER	4-8
FORD 2.3L	3-10	OIL FILTER BYPASS VALVE	4-11
GM 2.5L/3.0L	4-11	OIL PAN	4-10
ENGINE COUPLER/TIMING RING AND FLYWHEEL		OIL PUMP	4-11
FORD V8	6-16	REAR ENGINE MOUNTS	4-6
GM V6/V8	5-25	REAR MAIN OIL SEAL	4-11
ENGINE IDENTIFICATION		REAR MAIN OIL SEAL RETAINER	4-13
FORD 2.3L	3-2	ROCKER ARMS & PUSH RODS	4-7
FORD V8	6-2	ENGINE MECHANICAL - GM V6/V8	5-2
GM 2.5L/3.0L	4-2	BALANCE SHAFT	5-31
GM V6/V8	5-2	CAMSHAFT	5-31
ENGINE MECHANICAL - FORD 2.3L	3-2	CYLINDER HEAD	5-33
AUXILIARY SHAFT	3-16	CYLINDER HEAD (VALVE) COVER	5-8
CAMSHAFT	3-16	ENGINE	5-4
CYLINDER HEAD	3-17	ENGINE CIRCULATING (WATER) PUMP	5-34
CYLINDER HEAD (CAMSHAFT) COVER	3-6	ENGINE COUPLER/TIMING RING AND FLYWHEEL	5-25
ENGINE	3-2	ENGINE IDENTIFICATION	5-2
ENGINE COUPLER AND FLYWHEEL	3-10	EXHAUST HOSES (BELLOWS)	5-20
ENGINE IDENTIFICATION	3-2	EXHAUST MANIFOLD	5-17
EXHAUST HOSE (BELLOWS)	3-8	FRONT COVER AND OIL SEAL	5-29
EXHAUST MANIFOLD	3-7	FRONT ENGINE MOUNTS	5-7
EXHAUST PIPE	3-8	GENERAL INFORMATION	5-2
FRONT COVER	3-13	HARMONIC BALANCER, PULLEY AND HUB	5-28
FRONT ENGINE MOUNTS	3-5	HIGH RISE EXHAUST ELBOW	5-20
FRONT OIL SEALS	3-15	HYDRAULIC VALVE LIFTER	5-10
GENERAL INFORMATION	3-2	INTAKE MANIFOLD	5-12
HIGH-RISE EXHAUST ELBOW	3-7	INTERMEDIATE EXHAUST PIPE	5-20
INTAKE MANIFOLD	3-8	LOWER EXHAUST PIPE (Y-PIPE)	5-20
OIL PAN	3-9	OIL FILTER BYPASS VALVE	5-24
OIL PUMP	3-10	OIL PAN	5-21
REAR ENGINE MOUNTS	3-5	OIL PUMP	5-23
REAR MAIN OIL SEAL	3-12	REAR ENGINE MOUNTS	5-7
ROCKER ARMS AND HYDRAULIC ADJUSTERS	3-6	REAR MAIN OIL SEAL	5-27
TIMING BELT AND TENSIONER	3-13	REAR MAIN OIL SEAL RETAINER	5-27
TIMING SPROCKETS	3-15	ROCKER ARMS AND PUSH RODS	5-8

<p>TIMING CHAIN AND SPROCKETS 5-30</p> <p>WATER PUMP 5-34</p> <p>ENGINE OVERHAUL TIPS 7-3</p> <p>ENGINE RECONDITIONING 7-2</p> <p>BUY OR REBUILD? 7-3</p> <p>CYLINDER HEAD 7-5</p> <p>DETERMINING ENGINE CONDITION 7-2</p> <p>ENGINE BLOCK 7-16</p> <p>ENGINE OVERHAUL TIPS 7-3</p> <p>ENGINE PREPARATION 7-5</p> <p>ENGINE START-UP AND BREAK-IN 7-25</p> <p>ENGINE START-UP AND BREAK-IN 7-25</p> <p>EXHAUST ELBOW</p> <p>FORD V8 6-13</p> <p>GM 2.5L/3.0L 4-8</p> <p>EXHAUST HOSE (BELLOWS)</p> <p>FORD 2.3L 3-8</p> <p>FORD V8 6-13</p> <p>GM 2.5L/3.0L 4-9</p> <p>GM V6/V8 5-20</p> <p>EXHAUST MANIFOLD</p> <p>FORD 2.3L 3-7</p> <p>FORD V8 6-12</p> <p>GM V6/V8 5-17</p> <p>EXHAUST PIPE</p> <p>FORD 2.3L 3-8</p> <p>GM 2.5L/3.0L 4-10</p> <p>EXHAUST VALVE (FLAPPER)</p> <p>FORD 2.3L 3-8</p> <p>FORD V8 6-14</p> <p>GM 2.5L/3.0L 4-10</p> <p>GM V6/V8 5-21</p> <p>EXPLODED VIEWS</p> <p>FORD V8 6-24</p> <p>GM 2.5L/3.0L 4-18</p> <p>GM V6/V8 5-35</p> <p>FASTENERS, MEASUREMENTS AND CONVERSIONS 1-24</p> <p>BOLTS, NUTS AND OTHER THREADED RETAINERS 1-24</p> <p>STANDARD AND METRIC MEASUREMENTS 1-24</p> <p>TORQUE 1-24</p> <p>FIRING ORDERS 2-52</p> <p>FLAME ARRESTOR 2-3</p> <p>FLUIDS AND LUBRICANTS 2-29</p> <p>COOLING SYSTEM 2-35</p> <p>ENGINE 2-30</p> <p>FLUID DISPOSAL 2-29</p> <p>FLUSHING THE SYSTEM</p> <p>FUEL AND OIL RECOMMENDATIONS 2-29</p> <p>POWER STEERING 2-34</p> <p>POWER TRIM/TILT PUMP 2-45</p> <p>STERN DRIVE UNIT 2-41</p> <p>FORD ELECTRONIC MULTI-POINT FUEL INJECTION (MFI) 9-3</p> <p>AIR CHARGE TEMPERATURE SENSOR (ACT) 9-8</p> <p>CIRCUIT BREAKER 9-8</p> <p>CLEARING CODES 9-20</p> <p>DESCRIPTION & OPERATION 9-3</p> <p>DIAGNOSTIC TROUBLE CODES 9-18</p> <p>EEC POWER RELAY 9-9</p> <p>ELECTRONIC CONTROL ASSEMBLY (ECA) 9-9</p> <p>ENGINE COOLANT TEMPERATURE SENSOR (ECT) 9-8</p> <p>FUEL INJECTOR 9-10</p> <p>FUEL PRESSURE REGULATOR 9-10</p> <p>FUEL PUMP 9-10</p> <p>FUEL RAIL 9-11</p> <p>FUEL RESERVOIR/VAPOR SEPARATOR 9-12</p> <p>IDLE SPEED CONTROL (ISC) SOLENOID 9-12</p> <p>KNOCK SENSOR (KS) AND AMPLIFIER 9-12</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR 9-13</p> <p>PIN LOCATIONS 9-21</p> <p>READING CODES 9-19</p> <p>RELIEVING FUEL PRESSURE 9-8</p> <p>SYSTEM DIAGNOSIS 9-14</p> <p>THROTTLE BODY 9-14</p> <p>THROTTLE POSITION SENSOR (TP) 9-14</p> <p>VACUUM DIAGRAMS 9-21</p>	<p>FORD THICK FILM INTEGRATED IGNITION SYSTEM (TFI-IV) 10-51</p> <p>DESCRIPTION & OPERATION 10-51</p> <p>DISTRIBUTOR 10-52</p> <p>DISTRIBUTOR CAP 10-52</p> <p>E-CORE COIL 10-54</p> <p>STATOR 10-53</p> <p>TFI MODULE 10-55</p> <p>FRONT COVER</p> <p>FORD 2.3L 3-13</p> <p>FRONT COVER AND OIL SEAL</p> <p>FORD V8 6-20</p> <p>GM 2.5L/3.0L 4-14</p> <p>GM V6/V8 5-29</p> <p>FRONT ENGINE MOUNTS</p> <p>FORD 2.3L 3-5</p> <p>FORD V8 6-6</p> <p>GM 2.5L/3.0L 4-6</p> <p>GM V6/V8 5-7</p> <p>FUEL AND COMBUSTION</p> <p>CARBURETOR 8-2</p> <p>EFI 9-2</p> <p>FUEL AND OIL RECOMMENDATIONS 2-29</p> <p>FUEL FILTER 2-6</p> <p>FUEL FLOW DIAGRAMS 9-71</p> <p>FUEL INJECTOR</p> <p>FORD 9-10</p> <p>GM - TBI 9-27</p> <p>GM - MFI 9-27</p> <p>FUEL PRESSURE REGULATOR</p> <p>FORD 9-10</p> <p>GM 9-29</p> <p>FUEL PUMP (CARBURETOR)</p> <p>ELECTRIC 8-31</p> <p>MECHANICAL 8-28</p> <p>FUEL PUMP (EFI)</p> <p>FORD 9-10</p> <p>GM 9-30</p> <p>GIMBAL HOUSING/TRANSOM PLATE 12-66</p> <p>DISASSEMBLY & ASSEMBLY 12-67</p> <p>REMOVAL & INSTALLATION 12-66</p> <p>SHIFT CABLE SLEEVE 12-67</p> <p>GIMBAL RING 12-62</p> <p>REMOVAL & INSTALLATION 12-62</p> <p>GM THROTTLE BODY FUEL INJECTION (TBI) 9-22</p> <p>GM MULTI-POINT FUEL INJECTION (MFI) 9-22</p> <p>CIRCUIT BREAKER 9-26</p> <p>CLEARING CODES 9-48</p> <p>COOLANT COVER ASSEMBLY 9-26</p> <p>DESCRIPTION & OPERATION 9-22</p> <p>DIAGNOSTIC TEST SCHEMATICS 9-44</p> <p>DIAGNOSTIC TROUBLE CODES 9-48</p> <p>DIAGNOSTIC TROUBLE CODE SCHEMATICS 9-51</p> <p>ELECTRONIC CONTROL MODULE (ECM) 9-26</p> <p>ENGINE COOLANT TEMPERATURE SENSOR (ECT) 9-26</p> <p>FUEL INJECTORS 9-27</p> <p>FUEL METER BODY 9-28</p> <p>FUEL METER COVER 9-29</p> <p>FUEL PRESSURE REGULATOR 9-29</p> <p>FUEL PUMP 9-30</p> <p>FUEL PUMP RELAY 9-32</p> <p>FUEL RAIL 9-32</p> <p>GENERAL DIAGNOSTIC TESTS 9-40</p> <p>IDLE AIR CONTROL VALVE (IAC) 9-33</p> <p>INTAKE AIR TEMPERATURE SENSOR (IAT) 9-35</p> <p>KNOCK SENSOR (KS) 9-35</p> <p>KNOCK SENSOR MODULE 9-35</p> <p>MANIFOLD ABSOLUTE PRESSURE SENSOR (MAP) 9-35</p> <p>READING CODES 9-48</p> <p>RELIEVING FUEL PRESSURE 9-26</p> <p>SYSTEM DIAGNOSIS 9-40</p> <p>THROTTLE BODY 9-35</p> <p>THROTTLE BODY ADAPTER PLATE 9-37</p> <p>THROTTLE POSITION SENSOR (TP) 9-39</p> <p>VAPOR SEPARATOR TANK/FUEL RESERVOIR 9-39</p> <p>HAND TOOLS 1-17</p> <p>HARMONIC BALANCER, PULLEY AND HUB</p>
---	---

14-16 MASTER INDEX

GM 2.5L/3.0L	4-13	VACUUM TEST	8-31
GM V6/V8	5-28	OIL	2-30
HIGH-RISE EXHAUST ELBOW		LEVEL CHECK	2-30
FORD 2.3L	3-7	OIL & FILTER CHANGE	2-32
GM V6/V8	5-20	OIL FILTER BYPASS VALVE	
HOLLEY 2300 2 BBL	8-16	GM 2.5L/3.0L	4-11
ADJUSTMENT	8-21	GM V6/V8	5-24
ASSEMBLY	8-19	OIL PAN	
CLEANING & INSPECTION	8-19	FORD 2.3L	3-9
DISASSEMBLY	8-17	FORD V8	6-16
REMOVAL & INSTALLATION	8-16	GM 2.5L/3.0L	4-10
HOLLEY 4150/4160/4175 4 BBL	8-22	GM V6/V8	5-21
ADJUSTMENT	8-26	OIL PUMP	
ASSEMBLY	8-25	FORD 2.3L	3-10
CLEANING & INSPECTION	8-25	FORD V8	6-16
DISASSEMBLY	8-22	GM 2.5L/3.0L	4-11
REMOVAL & INSTALLATION	8-22	GM V6/V8	5-23
HOW TO USE THIS MANUAL	1-2	PCV VALVE	2-29
AVOIDING THE MOST COMMON MISTAKES	1-3	PIVOT HOUSING	12-62
AVOIDING TROUBLE	1-2	REMOVAL & INSTALLATION	12-62
CAN YOU DO IT?	1-2	POWER STEERING COOLER	14-6
DIRECTIONS AND LOCATIONS	1-2	POWER STEERING CYLINDER	14-10
MAINTENANCE OR REPAIR?	1-2	POWER STEERING PUMP	14-6
PROFESSIONAL HELP	1-3	POWER STEERING SYSTEM	14-4
PURCHASING PARTS	1-3	ACTUATOR VALVE AND CYLINDER ASSEMBLY	14-6
WHERE TO BEGIN	1-2	BLEEDING	2-34
HYDRAULIC VALVE LIFTER		DESCRIPTION	14-4
FORD V8	6-10	FLUID LEVEL	2-34
GM 2.5L/3.0L	4-8	MAINTENANCE PROCEDURES	14-4
GM V6/V8	5-10	POWER STEERING COOLER	14-6
IDLE SPEED AND MIXTURE	2-27	POWER STEERING PUMP	14-6
IGNITION SYSTEM	10-31	STEERING CABLE	14-7
APPLICATIONS	10-31	STEERING CYLINDER	14-10
IGNITION TIMING	2-22	TESTING	14-4
IMPELLER	11-4	TRIM TAB	14-11
DISASSEMBLY & ASSEMBLY	11-7	POWER TRIM AND TILT - 1989-98 COBRA, KING COBRA,	
REMOVAL & INSTALLATION	11-4	SP(SX) AND DP	13-15
INSTRUMENTS AND GAUGES	10-55	DESCRIPTION	13-15
BATTERY GAUGE	10-57	HYDRAULIC LINES & MANIFOLD	13-24
FUEL GAUGE	10-56	SERVICE PRECAUTIONS	13-23
OIL & TEMP GAUGES	10-55	SYSTEM BLEEDING	13-24
SPEEDOMETER	10-57	SYSTEM TESTING	13-24
TACHOMETER	10-57	TRIM LIMITER	13-24
INTAKE MANIFOLD		TRIM SENDER	13-25
FORD 2.3L	3-8	TRIM/TILT CYLINDER	13-26
FORD V8	6-10	TRIM/TILT PUMP ASSEMBLY	13-28
GM V6/V8	5-12	TROUBLESHOOTING	13-17
INTERMEDIATE EXHAUST PIPE		POWER TRIM/TILT SYSTEMS	
FORD V8	6-13	1986-88 COBRA AND KING COBRA	13-2
GM V6/V8	5-20	1989-98 COBRA, KING COBRA, SP(SX) AND DP	13-15
LOWER EXHAUST PIPE (Y-PIPE)		POWER TRIM/TILT PUMP	2-45
FORD V8	6-13	FLUID LEVEL	2-45
GM V6/V8	5-20	PRESTOLITE INTEGRAL BREAKERLESS INDUCTIVE	
LOWER GEAR CASE (LOWER UNIT)	12-36	DISTRIBUTOR (BID) SYSTEM	10-45
DESCRIPTION	12-36	DESCRIPTION	10-45
LOWER UNIT	12-36	DISTRIBUTOR	10-47
PROPELLER	12-60	DISTRIBUTOR CAP	10-46
LOWER GEAR HOUSING (LOWER UNIT)	12-36	IGNITION COIL	10-49
DISASSEMBLY & ASSEMBLY	12-38	PRIMARY VOLTAGE TEST	10-46
REMOVAL & INSTALLATION	12-36	SENSOR AIR GAP	10-46
LUBRICATION POINTS	2-45	TROUBLESHOOTING	10-46
GIMBAL BEARING AND U-JOINTS	2-46	VISUAL CHECKS	10-46
PROPELLER SHAFT	2-45	VOLTAGE DROP TEST	10-46
SHIFT CABLE AND TRANSMISSION LINKAGE PIVOT POINTS	2-45	PROPELLER	12-60
STEERING SYSTEM	2-46	REMOVAL & INSTALLATION	12-60
THROTTLE CABLE	2-45	RAW WATER PUMP (IMPELLER)	11-4
MANUAL STEERING SYSTEM	14-2	DISASSEMBLY & ASSEMBLY	11-7
STEERING CABLE	14-2	REMOVAL & INSTALLATION	11-4
STEERING TUBE	14-2	REAR ENGINE MOUNTS	
TRIM TAB	14-3	FORD 2.3L	3-5
MEASURING TOOLS	1-22	FORD V8	6-6
MECHANICAL FUEL PUMP	8-28	GM 2.5L/3.0L	4-6
DESCRIPTION	8-28	GM V6/V8	5-7
FUEL LINE TEST	8-31	REAR MAIN OIL SEAL	
PRESSURE TEST	8-31	FORD 2.3L	3-12
REMOVAL & INSTALLATION	8-29	FORD V8	6-18

MASTER INDEX 14-17

GM 2.5L/3.0L	4-11	METRIC BOLTS - TYPICAL TORQUE VALUES	1-26
GM V6/V8	5-27	STARTER	10-90
REAR MAIN OIL SEAL RETAINER		TORQUE	
GM 2.5L/3.0L	4-13	CARBURETOR	8-37
GM V6/V8	5-27	EFI	9-77
REGULATIONS FOR YOUR BOAT	1-4	ENGINE - FORD 2.3L	3-19
RELIEVING FUEL PRESSURE		ENGINE - FORD V8	6-26
FORD	9-8	ENGINE - GM 2.5L/3.0L	4-21
GM	9-26	ENGINE - GM V6/V8	5-39
REQUIRED SAFETY EQUIPMENT	1-5	STERN DRIVE	12-71
ROCHESTER 2 BBL	8-5	TUNE-UP	2-57
ADJUSTMENT	8-9	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-26
ASSEMBLY	8-8	VOLTAGE REFERENCE VALUES (FORD EFI)	9-20
CLEANING & INSPECTION	8-8	SPITFIRE/ELECTRONIC ENGINE MANAGEMENT (EMM) SYSTEM	10-49
DISASSEMBLY	8-5	COIL MODULE	10-50
REMOVAL & INSTALLATION	8-5	DESCRIPTION & OPERATION	10-49
ROCHESTER 4 BBL	8-10	DISTRIBUTOR	10-50
ADJUSTMENT	8-15	EEM MODULE	10-51
ASSEMBLY	8-11	KNOCK SENSOR	10-51
CLEANING & INSPECTION	8-11	SYSTEM COMPONENTS	10-50
DESCRIPTION	8-10	TIMING RING	10-51
DISASSEMBLY	8-11	TIMING SENSOR	10-51
REMOVAL & INSTALLATION	8-11	SPRING COMMISSIONING	2-52
ROCKER ARMS & HYDRAULIC ADJUSTERS		STARTER	10-20
FORD 2.3L	3-6	DISASSEMBLY & ASSEMBLY	10-24
ROCKER ARMS & PUSH RODS		PINION CLEARANCE	10-30
FORD V8	6-7	REMOVAL & INSTALLATION	10-23
GM 2.5L/3.0L	4-7	TESTING	10-22
GM V6/V8	5-8	FORD	10-22
SAFETY IN SERVICE	1-11	GM	10-22
DO'S	1-11	TROUBLESHOOTING	10-21
DON'TS	1-11	STARTER CIRCUIT	10-19
SAFETY TOOLS	1-15	DESCRIPTION AND OPERATION	10-19
SELECT (POWER) TRIM AND TILT - 1986-88 COBRA		DISASSEMBLY & ASSEMBLY	10-24
AND KING COBRA	13-2	PINION CLEARANCE	10-30
DESCRIPTION	13-2	PRECAUTIONS	10-21
SERVICE PRECAUTIONS	13-7	REMOVAL & INSTALLATION	10-23
SYSTEM BLEEDING	13-7	SOLENOID	10-30
SYSTEM TESTING	13-7	STARTER MOTOR	10-20
TRIM SENDER	13-7	TESTING	10-22
TRIM/TILT CYLINDER	13-8	FORD	10-22
TRIM/TILT PUMP ASSEMBLY	13-11	GM	10-22
TROUBLESHOOTING	13-4	TROUBLESHOOTING	10-20
SENDING UNITS AND SWITCHES	10-58	STEERING CABLE	
AUDIO WARNING SYSTEM	10-58	MANUAL	14-2
IGNITION SWITCH	10-59	POWER	14-7
OIL PRESSURE SENDING UNIT	10-58	STEERING TUBE	14-2
WATER TEMPERATURE SENDER	10-58	STERN DRIVE	2-41
SERIAL NUMBER IDENTIFICATION	2-2	CHECKING FOR WATER	2-41
ENGINE	2-2	DRAIN AND REFILL	2-42
STERN DRIVE	2-3	FLUID LEVEL	2-41
TRANSOM ASSEMBLY	2-3	REMOVAL & INSTALLATION	12-3
SHIFT MECHANISM	12-35	TRIM SENDING UNIT ADJUSTMENT	12-6
DISASSEMBLY, ASSEMBLY & SHIMMING	12-35	STERN DRIVE UNIT - COBRA, KING COBRA, SP, SX,	
REMOVAL & INSTALLATION	12-35	SX COBRA, DP AND DP DUOPROP MODELS	12-2
SOLENOID	10-30	DESCRIPTION	12-2
REMOVAL & INSTALLATION	10-30	LOWER GEAR CASE	12-36
SPARK PLUGS	2-17	SPECIFICATIONS	12-71
SPARK PLUG WIRES	2-22	STERN DRIVE UNIT	12-3
SPECIAL TOOLS	1-21	TRANSOM ASSEMBLY	12-62
SPECIFICATIONS		TROUBLESHOOTING	12-2
ALTERNATOR	10-89	UPPER GEAR HOUSING	12-6
CAPACITIES	2-63	SYSTEM DIAGNOSIS	
CARBURETOR	8-40	FORD	9-14
CARBURETOR APPLICATIONS	8-38	GM	9-40
CONVERSION FACTORS	1-25	THERMOSTAT	2-13
DRIVE MODEL APPLICATIONS	12-73	THROTTLE BODY	
ENGINE		FORD	9-14
FORD 2.3L	3-20	GM - TBI	9-35
FORD 5.0L/5.8L V8	6-27	GM - MFI	9-37
FORD 7.5L V8	6-29	TIMING BELT AND TENSIONER	
GM 2.5L/3.0L	4-22	FORD 2.3L	3-13
GM V6/V8	5-43	TIMING CHAIN AND SPROCKETS	
ENGINE APPLICATIONS	2-55	FORD V8	6-20
IGNITION SYSTEM APPLICATIONS	10-31	GM V6/V8	5-30
MAINTENANCE INTERVALS	2-64	TIMING SPROCKETS	

14-18 MASTER INDEX

FORD 2.3L	3-15	DISASSEMBLY & ASSEMBLY	12-33
TOOLS	1-17	REMOVAL & INSTALLATION	12-33
ELECTRONIC TOOLS	1-21	U-JOINT BELLOWS	12-34
HAND TOOLS	1-17	REMOVAL & INSTALLATION	12-34
MEASURING TOOLS	1-22	UNDERSTANDING AND TROUBLESHOOTING	
OTHER COMMON TOOLS	1-20	ELECTRICAL SYSTEMS	10-2
SPECIAL TOOLS	1-21	BASIC ELECTRICAL THEORY	10-2
TOOLS AND EQUIPMENT	1-15	ELECTRICAL COMPONENTS	10-2
CHEMICALS	1-15	TEST EQUIPMENT	10-4
SAFETY TOOLS	1-15	TROUBLESHOOTING	10-6
TRANSOM ASSEMBLY	12-62	WIRE AND CONNECTOR REPAIR	10-7
DESCRIPTION	12-62	UPPER GEAR HOUSING	12-6
GIMBAL HOUSING/TRANSOM PLATE	12-66	BACKLASH AND SHIM ADJUSTMENTS	
GIMBAL RING	12-62	DISASSEMBLY & ASSEMBLY	12-8
PIVOT HOUSING	12-62	REMOVAL & INSTALLATION	12-6
TRIM TAB		UPPER GEAR HOUSING	12-6
MANUAL	14-3	DESCRIPTION	12-6
POWER	14-11	SHIFT MECHANISM	12-35
TRIM/TILT SYSTEMS		UPPER GEAR HOUSING	12-6
1986-88 COBRA AND KING COBRA	13-2	U-JOINT/DRIVE SHAFT ASSEMBLY	12-33
1989-98 COBRA, KING COBRA, SP(SX) AND DP	13-15	VALVE ADJUSTMENT	2-29
TROUBLESHOOTING	1-11	FORD 2.3L	3-7
BASIC OPERATING PRINCIPLES	1-12	FORD V8	6-9
BID IGNITION	10-46	GM 2.5L/3.0L	4-7
BREAKER POINTS	10-32	GM V6/V8	5-9
CARBURETOR	8-3	VIBRATION DAMPER, PULLEY AND HUB	6-19
CHARGING SYSTEM	10-10	FORD V8	6-19
COMBUSTION RELATED PISTON FAILURES	8-4	WATER CIRCULATING PUMP	11-8
COMMON PROBLEMS (CARBURETOR)	8-3	WATER PUMP	5-34
COOLING SYSTEM	11-3	GM V6/V8	5-34
ELECTICAL SYSTEMS	10-6	WINTER STORAGE	2-51
ENGINE OVERHEATS	11-3	WINTER STORAGE CHECKLIST	2-51
EST IGNITION	10-39	WIRING DIAGRAMS	
MAINTENANCE	2-66	CARBURETOR	8-34
POWER TRIM DIAGNOSTIC	13-18	DIAGNOSTIC TESTS (GM)	9-44
SELECT TRIM DIAGNOSTIC	13-5	DTC	9-51
STARTER	10-21	EFI SYSTEM (FORD)	9-53
STARTER CIRCUIT	10-20	EFI SYSTEM (GM)	9-56
STERN DRIVE	12-2	ENGINE	10-60
WATER IN CYLINDERS	11-3	MAIN HARNESS	10-86
WATER IN OIL	11-3	TRIM/TILT	13-33
U-JOINT/DRIVE SHAFT ASSEMBLY	12-33		