

# Contents

---

<b>1</b>	<b>GENERAL INFORMATION AND BOATING SAFETY</b>	<b>1-2</b> HOW TO USE THIS MANUAL <b>1-4</b> BOATING SAFETY	<b>1-14</b> SAFETY IN SERVICE
<b>2</b>	<b>TOOLS AND EQUIPMENT</b>	<b>2-2</b> TOOLS AND EQUIPMENT <b>2-6</b> TOOLS	<b>2-13</b> FASTENERS, MEASUREMENTS AND CONVERSIONS
<b>3</b>	<b>MAINTENANCE AND TUNE-UP</b>	<b>3-2</b> ENGINE MAINTENANCE <b>3-32</b> BOAT MAINTENANCE <b>3-36</b> TUNE-UP	<b>3-41</b> WINTER STORAGE <b>3-42</b> SPRING COMMISSIONING <b>3-45</b> COMPONENT LOCATIONS
<b>4</b>	<b>FUEL SYSTEM</b>	<b>4-2</b> FUEL SYSTEM	
<b>5</b>	<b>ELECTRICAL</b>	<b>5-2</b> UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS <b>5-10</b> STARTING SYSTEM	<b>5-16</b> CHARGING SYSTEM <b>5-21</b> CONTROL PANEL <b>5-31</b> OPTIONAL EQUIPMENT <b>5-32</b> WIRING DIAGRAMS
<b>6</b>	<b>COOLING SYSTEM</b>	<b>6-2</b> COOLING SYSTEMS <b>6-11</b> RAW WATER CIRCUIT	<b>6-25</b> FRESH WATER COOLING CIRCUIT

---

# Contents

**7-2** ENGINE MECHANICAL      **7-48** ENGINE RECONDITIONING  
**7-39** EXHAUST SYSTEM

ENGINE AND  
ENGINE OVERHAUL

**7**

**8-2** TRANSMISSIONS

TRANSMISSIONS

**8**

**9-2** POWERTRAIN  
INSTALLATION      **9-14** NOISE AND VIBRATION  
DIAGNOSIS

POWERTRAIN  
INSTALLATION AND  
ALIGNMENT

**9**

**10-2** REMOTE CONTROLS

REMOTE CONTROLS

**10**

**10-9** GLOSSARY

GLOSSARY

**10-15** MASTER INDEX

MASTER INDEX

AIR FILTER 3-15  
     SERVICE 3-15  
 ALARM BUZZER 5-29  
     TESTING 5-29  
 ALTERNATOR 5-19  
     BELT TENSIONING 5-21  
     REMOVAL & INSTALLATION 5-19  
 ANODES 6-22  
     INSPECTION 6-23  
     REMOVAL & INSTALLATION 6-22  
 ANTISIPHON VALVE 6-12  
     INSPECTION 6-12  
 AVOIDING THE MOST COMMON MISTAKES 1-4  
 AVOIDING TROUBLE 1-2  
 BASIC ELECTRICAL THEORY 5-2  
     HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 5-3  
     OHM'S LAW 5-3  
 BATTERIES 3-34  
     BATTERY & CHARGING SAFETY PRECAUTIONS 3-36  
     BATTERY CHARGERS 3-36  
     BATTERY TERMINALS 3-35  
     CHECKING SPECIFIC GRAVITY 3-35  
     CLEANING 3-34  
     REPLACING BATTERY CABLES 3-36  
 BELTS 3-24  
     ADJUSTMENT 3-25  
     INSPECTION 3-24  
     REMOVAL & INSTALLATION 3-26  
**BOAT MAINTENANCE 3-32**  
**BOATING SAFETY 1-4**  
 BOLTS, NUTS AND OTHER THREADED RETAINERS 2-13  
 BUY OR REBUILD? 7-48  
 CABLES 10-3  
     ADJUSTMENT 10-4  
     INSPECTION 10-3  
     LUBRICATION 10-3  
     REPLACEMENT 10-4  
 CAMSHAFT, BEARINGS AND LIFTERS 7-33  
     REMOVAL & INSTALLATION 7-33  
 CAN YOU DO IT? 1-2  
 CHARGE LAMP 5-28  
     BULB REPLACEMENT 5-28  
     TESTING 5-28  
 CHARGING CIRCUIT 5-16  
     CIRCUIT TESTING 5-17  
     PRECAUTIONS 5-17  
**CHARGING SYSTEM 5-16**  
 CHARGING SYSTEMS 5-18  
 CHEMICALS 2-3  
     CLEANERS 2-4  
     LUBRICANTS & PENETRANTS 2-3  
     SEALANTS 2-4  
**COMPONENT LOCATIONS 3-45**  
 CONTROL CABLES (CONTROL PANEL) 5-30  
 CONTROL CABLES (ENGINE MAINTENANCE) 3-15  
     LUBRICATION 3-15  
**CONTROL PANEL 5-21**  
**COOLING SYSTEMS 6-2**  
 COURTESY MARINE EXAMINATIONS 1-14  
 CRANKCASE BREATHER 3-18  
     SERVICE 3-18  
 CRANKSHAFT PULLEY AND SEAL 7-22  
     CRANKSHAFT PULLEY SEAL REPLACEMENT 7-22  
     REMOVAL & INSTALLATION 7-22  
 CYLINDER COMPRESSION 3-37  
     CHECKING COMPRESSION 3-37  
 CYLINDER HEAD (ENGINE MECHANICAL) 7-10  
     REMOVAL & INSTALLATION 7-10

# MASTER INDEX

# MASTER INDEX

---

- CYLINDER HEAD (ENGINE RECONDITIONING) 7-51
  - ASSEMBLY 7-57
  - DISASSEMBLY 7-52
  - INSPECTION 7-52
  - REFINISHING & REPAIRING 7-56
- DETERMINING ENGINE CONDITION 7-48
  - COMPRESSION TEST 7-48
  - OIL PRESSURE TEST 7-48
- DIESEL ENGINE ADVANTAGES 7-2
- DIESEL ENGINE HISTORY 7-2
- DO'S 1-14
- DON'TS 1-14
- ELECTRIC ENGINE STOPPING DEVICE 5-31
  - REMOVAL & INSTALLATION 5-31
  - TESTING 5-31
- ELECTRICAL COMPONENTS 5-3
  - CONNECTORS 5-5
  - GROUND 5-4
  - LOAD 5-5
  - POWER SOURCE 5-3
  - PROTECTIVE DEVICES 5-4
  - SWITCHES & RELAYS 5-4
  - WIRING & HARNESSSES 5-5
- ELECTRICAL SYSTEM PRECAUTIONS 5-9
- ELECTRICAL SYSTEMS 5-10
- ENGINE ALIGNMENT 9-11
  - ADJUSTING METHOD 9-13
  - ALIGNMENT PROCEDURE 9-12
  - CENTERING THE ENGINE 9-13
- ENGINE BED (STRINGERS) 9-3
  - BED DIMENSIONS 9-4
  - CONSTRUCTION 9-4
  - ENGINE INCLINATION 9-4
  - INDENT OF ENGINE BED 9-5
- ENGINE BLOCK 7-57
  - ASSEMBLY 7-62
  - DISASSEMBLY 7-57
  - GENERAL INFORMATION 7-57
  - INSPECTION 7-58
  - REFINISHING 7-61
- ENGINE COUPLINGS 9-7
- ENGINE DRIP PANS 9-6
- ENGINE IDENTIFICATION 3-5
- ENGINE MAINTENANCE 3-2**
- ENGINE MECHANICAL 7-2**
- ENGINE MOUNTS 9-5
  - DURABILITY 9-6
  - STATIC DISTORTION 9-6
- ENGINE OIL 3-8
  - ENGINE OIL RECOMMENDATIONS 3-8
  - OIL & FILTER CHANGE 3-10
  - OIL LEVEL CHECK 3-9
- ENGINE OVERHAUL TIPS 7-49
  - CLEANING 7-49
  - REPAIRING DAMAGED THREADS 7-50
  - TOOLS 7-49
- ENGINE PREPARATION 7-51
- ENGINE REBUILDING SPECIFICATIONS 7-69
- ENGINE RECONDITIONING 7-48**
- ENGINE ROOM 9-2
  - LAYOUT 9-2
  - VENTILATION 9-2
- ENGINE START-UP AND BREAK-IN 7-66
  - BREAKING IT IN 7-66
  - KEEP IT MAINTAINED 7-66
  - STARTING THE ENGINE 7-66
- ENGINE TORQUE SPECIFICATIONS 7-67
- EQUIPMENT NOT REQUIRED BUT RECOMMENDED 1-12
  - ANCHORS 1-13
  - BAILING DEVICES 1-12
  - FIRST AID KIT 1-12
  - SECOND MEANS OF PROPULSION 1-12
  - TOOLS AND SPARE PARTS 1-13
  - VHF-FM RADIO 1-13
- EXHAUST ELBOW 7-43
  - INSPECTION 7-45
- EXHAUST MANIFOLD 7-42
  - INSPECTION 7-43
  - REMOVAL & INSTALLATION 7-42
- EXHAUST PIPES 7-39
  - EXHAUST PIPE CAUTIONS 7-40
  - MEASURING EXHAUST GAS BACKPRESSURE 7-41
  - MEASURING EXHAUST GAS TEMPERATURE 7-41
- EXHAUST SYSTEM 7-39**
- EXPANSION TANK 6-25
  - INSPECTION 6-25
- FASTENERS, MEASUREMENTS AND CONVERSIONS 2-13**
- FIRING ORDER 7-3
- FLYWHEEL 7-37
  - REMOVAL & INSTALLATION 7-37
- FRESH WATER COOLING 3-30
  - CHECKING THE HOSES 3-31
  - CHECKING THE PRESSURE CAP 3-31
  - DRAINING, FLUSHING & REFILLING 3-31
  - FLUID RECOMMENDATIONS 3-30
  - LEVEL CHECK 3-31
- FRESH WATER COOLING CIRCUIT 6-25**
- FRESH WATER COOLING CIRCUITS 6-42
- FRESH WATER PUMP 6-29
  - INSPECTION 6-30
  - REMOVAL & INSTALLATION 6-30
- FRESH-WATER COOLING 6-7
  - DESCRIPTION AND OPERATION 6-7
- FUEL (ENGINE MAINTENANCE) 3-8
- FUEL (FUEL SYSTEM) 4-3
  - ADDITIVES 4-4
  - CARBON RESIDUE 4-4
  - CETANE RATING 4-4
  - CLOUD POINT & POUR POINT 4-3
  - DIESEL FUEL GRADES 4-4
  - FLASH POINT 4-3
  - GENERAL INFORMATION 4-3
  - HEAT VALUE 4-3
  - SPECIFIC GRAVITY 4-3
  - SULFUR CONTENT 4-4
  - VISCOSITY 4-3
  - VOLATILITY 4-4
- FUEL FILTER 3-20
  - FUEL SYSTEM BLEEDING 3-23
  - REMOVAL & INSTALLATION 3-21
- FUEL FILTRATION 4-5
- FUEL INJECTION SPECIFICATIONS 4-17
- FUEL INJECTION SYSTEMS 4-35
- FUEL INJECTORS 4-25
  - DISASSEMBLY 4-32
  - REMOVAL & INSTALLATION 4-26
  - TESTING & INSPECTION 4-25

- FUEL LINES 4-24
  - INSPECTION 4-24
  - REMOVAL & INSTALLATION 4-24
- FUEL SYSTEM 4-2**
- FUEL SYSTEM BLEEDING 4-33
- FUEL TANK 4-5
  - DRAINING 4-5
  - INSPECTION 4-5
- GENERAL ENGINE SPECIFICATIONS 3-3
- GENERAL INFORMATION (TRANSMISSIONS) 8-2
- GOVERNOR 4-20
  - ADJUSTMENTS 4-23
- HAND TOOLS 2-6
  - HAMMERS 2-10
  - OTHER COMMON TOOLS 2-10
  - PLIERS 2-10
  - SCREWDRIVERS 2-10
  - SOCKET SETS 2-6
  - SPECIALTY TOOLS 2-11
  - WRENCHES 2-8
- HEADER TANK 6-33
  - INSPECTION 6-33
  - REMOVAL & INSTALLATION 6-33
- HEAT EXCHANGER 6-38
  - INSPECTION 6-39
  - REMOVAL & INSTALLATION 6-39
- HOUR METER GAUGE 5-22
  - TESTING 5-22
- HOW THE COOLING SYSTEM WORKS 6-25
  - CONTROLLING THE TEMPERATURE 6-25
  - WHAT IS COOLANT 6-25
- HOW TO USE THIS MANUAL 1-2**
- INJECTOR PUMP 4-9
  - CHECKING & ADJUSTING TIMING 4-9
  - REMOVAL & INSTALLATION 4-18
  - TESTING 4-9
- INSIDE THE BOAT 3-32
- INTAKE AIR HEATER 5-31
  - REMOVAL & INSTALLATION 5-31
  - TESTING 5-31
- INTAKE MANIFOLD 7-8
  - REMOVAL & INSTALLATION 7-8
- INTRODUCTION (ENGINE MAINTENANCE) 3-2
- INTRODUCTION (TUNE-UP) 3-36
- LIFT PUMP 4-5
  - CHECKING 4-6
  - REMOVAL & INSTALLATION 4-6
- MAINTENANCE OR REPAIR? 1-2
- MARINE TRANSMISSIONS 8-5
- MEASURING TOOLS 2-12
  - DEPTH GAUGES 2-13
  - DIAL INDICATORS 2-12
  - MICROMETERS & CALIPERS 2-12
  - TELESCOPING GAUGES 2-13
- METRIC BOLTS 2-17
- NOISE 9-14
- NOISE AND VIBRATION DIAGNOSIS 9-14**
- OIL CAPACITIES 3-12
- OIL DISPOSAL 3-14
- OIL PAN 7-21
  - REMOVAL & INSTALLATION 7-21
- OIL PRESSURE GAUGE 5-22
  - REMOVAL & INSTALLATION 5-23
  - TESTING 5-23
- OIL PRESSURE WARNING LAMP 5-28
  - BULB REPLACEMENT 5-29
  - TESTING 5-28
- OIL PUMP 7-25
  - REMOVAL & INSTALLATION 7-25
- OPTIONAL EQUIPMENT 5-31**
- PERIODIC MAINTENANCE 3-4
- POWERTRAIN ASSEMBLY 9-10
  - INSTALLATION CHECKLIST 9-10
- POWERTRAIN INSTALLATION 9-2**
- PROFESSIONAL HELP 1-3
- PROPELLER 9-8
  - DIMENSIONS 9-9
  - MATCHING 9-9
  - POSITION (APERTURE) 9-9
  - PROPELLER MATCHING PROCEDURE 9-10
- PROPELLER SHAFT 9-8
  - DIAMETER 9-8
- PURCHASING PARTS 1-3
- RAW WATER CIRCUIT 6-11**
- RAW-WATER COOLING (COOLING SYSTEMS) 6-2
  - DESCRIPTION & OPERATION 6-2
- RAW WATER COOLING (ENGINE MAINTENANCE) 3-27
  - CHECKING CIRCULATION 3-27
  - CHECKING THE RAW WATER STRAINER 3-27
  - DRAINING & FLUSHING 3-28
  - LEAVING THE ENGINE DRY 3-30
  - REFILLING WITH ANTIFREEZE 3-30
- RAW WATER COOLING CIRCUITS 6-24
- RAW WATER PUMP 6-12
  - IMPELLER INSPECTION & REPLACEMENT 6-15
  - PUMP REMOVAL & INSTALLATION 6-18
- RAW WATER STRAINER 6-11
  - INSPECTION & CLEANING 6-11
- RAW WATER THERMOSTAT 6-20
  - INSPECTION 6-21
  - REMOVAL & INSTALLATION 6-20
  - TESTING 6-22
- REAR MAIN SEAL 7-38
  - REMOVAL & INSTALLATION 7-38
- REGULATIONS FOR YOUR BOAT 1-4
  - CAPACITY INFORMATION 1-5
  - CERTIFICATE OF COMPLIANCE 1-5
  - DOCUMENTING OF VESSELS 1-4
  - HULL IDENTIFICATION NUMBER 1-5
  - LENGTH OF BOATS 1-5
  - NUMBERING OF VESSELS 1-5
  - REGISTRATION OF BOATS 1-4
  - SALES AND TRANSFERS 1-5
  - VENTILATION 1-5
  - VENTILATION SYSTEMS 1-6
- REMOTE CONTROL HEAD 10-2
  - ADJUSTMENT 10-3
  - LUBRICATION 10-3
- REMOTE CONTROLS 10-2**
- REQUIRED SAFETY EQUIPMENT 1-6
  - FIRE EXTINGUISHERS 1-6
  - PERSONAL FLOTATION DEVICES 1-8
  - SOUND PRODUCING DEVICES 1-10
  - TYPES OF FIRES 1-6
  - VISUAL DISTRESS SIGNALS 1-10
  - WARNING SYSTEM 1-8
- ROCKER ARM/SHAFTS 7-5
  - REMOVAL & INSTALLATION 7-5

# MASTER INDEX

---

- SAE BOLTS 2-18
- SAFETY IN SERVICE 1-14**
- SAFETY TOOLS 2-2
  - EYE AND EAR PROTECTION 2-2
  - WORK CLOTHES 2-2
  - WORK GLOVES 2-2
- SCUPPERS 7-42
- SEACOCK 6-12
  - INSPECTION 6-12
- SIZING THE ENGINE 9-2
- SPECIFICATIONS CHARTS**
- ENGINE REBUILDING SPECIFICATIONS 7-69
- ENGINE TORQUE SPECIFICATIONS 7-67
- FUEL INJECTION SPECIFICATIONS 4-17
- GENERAL ENGINE SPECIFICATIONS 3-3
- METRIC BOLTS 2-17
- OIL CAPACITIES 3-12
- PERIODIC MAINTENANCE 3-4
- SAE BOLTS 2-18
- SPRING COMMISSIONING 3-42**
- SPRING COMMISSIONING CHECKLIST 3-43
- STANDARD AND METRIC MEASUREMENTS 2-15
- STARTER MOTOR 5-13
  - REMOVAL & INSTALLATION 5-15
  - TESTING 5-13
- STARTING CIRCUIT 5-10
  - CIRCUIT TESTING 5-13
  - PRECAUTIONS 5-13
- STARTING SYSTEM 5-10**
- STARTING SYSTEMS 5-12
- SWITCHES 5-30
  - TESTING 5-30
- TACHOMETER 5-24
  - REMOVAL & INSTALLATION 5-25
  - TESTING 5-25
- TEST EQUIPMENT 5-6
  - JUMPER WIRES 5-6
  - MULTIMETERS 5-7
  - TEST LIGHTS 5-6
- TESTING 5-8
  - OPEN CIRCUITS 5-8
  - RESISTANCE 5-8
  - SHORT CIRCUITS 5-9
  - VOLTAGE 5-8
  - VOLTAGE DROP 5-8
- THE BOAT'S EXTERIOR 3-33
  - BELOW WATERLINE 3-33
- THE DIESEL FOUR STROKE CYCLE 7-2
  - COMPRESSION STROKE 7-2
  - EXHAUST STROKE 7-3
  - INTAKE STROKE 7-2
  - POWER STROKE 7-3
- THERMOSTAT 6-25
  - INSPECTION 6-29
  - REMOVAL & INSTALLATION 6-26
  - TESTING 6-29
- TIMING GEAR COVER 7-23
  - REMOVAL & INSTALLATION 7-23
- TIMING GEARS 7-28
  - REMOVAL & INSTALLATION 7-28
- TOOLS 2-6**
- TOOLS AND EQUIPMENT 2-2**
- TORQUE 2-15
- TRANSMISSION ASSEMBLY 8-3
  - ADJUSTMENTS 8-6
  - OVERHAUL 8-6
  - REMOVAL AND INSTALLATION 8-3
- TRANSMISSION OIL 3-12
  - OIL CHANGE 3-14
  - OIL LEVEL CHECK 3-12
- TRANSMISSION TYPES 8-2
  - ANGLE DRIVE 8-3
  - STRAIGHT DRIVE 8-2
  - V-DRIVE 8-3
- TRANSMISSIONS 8-2**
- TROUBLESHOOTING CHARTS**
- CHARGING SYSTEMS 5-18
- ELECTRICAL SYSTEMS 5-10
- FRESH WATER COOLING CIRCUITS 6-42
- FUEL INJECTION SYSTEMS 4-35
- MARINE TRANSMISSIONS 8-5
- RAW WATER COOLING CIRCUITS 6-24
- STARTING SYSTEMS 5-12
- TURBOCHARGERS 7-48
- TROUBLESHOOTING ELECTRICAL SYSTEMS 5-8
- TUNE-UP 3-36**
- TUNE-UP SEQUENCE 3-37
- TURBOCHARGER (EXHAUST SYSTEM) 7-46
  - INSPECTION 7-47
  - REMOVAL & INSTALLATION 7-46
- TURBOCHARGERS (ENGINE AND ENGINE OVERHAUL) 7-48
- UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS 5-2**
- VALVE (ROCKER) COVER 7-3
  - DECOMPRESSION LEVERS 7-4
  - REMOVAL & INSTALLATION 7-3
- VALVE ADJUSTMENT 3-37
  - GM/HM SERIES ENGINES 3-39
  - JH SERIES ENGINES 3-40
  - QM SERIES ENGINES 3-39
- VIBRATION 9-14
- WATER SEPARATOR 3-20
- WATER TEMPERATURE GAUGE 5-23
  - REMOVAL & INSTALLATION 5-24
  - TESTING 5-23
- WATER TEMPERATURE WARNING LAMP 5-26
  - BULB REPLACEMENT 5-27
  - REMOVAL & INSTALLATION 5-27
  - TESTING 5-26
- WHERE TO BEGIN 1-2
- WINTER STORAGE 3-41**
- WINTER STORAGE CHECKLIST 3-41
- WIRE AND CONNECTOR REPAIR 5-9
- WIRING DIAGRAMS 5-32**