

TABLE OF CONTENTS

1 DESCRIPTION AND OPERATION

BRIEF HISTORY	1-1
PRINCIPLES OF OPERATION	1-2
Axial Flow	1-2
Mixed Flow	1-3
ENGINE & JET DRIVE	1-3
IMPELLERS	1-4
Cavitation Burns	1-5
Cooling Water	
& Bilge Hoses	1-5
Bilge Breather Fitting	1-6
REPLACEMENT PARTS	1-7
DEBRIS REMOVAL	
AND ENGINE OVERHEATING	1-7
REVERSE CAPABILITY	1-7
TEST TANKS	1-8
SPECIAL FEATURES	1-9
RPM Limiter	1-9
Throttle Opening Limiter	1-9
Self-Circling Mode	1-10

2 SAFETY

INTRODUCTION	2-1
MINIMUM LEGAL REQUIREMENTS	2-2
Personal Flotation Devices	
(PFDs)	2-2
Bells, Horns, & Whistles	2-3
Fire Extinguishers	2-4
Visual Distress Signals	2-4
REGISTRATION OF CRAFT	2-5
SAFETY PRACTICES	2-5
BOATING ACCIDENT REPORTS	2-8
SECURITY	2-8

3 TUNING

INTRODUCTION	3-1
TUNE-UP SEQUENCE	3-1
COMPRESSION CHECK	3-2
SPARK PLUG INSPECTION	3-2
BROKEN REED	3-3
ELECTRICAL POWER SUPPLY	3-4
CARBURETOR ADJUSTMENT	3-5

FUEL PUMPS	3-7
CRANKING MOTOR SYSTEM	3-7
JET PUMP	3-8
MODIFYING FOR PERFORMANCE	3-8

4 MAINTENANCE

INTRODUCTION	4-1
After Use Tasks	4-2
Cooling System Flushing	4-3
Controlling Corrosion	4-3
Pump Impeller	4-3
SERIAL NUMBERS	4-4
LUBRICATION	4-4
Lubrication Chart	4-6
INSPECTION AND SERVICE	4-7
IMPELLER CLEARANCE	4-9
PRE-SEASON PREPARATION	4-11
SUBSTANCES	4-13
FIBERGLASS HULLS	4-14
SUBMERGED ENGINE	4-14
WINTER STORAGE	4-16
PRE-SEASON CHECK	4-17

5 TROUBLESHOOTING

INTRODUCTION	5-1
Engine	5-2
Cranking System	5-2
Ignition	5-2
Compression Test	5-3
MECHANICAL ENGINE PROBLEMS	5-4
FUEL SYSTEM PROBLEMS	5-5
IGNITION SYSTEM FAULTS	5-7
CRANKING SYSTEM FAILURES	5-9
Cranking Motor Relay	5-12
CHARGING SYSTEM	
MALFUNCTIONS	5-15
TROUBLESHOOTING CHARTS	
Engine Fails to Start	5-17
Engine Stops w/o Cause	5-18
Engine Misfires	5-19
Loss of Engine Power	5-20
Unexplained Noises	5-21
Jet Pump Problems	5-22

6 FUEL

INTRODUCTION	6-1
GENERAL CARBURETOR INFORMATION	6-1
Diaphragm Carburetors	6-1
Fuel/Oil Mixture	6-4
Air/Fuel Mixture	6-4
Throttle & Choke Valves	6-5
Engine Revolution Limiter	6-5
FUEL PUMP	6-6
FUEL IN SYSTEM	6-6
TROUBLESHOOTING	6-7
CARBURETOR MODELS	6-9
Mikuni Carburetor	6-9
Keihin Carburetor	6-10
SERVICE MIKUNI CARBURETOR	6-10
Removal & Disassembling	6-10
Cleaning & Inspecting	6-17
Assembling	6-19
Installation	6-23
Adjustments	6-25
SERVICE KEIHIN CARBURETOR	6-28
Removal & Disassembling	6-29
Cleaning & Inspecting	6-33
Assembling	6-35
Installation	6-38
Adjustments	6-40
FUEL PUMP	6-44
Theory of Operation	6-44
Pressure Check	6-44
Volume Check	6-45
SERVICE FUEL PUMP	6-46
Removal & Disassembling	6-46
Cleaning & Inspecting	6-48
Assembling & Installation	6-48
OIL INJECTION	6-49
Oil Mixture	6-49
System Components	6-49
Troubleshooting	6-51

7 IGNITION

INTRODUCTION AND CHAPTER COVERAGE	7-1
SPARK PLUG EVALUATION	7-1
CDI (CAPACITOR DISCHARGE IGNITION) & CHARGING SYS.	7-3
Description & Operation	7-4
Troubleshooting	7-5
TESTING COMPONENTS	7-7
Resistance Table	
Four Lead CDI Igniter	7-13
Resistance Table	
JetMate Only	7-14

CHARGING CIRCUIT	7-16
Description & Operation	7-16
Testing Charging Coil	7-16
Resistance Table	
3-Lead CDI Igniter	7-18
Testing Components	7-21
Resistance Table	
Rectifier/Regulator	
440 & 550 Series	7-23
Resistance Table	
Rectifier/Regulator	
650 Series Except JetMate	7-25
Resistance Table	
Rectifier/Regulator	
JetMate Only	7-26
FLYWHEEL & MAGNETO SERVICE	7-27
"Pulling" Flywheel	7-28
Magneto Assy. Removal	7-31
Cleaning & Inspecting	7-32
Assembling & Installation	7-33
IGNITION TIMING ADJUSTMENTS	7-37
Dynamic Timing Check	7-39
Closing Tasks	7-41

8 ENGINE

INTRODUCTION AND CHAPTER ORGANIZATION	8-1
TWO-CYCLE ENGINE	
DESCRIPTION & OPERATION	8-2
REMOVAL & DISASSEMBLING	8-4
Cranking Motor Removal	8-10
"Pulling" the Flywheel	8-11
Magneto Assembly Removal	8-13
Block Disassembling	8-14
ASSEMBLING	8-21
Exploded Drawings	8-22
Piston Installation	8-30
Reed Block Installation	8-32
Cylinder Head Installation	8-33
Flywheel Installation	8-36
Cranking Motor Installation	8-39
ENGINE INSTALLATION	8-41
Alignment	8-41
CLEANING & INSPECTING	8-46
Connecting Rod Service	8-49
Piston Service	8-49
Reed Block Service	8-47
Cylinder Block Service	8-53
Piston Clearance	8-54
Honing Cylinder Walls	8-54
Block & Head Warpage	8-56
SUBSTANCES	8-57

9 ELECTRICAL

INTRODUCTION	9-1
BATTERIES	9-1
Personal Watercraft Batteries	9-1
Battery Construction	9-1
Battery Ratings	9-2
Battery Installation	9-2
Cleaning	9-3
Sulfation	9-3
Filling the Battery	9-3
Battery Testing	9-4
Reading Hydrometer	9-5
Charging	9-6
Jumper Cables	9-7
TACHOMETER	9-7
ELECTRICAL SYSTEM	
GENERAL INFORMATION	9-8
Charging Circuit	9-8
Cranking Motor Circuit	9-8
CRANKING MOTOR	
CIRCUIT SERVICE	9-9
Description	9-9
Troubleshooting	9-11
Testing Components	9-11
CRANKING MOTOR SERVICE	9-15
Description	9-15
Removal	9-16
Disassembling	9-17
Cleaning & Inspecting	9-20
Testing Motor Parts	9-23
Assembling	9-25
Installation	9-27
TESTING OTHER	
ELECTRICAL COMPONENTS	9-30
Start Button	9-30
Interlock Switch	9-30
Stop Switch	9-31
Controller	9-32
Electric Bilge Pump	9-32
Blower Fan	9-33
Temperature Warning Sys.	9-33

10 JET PUMP

INTRODUCTION	10-1
IMPELLERS	10-3
Cavitation Burns	10-3
Cooling Water and Bilge Hoses	10-4

IMPELLER CLEARANCE	10-5
JET PUMP SERVICE	10-6
Special Tools	10-6
Removal	10-7
Disassembling	10-10
Cleaning & Inspecting	10-16
Exploded Drawings	10-17
Assembling	10-22
Shimming Procedures	10-23
Impeller Installation	10-25
Pump Installation	10-29
BEARING HOUSING SERVICE	10-32
Special Tools	10-32
Removal	10-32
Disassembling	10-33
Cleaning & Inspecting	10-35
Assembling	10-35
Exploded Drawings	10-36

11 CONTROL ADJUSTMENTS

INTRODUCTION	11-1
STEERING CABLE ADJUSTMENT	
All Except JetMate and SC	11-1
STEERING CABLE ADJUSTMENT	
JetMate and SC	11-2
REVERSE CABLE ADJUSTMENT	11-3

APPENDIX

METRIC CONVERSION TABLE	A-1
ENGINE SPECIFICATIONS AND TUNE-UP ADJUSTMENTS	A-2
WIRE IDENTIFICATION DWGS.	
All 300 Series Engines	A-8
All 440 Series Engines and 550 Series Engines -- 1991 and on	A-9
550 Series Engines -- prior to 1991	A-10
Typical 650 Series Engine -- except JF 650, JetMate and SC	A-11
JF 650 Series Engine	A-12
JetMate and SC	A-13