

TABLE OF CONTENTS

1 DESCRIPTION AND OPERATION

BRIEF HISTORY	1-1
PRINCIPLE OF OPERATION	1-4
Axial Flow	1-4
Mixed Flow	1-4
ENGINE & JET DRIVE	1-5
IMPELLERS	1-6
REPLACEABLE PARTS	1-7
DEBRIS REMOVAL AND	
ENGINE OVERHEATING	1-7
REVERSE CAPABILITY	1-8
TEST TANKS	1-8
THROTTLE LIMITER	1-9

2 SAFETY

INTRODUCTION	2-1
LEGAL REQUIREMENTS	2-2
Personal Flotation Devices	2-2
Bells, Horns, & Whistles	2-3
Fire Extinguishers	2-4
Visual Distress Signals	2-4
LEGAL REGISTRATION	2-5
SAFETY PRACTICES	2-5
Full Throttle Operation	2-5
Jumping Waves	2-5
Alcohol & Substance Use	2-6
Age Restrictions	2-6
Speed Restrictions	2-6
Operation at Night	2-6
Shallow Water Operation	2-6
Engine Compartment	
Ventilation	2-7
Flame Arrestors	2-7
Fuel System	2-7
Taking on Fuel	2-7
Excessive Noise	2-8
Automotive Replacement	
Parts	2-8
Overloading	2-8
BOATING ACCIDENT REPORTS	2-8
SECURITY	2-8

3 TUNING

INTRODUCTION	3-1
TUNE-UP SEQUENCE	3-1
COMPRESSION CHECK	3-2
SPARK PLUG INSPECTION	3-3
ELECTRICAL POWER SUPPLY	3-4
Filling the Battery	3-4
Jumper Cables	3-5
CARBURETOR ADJUSTMENT	3-5
Low Speed & Idle Mixture	3-5
High Speed Screw	3-6
FUEL PUMPS	3-6
CRANKING MOTOR & SOLENOID	3-7
Cranking Motor Test	3-7
Solenoid Test	3-7
JET PUMP	3-7
Gate Position	3-8
Impeller	3-8
MODIFYING FOR HIGHER	
PERFORMANCE	3-8

4 MAINTENANCE

INTRODUCTION	4-1
After Use Tasks	4-2
Controlling Corrosion	4-3
Pump Impeller	4-3
SERIAL NUMBERS	4-4
EMERGENCY TETHER	4-5
LUBRICATION — COMPLETE UNIT	4-6
Throttle Cable	4-6
Steering Cable	4-8
Fuel/Oil Mixture	4-8
INSPECTION & SERVICE	4-9
Fuel Check Valve	4-9
Fuel Filler Cap	4-9
Inspection — Oil Injection	4-10
Water Separator Filter	4-10
Drain Plug	4-10
Rubber Coupler Inspection	4-11
PRE-SEASON PREPARATION	4-12

4 MAINTENANCE (CONTINUED)

SEALANTS, ADHESIVES, LUBRICANTS & FUEL STABILIZERS	4-14
Sealant & Adhesives	4-15
Lubricants	4-15
Fuel Stabilizer	4-15
FIBERGLASS HULLS	4-16
Cleaning, Waxing, and Polishing	4-16
SUBMERGED ENGINE SERVICE	4-16
Salt Water Submersion	4-17
Fresh Water Submersion	4-17
WINTER STORAGE	4-18
PRE-SEASON CHECK	4-19

5 TROUBLESHOOTING

INTRODUCTION	5-1
Engine Troubleshooting	5-1
Troubleshooting Check	5-2
Cranking System Test	5-2
Ignition System Test	5-2
Compression Test	5-3
MECHANICAL ENGINE PROBLEMS	5-4
Twisted Crankshaft	5-4
Engine Noises	5-4
FUEL SYSTEM	5-5
Engine Surge	5-6
Rough Engine Idle	5-6
IGNITION SYSTEM	5-6
SPARK PLUGS	5-7
Correct Color	5-7
Overheating	5-8
Rich Mixture	5-8
Too Cool	5-8
Fouled	5-9
Carbon Deposits	5-9
CRANKING SYSTEM	5-9
Battery Test	5-9
Cable Connection Test	5-9
Starter Relay Test or Solenoid Test	5-10
Circuit Resistance	5-10
Voltage Tests	5-10
CHARGING SYSTEM	5-12
TROUBLESHOOTING CHARTS	5-12

6 FUEL

INTRODUCTION	6-1
GENERAL CARBURETION INFO.	6-1
Diaphragm Carburetors	6-1
Fuel/Oil Mixture	6-2
Air/Fuel Mixture	6-3

FUEL PUMP	6-3
FUEL SYSTEM	6-4
Leaded Gasoline	6-4
Removing Fuel from System	6-4
TROUBLESHOOTING	6-5
Fuel Problems	6-5
"Sour" Fuel	6-5
Choke Problems	6-5
Rough Engine Idle	6-6
Excessive Fuel Consumption	6-6
Engine Surge	6-6
CARBURETOR MODELS	6-6
TYPE "A" CARBURETOR	6-7
Removal & Disassembling	6-7
Cleaning & Inspecting	6-13
Assembling	6-15
Low Speed & Idle Mixture Adjustment	6-21
Choke Cable Adjustment	6-22
Throttle Cable Adjustment	6-22
TYPE "B" CARBURETOR	6-23
Removal & Disassembling	6-23
Cleaning & Inspecting	6-30
Assembling	6-32
Low Speed & Idle Mixture Adjustment	6-40
High Speed Adjustment	6-40
Choke Cable Adjustment	6-40
Throttle Cable Adjustment	6-41
OIL INJECTION	6-41
Oil Mixture	6-41
Main Oil Tank	6-42
Sub Oil Tank	6-42
Oil Injection Pump	6-42
System Inspection	6-42
Troubleshooting	6-42
Purging Air from System	6-44

7 IGNITION

INTRODUCTION AND CHAPTER COVERAGE	7-1
SPARK PLUG EVALUATION	7-2
CDI (CAPACITOR DISCHARGE IGNITION)	7-4
Description & Operation	7-4
Troubleshooting CDI System	7-5
TESTING YAMAHA & JET-N-CAT IGNITION COMPONENTS	7-6
Pulser Coil Test	7-8
Charge Coil Test	7-8
Lighting Coil Test	7-8
Primary Winding Coil Test	7-9
Secondary Winding Coil Test	7-9
CDI Unit Resistance Test	7-9
Rectifier/Regulator Test	7-11

YAMAHA AND JET-N-CAT FLYWHEEL & STATOR PLATE SERVICE	7-11
"Pulling" Flywheel	7-12
Cleaning & Inspecting	7-16
Assembling & Installation	7-17
CUYUNA IGNITION SERVICE	7-21
"Pulling" Flywheel	7-22
Testing Cuyuna Ignition Components	7-25
Cleaning & Inspecting	7-29
Assembling & Installation	7-31
Timing Procedure	7-35

8 ENGINE

INTRODUCTION AND CHAPTER ORGANIZATION	8-1
TWO-CYCLE ENGINE — DESCRIPTION & OPERATION	8-2
Actual Operation	8-2
Timing Two-Stroke Engines	8-3
YAMAHA 500 AND 650 ENGINES	8-3
YAMAHA 500 AND 650, ALSO JET-N-CAT SERVICE	8-3
Preliminary Tasks	8-3
Disassembling	8-4
Muffler & Exhaust	8-5
Head Removal	8-9
Crankcase Removal	8-12
Cleaning & Inspecting	8-45
Assembling & Installation	8-17
Pistons, Rings, & Rods	8-17
Crankcase	8-20
Head Installation	8-24
Muffler & Exhaust	8-24
Engine Installation	8-30
Engine Alignment	8-30
Closing Tasks	8-31
Break-in Procedures	8-31
CUYUNA ENGINE SERVICE	8-32
Preliminary Tasks	8-32
Disassembling	8-33
Intake Manifold	8-33
Cylinder Head	8-34
Pistons, Rings, & Rods	8-34
Crankcase Separation	8-36
Cleaning & Inspecting	8-45
Assembling	8-37
Crankcase	8-37
Pistons, Rings, & Rods	8-39
Cylinder Head	8-42
Engine Installation	8-43
Closing Tasks	8-44
Break-In Procedures	8-44

CLEANING & INSPECTING	8-45
Reed Block Service	8-45
Exhaust Cover	8-45
Bleed System	8-46
Crankshaft Service	8-46
Connecting Rod Service	8-49
Piston Service	8-49
Ring End Gap	8-51
Ring Side Clearance	8-52
Cylinder Block Service	8-53
Honing Cylinder Walls	8-55
Block & Head Warpage	8-56
SEALANTS, ADHESIVES, LUBRICANTS, AND FUEL STABILIZERS	8-57

9 ELECTRICAL

INTRODUCTION	9-1
BATTERIES	9-1
Construction	9-1
Ratings	9-2
Installation	9-2
Service	9-2
Cleaning	9-3
Testing	9-3
Charging	9-5
Installation	9-6
Jumper Cables	9-6
Storage	9-6
TACHOMETER	9-7
ELECTRICAL SYSTEM	
GENERAL INFORMATION	9-7
Charging Circuit	9-7
Cranking Motor Circuit	9-8
CHARGING CIRCUIT SERVICE	9-8
CRANKING MOTOR CIRCUIT SERVICE	9-8
Theory of Operation	9-8
Faulty Symptoms	9-9
Maintenance	9-9
CRANKING MOTOR TROUBLESHOOTING	9-10
CRANKING MOTOR SERVICE	9-12
Description	9-12
Removal	9-12
Disassembling	9-14
Cleaning & Inspecting	9-16
Testing Motor Parts	9-17
Turning Commutator	9-17
Negative Brush	9-18
Assembling	9-19
Installation	9-20
TESTING OTHER ELECTRICAL COMPONENTS	9-21

10 JET PUMP

INTRODUCTION	10-1
Mixed Flow Pump Identification	10-1
Principles of Mixed Flow Operation	10-2
Axial Flow Pump Identification	10-2
Principles of Axial Flow Operation	10-2
MIXED FLOW PUMP SHIMMING	10-3
JET PUMP SERVICE -- All	
YAMAHA & JET-N-CAT ONLY	10-4
Removal	10-4
Disassembling	10-5
Impeller Removal	10-6
Impeller Shaft Removal	10-7
Cleaning & Inspecting	10-9
Assembling	10-13
Installation	10-17
INTERMEDIATE HOUSING	
YAMAHA & JET-N-CAT ONLY	10-18
Removal	10-19
Disassembling	10-19
Cleaning & Inspecting	10-21
Assembling	10-21
PUMP SHIMMING	
WETJET, FAZER, & FAZE II	10-24
PUMP SERVICE	
WETJET, FAZER, & FAZE II	10-24
Disassembling	10-25
Cleaning & Inspecting	10-29
Assembling	10-29
HAWK JET PUMP SERVICE	
AQUA-JET, SCRAM JET, AND SOS TIDERIDER	10-33
Removal	10-34
Disassembling	10-34

Cleaning & Inspecting	10-40
Assembling	10-41
Reverse Gate Adjustment	10-50

11 CONTROL ADJUSTMENTS

INTRODUCTION	11-1
ADJUSTMENTS	11-1
Throttle Lever	11-1
Choke Cable	11-1
Reverse Cable	11-1
Steering Cable	11-3

APPENDIX

METRIC CONVERSION CHART	A-1
ENGINE SPECIFICATIONS AND TUNE-UP ADJUSTMENTS	A-2
WIRE IDENTIFICATION DWGS.	
All Yamaha Units	A-4
Aqua-Jet, Scram Jet, SOS Tiderider, WetJet, Fazer, & Faze II -- all with Cuyuna Engine -- Serial Number 25748 & below	A-5
Aqua-Jet, Scram Jet, SOS Tiderider, WetJet, Fazer, & Faze II -- all with Cuyuna Engine -- Serial Number 25749 to 26982	A-6
Aqua-Jet, Scram Jet, SOS Tiderider, WetJet, Fazer, & Faze II -- all with Cuyuna Engine -- Serial Number 26983 and on	A-7