

# CONTENTS

---

## 1

### GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-18
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
SPECIFICATIONS	1-27

---

## 2

### MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
ENGINE MAINTENANCE	2-7
BOAT MAINTENANCE	2-57
TUNE-UP	2-60
VALVE CLEARANCE	2-69
TIMING & SYNCHRONIZATION	2-86
STORAGE	2-121
CLEARING A SUBMERGED MOTOR	2-125
SPECIFICATIONS	2-126

---

## 3

### FUEL SYSTEMS

FUEL SYSTEM BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-12
ELECTRONIC FUEL INJECTION (EFI/PGM-FI)	3-48
SPECIFICATIONS	3-132

---

## 4

### IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING AND TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING CIRCUIT	4-41
STARTING CIRCUIT	4-62
WARNING SYSTEM	4-84

---

## 5

### LUBRICATION & COOLING

LUBRICATION SYSTEM	5-2
COOLING SYSTEM	5-12
SPECIFICATIONS	5-30

## CONTENTS

POWERHEAD ENGINE RECONDITIONING POWERHEAD BREAK-IN	6-2 6-125 6-143	<b>POWERHEAD</b>	<b>6</b>
GEARCASE TROUBLESHOOTING JET DRIVE GEARCASE	7-2 7-4 7-15	<b>LOWER UNIT</b>	<b>7</b>
MANUAL TILT TRIM/TILT SYSTEMS DESCRIPTION & OPERATION GAS ASSISTED TILT POWER TRIM & TILT TROUBLESHOOTING	8-2 8-2 8-3 8-3 8-5 8-7	<b>TRIM &amp; TILT SYSTEMS</b>	<b>8</b>
DESCRIPTION & OPERATION REMOTE CONTROL BOX TROUBLESHOOTING TILLER HANDLE	9-2 9-2 9-3 9-8	<b>REMOTE CONTROLS</b>	<b>9</b>
HAND REWIND STARTERS	10-2	<b>HAND REWIND STARTER</b>	<b>10</b>
WIRING DIAGRAMS	11-2	<b>WIRING DIAGRAMS</b>	<b>11</b>
MASTER INDEX	11-82	<b>MASTER INDEX</b>	

AIR INTAKE SILENCER .....	3-86	BF175A/BF200A/BF225A & BF250A MOTORS .....	3-89	BF175A/BF200A/BF225A & BF250A MOTORS .....	6-91
REMOVAL & INSTALLATION .....	3-86	<b>CARBURETED FUEL SYSTEM</b> .....	<b>3-12</b>	CARBURETOR .....	3-16
BF40D/BF50D & BF60A MOTORS .....	3-86	CARBURETOR .....	3-16	DESCRIPTION & OPERATION .....	3-13
BF75D/BF90D MOTORS .....	3-87	FUEL PUMP .....	3-45	TROUBLESHOOTING .....	3-13
BF115A/BF130A MOTORS .....	3-88	CARBURETOR .....	3-16	CLEANING & INSPECTION .....	3-43
BF115D/BF135A/BF150A MOTORS .....	3-89	SERVICE .....	3-16	BF2D/BF2.3D MOTORS .....	3-16
BF175A/BF200A/BF225A & BF250A MOTORS .....	3-89	BF5A MOTORS .....	3-19	BF8A MOTORS .....	3-21
ALTERNATOR (115 HP & LARGER EFI) .....	4-53	BF15A MOTORS .....	3-23	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	3-26
OVERHAUL & CHECKING .....	4-54	25-90 HP MOTORS .....	3-30	CARBURETOR PILOT SCREW .....	2-87
REMOVAL & INSTALLATION .....	4-53	<b>CHARGING CIRCUIT</b> .....	<b>4-41</b>	ALTERNATOR (115 HP AND LARGER EFI) .....	4-53
ALTERNATOR DRIVE BELTS .....	2-53	BATTERY CHARGE COIL/STATOR .....	4-46	DESCRIPTION & OPERATION .....	4-41
INSPECTION & ADJUSTMENT .....	2-54	RECTIFIER .....	4-55	REGULATOR/RECTIFIER .....	4-56
REMOVAL & INSTALLATION .....	2-55	TROUBLESHOOTING .....	4-42	CHEMICALS .....	1-17
ANCHORS .....	1-10	CLEANERS .....	1-18	LUBRICANTS & PENETRANTS .....	1-17
ANODES (ZINCS) .....	2-43	LUBRICANTS & PENETRANTS .....	1-17	SEALANTS .....	1-17
INSPECTION .....	2-44	<b>CLEARING A SUBMERGED MOTOR</b> .....	<b>2-125</b>	COMPASS .....	1-10
LOCATION & GENERAL .....	2-43	COMPASS .....	1-10	INSTALLATION .....	1-11
SERVICING .....	2-44	INSTALLATION .....	1-11	PRECAUTIONS .....	1-11
BAILING DEVICES .....	1-10	SELECTION .....	1-10	COMPRESSION TESTS .....	2-61
BALANCER CHAIN & BALANCER ASSEMBLY .....	6-97	OVERHAUL LEAKAGE CHECK .....	2-63	TUNE-UP COMPRESSION CHECK .....	2-61
REMOVAL & INSTALLATION .....	6-97	<b>COOLING SYSTEM</b> .....		DESCRIPTION & OPERATION .....	5-13
BREAKING IN A POWERHEAD .....	6-143	DESCRIPTION & OPERATION .....	5-13	ENGINE THERMOSWITCH/THERMOSENSOR & WARNING SYSTEM .....	5-30
BALANCER DRIVE BELT .....	2-55	ENGINE THERMOSWITCH/THERMOSENSOR & WARNING SYSTEM .....	5-30	FLUSHING THE COOLING SYSTEM .....	2-22
INSPECTION & ADJUSTMENT .....	2-55	FLUSHING THE COOLING SYSTEM .....	2-22	THERMOSTAT .....	5-25
REMOVAL & INSTALLATION .....	2-55	THERMOSTAT .....	5-25	TROUBLESHOOTING .....	5-14
BARO SENSOR .....	3-128	TROUBLESHOOTING .....	5-14	WATER PRESSURE RELIEF VALVE .....	5-28
SERVICING .....	3-128	WATER PRESSURE RELIEF VALVE .....	5-28	WATER PUMP .....	5-17
BASIC ELECTRICAL THEORY .....	4-2	WATER PUMP .....	5-17	COURTESY MARINE EXAMINATIONS .....	1-10
HOW DOES ELECTRICITY WORK .....	4-2	COURTESY MARINE EXAMINATIONS .....	1-10	CRANKSHAFT, PISTON(S) & BEARINGS .....	6-98
OHM'S LAW .....	4-2	CRANKSHAFT, PISTON(S) & BEARINGS .....	6-98	REMOVAL & INSTALLATION .....	6-98
BASIC OPERATING PRINCIPLES .....	1-13	REMOVAL & INSTALLATION .....	6-98	BF2D/BF2.3D MOTORS .....	6-98
2-STROKE MOTORS .....	1-13	BF2D/BF2.3D MOTORS .....	6-98	BF5A MOTORS .....	6-100
4-STROKE MOTORS .....	1-15	BF5A MOTORS .....	6-100	BF8A MOTORS .....	6-101
COMBUSTION .....	1-16	BF8A MOTORS .....	6-101	BF15A MOTORS .....	6-102
BATTERY .....		BF15A MOTORS .....	6-102	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	6-104
CONSTRUCTION .....	4-61	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	6-104	25-50 HP MOTORS .....	6-106
LOCATION .....	4-62	25-50 HP MOTORS .....	6-106	60-90 HP MOTORS .....	6-109
MAINTENANCE .....	2-57	60-90 HP MOTORS .....	6-109	BF115A/BF130A MOTORS .....	6-114
MARINE BATTERIES .....	4-61	BF115A/BF130A MOTORS .....	6-114	BF115D/BF135A/BF150A MOTORS .....	6-118
RATINGS .....	4-61	BF115D/BF135A/BF150A MOTORS .....	6-118	BF175A/BF200A/BF225A & BF250A MOTORS .....	6-122
RECOMMENDATIONS .....	4-61	BF175A/BF200A/BF225A & BF250A MOTORS .....	6-122	CYLINDER HEAD .....	6-58
SERVICE .....	4-62	CYLINDER HEAD .....	6-58	REMOVAL & INSTALLATION .....	6-58
STORAGE .....	2-59	REMOVAL & INSTALLATION .....	6-58	BF2D/BF2.3D MOTORS .....	6-58
TESTING .....	2-58	BF2D/BF2.3D MOTORS .....	6-58	BF5A MOTORS .....	6-58
BATTERY CHARGE COIL/STATOR .....	4-46	BF5A MOTORS .....	6-58	BF8A MOTORS .....	6-59
DESCRIPTION & OPERATION .....	4-46	BF8A MOTORS .....	6-59	BF15A MOTORS .....	6-59
REMOVAL & INSTALLATION .....	4-48	BF15A MOTORS .....	6-59	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	6-60
BF5A MOTORS .....	4-48	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	6-60	25-50 HP MOTORS .....	6-61
8-50 HP CARBURETED MOTORS .....	4-48	25-50 HP MOTORS .....	6-61	BF60A MOTORS .....	6-62
BF40D/BF50D MOTORS .....	4-49	BF60A MOTORS .....	6-62	BF75D/BF90D MOTORS .....	6-64
BF60A MOTORS .....	4-50	BF75D/BF90D MOTORS .....	6-64	BF75A/BF90A MOTORS .....	6-65
BF75A/BF90A MOTORS .....	4-51	BF75A/BF90A MOTORS .....	6-65	BF115A/BF130A MOTORS .....	6-66
BF75D/BF90D MOTORS .....	4-51	BF115A/BF130A MOTORS .....	6-66	BF115D/BF135A/BF150A MOTORS .....	6-68
TESTING .....	4-46	BF115D/BF135A/BF150A MOTORS .....	6-68	BF175A/BF200A/BF225A & BF250A MOTORS .....	6-69
<b>BOAT MAINTENANCE</b> .....	<b>2-57</b>	BF175A/BF200A/BF225A & BF250A MOTORS .....	6-69	<b>DESCRIPTION &amp; OPERATION</b> .....	
BATTERIES .....	2-57	<b>DESCRIPTION &amp; OPERATION</b> .....		BATTERY CHARGE COIL/STATOR .....	4-46
FIBERGLASS HULL .....	2-60	BATTERY CHARGE COIL/STATOR .....	4-46	CAMSHAFT POSITION SENSOR .....	4-16
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .....	1-10	CAMSHAFT POSITION SENSOR .....	4-16	CARBURETED FUEL SYSTEM .....	3-12
ANCHORS .....	1-10	CARBURETED FUEL SYSTEM .....	3-12	CHARGING CIRCUIT .....	4-41
BAILING DEVICES .....	1-10	CHARGING CIRCUIT .....	4-41	COOLING SYSTEM .....	5-13
COMPASS .....	1-10	COOLING SYSTEM .....	5-13	EXCITER COIL .....	4-14
FIRST AID KIT .....	1-10	EXCITER COIL .....	4-14		
OAR/PADDLE (SECOND MEANS OF PROPULSION) .....	1-10				
TOOLS & SPARE PARTS .....	1-12				
VHF-FM RADIO .....	1-10				
<b>BOATING SAFETY</b> .....	<b>1-4</b>				
COURTESY MARINE EXAMINATIONS .....	1-10				
REGULATIONS FOR YOUR BOAT .....	1-4				
REQUIRED SAFETY EQUIPMENT .....	1-5				
BUY OR REBUILD? .....	6-125				
CAMSHAFT, BEARINGS & LIFTERS .....	6-86				
REMOVAL & INSTALLATION .....	6-86				
BF2D/BF2.3D MOTORS .....	6-86				
BF5A MOTORS .....	6-88				
8-90 HP MOTORS .....	6-89				
BF115A/BF130A MOTORS .....	6-90				
BF115D/BF135A/BF150A MOTORS .....	6-90				

# 11-84 MASTER INDEX

HAND REWIND STARTERS .....	10-2	MULTI-METERS (DVOMS) .....	1-23
IGNITION COILS .....	4-21	EMISSION CONTROL INFORMATION LABEL .....	2-6
IGNITION MODULE/CDI UNIT (CARB ONLY) .....	4-31	ENGINE BLOCK, CRANK & PISTONS .....	6-134
IGNITION SYSTEMS .....	4-9	ENGINE CONTROL MODULE (ECM) .....	3-124
GEARCASE .....	7-2	SERVICING .....	3-124
JET DRIVE ASSEMBLY .....	7-15	ENGINE COVERS .....	2-7
LUBRICATION SYSTEM .....	5-2	REMOVAL & INSTALLATION .....	2-7
MANUAL TILT .....	8-2	BF8D/BF9.9D & BF15D/BF20D .....	2-8
PGM-FI .....	3-49	BF60A MOTORS .....	2-8
POWER TRIM & TILT .....	8-5	BF75D/BF90D .....	2-10
PULSER/TRIGGER COIL .....	4-16	BF115A/BF130A .....	2-10
REGULATOR/RECTIFIER .....	4-56	BF115D/BF135A/BF150A .....	2-11
REMOTE CONTROL BOX .....	9-2	BF175A/BF200A/BF225A & BF250A .....	2-13
STARTER MOTOR .....	4-69	<b>ENGINE MAINTENANCE .....</b>	<b>2-7</b>
STARTING CIRCUIT .....	4-62	ALTERNATOR DRIVE BELTS .....	2-53
TILLER HANDLE .....	9-8	ANODES (ZINCS) .....	2-43
WARNING SYSTEM .....	4-84	BALANCER DRIVE BELT .....	2-55
DIAGNOSTIC TROUBLE CODES .....	3-54	COOLING SYSTEM .....	2-22
CLEARING CODES .....	3-58	ENGINE COVERS .....	2-7
ECM CIRCUIT, PIN-OUTS & COMPONENT LOCATIONS .....	3-59	ENGINE OIL .....	2-14
BF40D/BF50D MOTORS .....	3-59	FUEL FILTER .....	2-26
BF60A MOTORS .....	3-62	FUEL/WATER SEPARATOR .....	2-33
BF75D/BF90D MOTORS .....	3-64	GEARCASE (LOWER UNIT) OIL .....	2-24
BF115A/BF130A MOTORS .....	3-67	JET DRIVE BEARING .....	2-36
BF135A/BF150A MOTORS (EARLY MODEL) .....	3-70	JET DRIVE IMPELLER .....	2-42
BF115D/BF135A/BF150A MOTORS (LATE MODEL) .....	3-74	LUBRICATION POINTS .....	2-34
BF200A/BF225A MOTORS (EARLY MODEL) .....	3-77	PROPELLER .....	2-37
BF175A/BF200A/BF225A MOTORS (LATE MODEL) .....	3-81	SWIVEL CASE LINER & BUSHING .....	2-51
BF250A MOTORS .....	3-84	TIMING BELT .....	2-45
GENERAL INFORMATION .....	3-54	WATER SEAL .....	2-51
READING CODES .....	3-54	ENGINE OIL .....	2-14
SERVICE PRECAUTIONS .....	3-54	ENGINE OIL RECOMMENDATIONS .....	2-15
TROUBLE CODE CHARTS .....	3-56	OIL LEVEL CHECK .....	2-16
ELECTRICAL COMPONENTS .....	4-2	BF2D/BF2.3D (SIGHT GLASS) .....	2-16
CONNECTORS .....	4-4	BF5A & BF8A (FILLER CAP/DIPSTICK) .....	2-16
GROUND .....	4-3	ALL OTHER MODELS (PULL/PUSH DIPSTICK) .....	2-17
LOAD .....	4-4	OIL & FILTER CHANGE .....	2-18
POWER SOURCE .....	4-2	ENGINE OIL PRESSURE SWITCH .....	3-131
PROTECTIVE DEVICES .....	4-3	SERVICING .....	3-131
SWITCHES & RELAYS .....	4-4	ENGINE OVERHAUL TIPS .....	6-126
WIRING & HARNESSSES .....	4-4	ENGINE PREPARATION .....	6-125
ELECTRICAL TESTING .....	4-6	<b>ENGINE RECONDITIONING .....</b>	<b>6-125</b>
OPEN CIRCUITS .....	4-7	BUY OR REBUILD? .....	6-125
RESISTANCE .....	4-7	CLEANING .....	6-127
SHORT CIRCUITS .....	4-7	ENGINE BLOCK, CRANK & PISTONS .....	6-134
VOLTAGE .....	4-6	HEAD & VALVES .....	6-128
VOLTAGE DROP .....	4-7	ENGINE OVERHAUL TIPS .....	6-126
<b>ELECTRONIC FUEL INJECTION (EFI/PGM-FI) .....</b>	<b>3-48</b>	ENGINE PREPARATION .....	6-125
AIR INTAKE SILENCER .....	3-86	ENGINE THERMOSWITCH/THERMOSENSOR & WARNING SYSTEM .....	5-30
BARO SENSOR .....	3-128	EXCITER COIL .....	4-14
DESCRIPTION & OPERATION .....	3-49	DESCRIPTION & OPERATION .....	4-14
DIAGNOSTIC TROUBLE CODES .....	3-54	REMOVAL & INSTALLATION .....	4-14
ENGINE CONTROL MODULE (ECM) .....	3-124	BF2D/BF2.3D & BF5A MOTORS .....	4-14
ENGINE OIL PRESSURE SWITCH .....	3-131	BF8A & BF15A MOTORS .....	4-15
FUEL INJECTION BASICS .....	3-49	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	4-15
FUEL LINE CUT SOLENOID VALVE .....	3-131	BF25A/BF30A, BF25D/BF30D & BF40A/BF50A MOTORS .....	4-16
FUEL PRESSURE REGULATOR .....	3-121	TESTING .....	4-14
FUEL PUMP (LOW PRESSURE MECHANICAL) .....	3-99	<b>FASTENERS, MEASUREMENTS &amp; CONVERSIONS .....</b>	<b>1-26</b>
FUEL RAIL & INJECTORS .....	3-118	BOLTS, NUTS & OTHER THREADED RETAINERS .....	1-26
GENERAL INFORMATION .....	3-48	STANDARD & METRIC MEASUREMENTS .....	1-27
HEATED O <sub>2</sub> SENSOR OR AIR/FUEL RATIO SENSOR .....	3-127	TORQUE .....	1-27
IDLE AIR CONTROL (IAC) VALVE .....	3-129	FIRST AID KIT .....	1-10
INTAKE AIR BYPASS (IAB) CONTROL SOLENOID VALVE .....	3-130	FLYWHEEL .....	6-91
KNOCK SENSOR .....	3-129	REMOVAL & INSTALLATION .....	6-91
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR .....	3-128	BF2D/BF2.3D MOTORS .....	6-91
TEMPERATURE SENSORS .....	3-125	BF5A MOTORS .....	6-92
THROTTLE BODY & INTAKE MANIFOLD .....	3-90	8-30 HP MOTORS .....	6-93
THROTTLE POSITION SENSOR (TPS) .....	3-129	BF40A/BF50A MOTORS .....	6-93
TIMING SENSORS (CMP/CKP/PULSER COIL) .....	3-122	BF8D/BF9.9D & BF15D/BF20D MOTORS .....	6-94
TROUBLESHOOTING .....	3-51	BF40D/BF50D MOTORS .....	6-94
VAPOR SEPARATOR TANK (VST) & HIGH PRESSURE FUEL PUMP .....	3-102	BF60A MOTORS .....	6-95
VTEC OIL CONTROL VALVE .....	3-130	75-250 HP MOTORS .....	6-96
WATER LEVEL SWITCH .....	3-131	FROZEN PROPELLER .....	7-5
ELECTRONIC TOOLS .....	1-23	FUEL .....	3-2
BATTERY CHARGERS .....	1-23	OCTANE RATING .....	3-2
BATTERY TESTERS .....	1-23	VAPOR PRESSURE .....	3-3
GAUGES .....	1-24	ALCOHOL-BLENDED FUELS .....	3-3
		HIGH ALTITUDE OPERATION .....	3-3

RECOMMENDATIONS	3-3	INTRODUCTION	10-2
CHECKING FOR STALE/CONTAMINATED FUEL	3-3	MANUAL STARTER - BF2D/BF2.3D	10-3
FUEL FILTER	2-26	MANUAL STARTER - BF5A	10-4
HIGH-PRESSURE FUEL FILTERS (EFI)	2-31	MANUAL STARTER - BF8A	10-6
40-250 HP EFI	2-31	MANUAL STARTER - BF15A	10-7
EARLY-MODEL BF115A/130A	2-32	MANUAL STARTER - BF8D/BF9.9D & BF15D/BF20D	10-9
LOW-PRESSURE FUEL FILTERS	2-26	MANUAL STARTER - BF25A/BF30A & BF25D/BF30D	10-11
2/2.3 HP	2-26	TROUBLESHOOTING THE HAND REWIND STARTER	10-2
5-30 HP	2-26	HAND TOOLS	1-19
40-130 HP	2-28	BREAKER BARS	1-20
BF40D/50D, BF60A, BF115D & ALL 135-250 HP	2-29	HAMMERS	1-22
FUEL LINE CUT SOLENOID VALVE	3-131	OTHER COMMON TOOLS	1-22
SERVICING	3-131	PLIERS	1-21
FUEL LINES & FITTINGS	3-9	SCREWDRIVERS	1-21
SERVICE	3-11	SOCKET SETS	1-19
TESTING	3-10	TORQUE WRENCHES	1-20
FUEL PRESSURE REGULATOR	3-121	WRENCHES	1-21
DESCRIPTION & OPERATION	3-121	HEAD & VALVES	6-128
REMOVAL & INSTALLATION	3-122	HEATED O <sub>2</sub> SENSOR OR AIR/FUEL RATIO SENSOR	3-127
TESTING	3-121	SERVICING	3-127
FUEL PUMP	3-45	<b>HOW TO USE THIS MANUAL</b>	<b>1-2</b>
DESCRIPTION & OPERATION	3-45	AVOIDING THE MOST COMMON MISTAKES	1-3
OVERHAUL	3-46	AVOIDING TROUBLE	1-2
REMOVAL & INSTALLATION	3-46	CAN YOU DO IT?	1-2
TESTING	3-45	DIRECTIONS & LOCATIONS	1-2
FUEL PUMP (LOW PRESSURE MECHANICAL)	3-99	GENERAL INFORMATION	1-2
DESCRIPTION & OPERATION	3-99	MAINTENANCE OR REPAIR?	1-2
REMOVAL & INSTALLATION	3-101	PROFESSIONAL HELP	1-3
TESTING	3-100	PURCHASING PARTS	1-3
FUEL RAIL & INJECTORS	3-118	WHERE TO BEGIN	1-2
DESCRIPTION & OPERATION	3-118	IDLE AIR CONTROL (IAC) VALVE	3-129
REMOVAL & INSTALLATION	3-119	SERVICING	3-129
TESTING	3-118	IGNITION COILS	4-21
<b>FUEL SYSTEM BASICS</b>	<b>3-2</b>	DESCRIPTION & OPERATION	4-21
FUEL	3-2	REMOVAL & INSTALLATION	4-25
FUEL SYSTEM PRESSURIZATION	3-5	BF2D/BF2.3D MOTORS	4-25
FUEL SYSTEM SERVICE CAUTIONS	3-2	BF5A MOTORS	4-26
FUEL SYSTEM PRESSURIZATION	3-5	BF8A, BF8D/BF9.9D, BF15A & BF15D/BF20D MOTORS	4-26
RELIEVING FUEL PRESSURE	3-5	BF25A/BF30A, BF25D/BF30D & BF40A/BF50A MOTORS	4-26
PRESSURIZING THE SYSTEM	3-6	BF40D/BF50D MOTORS	4-28
FUEL SYSTEM SERVICE CAUTIONS	3-2	BF60A MOTORS	4-29
FUEL TANK	3-6	BF75A/BF90A MOTORS	4-29
SERVICE	3-7	BF115A/BF130A MOTORS	4-29
<b>FUEL TANK &amp; LINES</b>	<b>3-6</b>	BF75D/BF90D, BF115D/BF135A/BF150A, BF175A/BF200A/BF225A & BF250A MOTORS	4-30
FUEL LINES & FITTINGS	3-9	TESTING	4-22
FUEL TANK	3-6	QUICK-TEST OR RESISTANCE CHECK?	4-22
FUEL/WATER SEPARATOR	2-33	BF2D/BF2.3D MOTORS	4-22
GAS ASSIST TILT ASSEMBLY	8-3	BF5A MOTORS	4-22
DESCRIPTION & OPERATION	8-3	BF8A MOTORS	4-23
DISPOSAL	8-5	BF15A MOTORS	4-23
REMOVAL & INSTALLATION	8-3	BF8D/BF9.9D & BF15D/BF20D MOTORS	4-24
<b>GAS ASSISTED TILT</b>	<b>8-3</b>	BF25A/BF30A, BF25D/BF30D, BF40A/BF50A, BF40D/BF50D, & BF60A MOTORS	4-24
GAS ASSIST TILT ASSEMBLY	8-3	BF75A/BF90A MOTORS	4-25
<b>GEARCASE</b>	<b>7-2</b>	BF115A/BF130A MOTORS	4-25
DESCRIPTION & OPERATION	7-2	BF75D/BF90D, BF115D/BF135A/BF150A, BF175A/BF200A/BF225A & BF250A MOTORS	4-25
GEARCASE ASSEMBLY - BF2D/BF2.3D MOTORS (FORWARD ONLY)	7-7	IGNITION MODULE/CDI UNIT (CARB ONLY)	4-31
GEARCASE ASSEMBLY - BF5A MOTORS	7-8	DESCRIPTION & OPERATION	4-31
GEARCASE ASSEMBLY - BF8A MOTORS	7-9	TESTING	4-31
GEARCASE ASSEMBLY - BF8D/BF9.9D & BF15D/BF20D MOTORS	7-10	<b>IGNITION SYSTEMS</b>	<b>4-8</b>
GEARCASE ASSEMBLY - BF15A MOTORS	7-11	DESCRIPTION & OPERATION	4-9
GEARCASE ASSEMBLY - 25-50 HP	7-12	IGNITION COILS	4-21
GEARCASE ASSEMBLY - 60-250 HP (3- 6-CYL) MODELS	4- & 7-13	IGNITION MODULE/CDI UNIT (CARBURETED ENGINES ONLY)	4-31
GEARCASE OIL	2-24	PULSER/TRIGGER COIL/CAMSHAFT POSITION SENSOR	4-16
CHECKING GEARCASE OIL LEVEL	2-24	TROUBLESHOOTING	4-11
DRAINING & FILLING	2-25	INTAKE AIR BYPASS (IAB) VALVE	3-130
OIL RECOMMENDATIONS	2-24	SERVICING	3-130
<b>GENERAL INFORMATION</b>	<b>2-2</b>	INTAKE MANIFOLD	6-56
BEFORE/AFTER EACH USE	2-6	REMOVAL & INSTALLATION	6-56
EMISSION CONTROL INFORMATION LABEL	2-6	BF2D/BF2.3D MOTORS	6-56
GENERAL INFORMATION	2-2	BF5A MOTORS	6-56
MAINTENANCE COVERAGE	2-2	BF8A MOTORS	6-56
MAINTENANCE EQUALS SAFETY	2-2	BF15A MOTORS	6-57
OUTBOARDS ON SAIL BOATS	2-2	BF8D/BF9.9D & BF15D/BF20D MOTORS	6-58
SERIAL NUMBER IDENTIFICATION	2-3	25-90 HP CARBURETED MOTORS	6-58
<b>HAND REWIND STARTERS</b>	<b>10-2</b>		
DESCRIPTION & OPERATION	10-2		

# 11-86 MASTER INDEX

40-250 HP EFI MOTORS	6-58	115-250 HP MOTORS	5-10
JET DRIVE ADJUSTMENTS	7-19	OVERHEAT THERMO-SWITCH/THERMO-SENSOR	4-86
GATE LINKAGE ADJUSTMENTS	7-19	SERVICING	4-86
TRIM ADJUSTMENT	7-20	POWERHEAD	
JET DRIVE ASSEMBLY	7-15	BALANCER CHAIN & BALANCER ASSEMBLY	6-97
DESCRIPTION & OPERATION	7-15	CAMSHAFT, BEARINGS & LIFTERS	6-86
IMPELLER REMOVAL, SHIMMING & INSTALLATION	7-16	CRANKSHAFT, PISTON(S) & BEARINGS	6-98
JET DRIVE ASSEMBLY REMOVAL & INSTALLATION	7-16	CYLINDER HEAD	6-58
JET DRIVE BEARING	2-36	FLYWHEEL	6-91
BEARING LUBRICATION	2-36	INTAKE MANIFOLD	6-56
GREASE REPLACEMENT	2-37	<b>POWERHEAD</b>	<b>6-2</b>
RECOMMENDED LUBRICANT	2-36	REMOVAL & INSTALLATION	6-2
<b>JET DRIVE GEARCASE</b>	<b>7-15</b>	BF2D/BF2.3D MOTORS	6-2
JET DRIVE ADJUSTMENTS	7-19	BF5A MOTORS	6-4
JET DRIVE ASSEMBLY	7-15	BF8A MOTORS	6-5
JET DRIVE OVERHAUL	7-17	BF15A MOTORS	6-6
JET DRIVE IMPELLER	2-42	BF8D/BF9.9D & BF15D/BF20D MOTORS	6-7
IMPELLER CLEARANCE	2-42	BF25A/BF30A & BF25D/BF30D MOTORS	6-8
INSPECTION	2-42	BF40A/BF50A MOTORS	6-11
JET DRIVE OVERHAUL	7-17	BF40D/BF50D MOTORS	6-14
KNOCK SENSOR	3-129	BF60A MOTORS	6-18
SERVICING	3-129	BF75D/BF90D MOTORS	6-21
LOWER UNIT OIL	2-24	BF75A/BF90A MOTORS	6-25
CHECKING GEARCASE OIL LEVEL	2-24	BF115A/BF130A MOTORS	6-28
DRAINING & FILLING	2-25	BF115D/BF135A/BF150A MOTORS	6-31
OIL RECOMMENDATIONS	2-24	BF175A/BF200A/BF225A & BF250A MOTORS	6-35
LUBRICATION POINTS	2-34	ROCKER ARMS/SHAFTS	6-39
BOAT	2-35	TIMING BELT OR CHAIN	6-71
MOTOR	2-35	VALVE (ROCKER) COVER	6-39
<b>LUBRICATION SYSTEM</b>	<b>5-2</b>	WATER JACKET COVER/EXHAUST MANIFOLD	6-53
DESCRIPTION & OPERATION	5-2	<b>POWERHEAD BREAK-IN</b>	<b>6-143</b>
OIL PRESSURE SWITCH & WARNING SYSTEM	5-12	<b>POWER TRIM &amp; TILT</b>	<b>8-5</b>
OIL PRESSURE TEST	5-2	DESCRIPTION & OPERATION	8-5
OIL PUMP	5-4	TRIM ANGLE SENSOR	8-23
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-128	TRIM/TILT ASSEMBLY	8-8
SERVICING	3-128	TRIM/TILT MOTOR	8-20
MANUAL STARTER - BF2D/BF2.3D MOTORS	10-3	TRIM/TILT SWITCH	8-22
DISASSEMBLY & ASSEMBLY	10-3	TROUBLESHOOTING	8-7
REMOVAL & INSTALLATION	10-3	PROPELLER	2-37
MANUAL STARTER - BF5A MOTORS	10-4	GENERAL INFORMATION	2-37
DISASSEMBLY & ASSEMBLY	10-5	INSPECTION	2-38
REMOVAL & INSTALLATION	10-4	REMOVAL & INSTALLATION	2-40
MANUAL STARTER - BF8A MOTORS	10-6	BF2D/BF2.3D, BF5A & BF8A	2-40
DISASSEMBLY & ASSEMBLY	10-6	BF75A & BF90A	2-41
REMOVAL & INSTALLATION	10-6	ALL EXCEPT ABOVE	2-41
MANUAL STARTER - BF15A MOTORS	10-7	PULSER/TRIGGER COIL/CAMSHAFT POSITION SENSOR	4-16
DISASSEMBLY & ASSEMBLY	10-8	DESCRIPTION & OPERATION	4-16
REMOVAL & INSTALLATION	10-7	REMOVAL & INSTALLATION	4-17
MANUAL STARTER - BF8D/BF9.9D & BF15D/BF20D MOTORS	10-9	BF2D/BF2.3D & BF5A MOTORS	4-17
DISASSEMBLY & ASSEMBLY	10-10	BF8A MOTORS	4-17
REMOVAL & INSTALLATION	10-9	BF15A MOTORS	4-18
MANUAL STARTER - BF25A/BF30A & BF25D/BF30D MOTORS	10-11	BF8D/BF9.9D & BF15D/BF20D MOTORS	4-18
DISASSEMBLY & ASSEMBLY	10-12	BF25A/BF30A, BF25D/BF30D & BF40A/BF50A MOTORS	4-18
REMOVAL & INSTALLATION	10-11	BF75A/BF90A MOTORS	4-19
MANUAL TILT	8-2	40-250 HP EFI MOTORS	4-21
DESCRIPTION & OPERATION	8-2	TESTING (CARB MOTORS)	4-16
SERVICING	8-3	RE-COMMISSIONING	2-124
MANUALLY TILTING THE ENGINE	8-7	REMOVAL FROM STORAGE	2-124
MEASURING TOOLS	1-25	RECTIFIER	4-55
DEPTH GAUGES	1-26	REMOVAL & INSTALLATION	4-56
DIAL INDICATORS	1-25	TESTING	4-55
MICROMETERS & CALIPERS	1-25	REGULATIONS FOR YOUR BOAT	1-4
TELESCOPING GAUGES	1-26	CAPACITY INFORMATION	1-4
OIL PRESSURE SWITCH	4-87	CERTIFICATE OF COMPLIANCE	1-4
SERVICING	4-87	DOCUMENTING OF VESSELS	1-4
OIL PRESSURE SWITCH & WARNING SYSTEM	5-12	GENERAL INFORMATION	1-4
OIL PRESSURE TEST	5-2	HULL IDENTIFICATION NUMBER	1-4
OIL PUMP	5-4	LENGTH OF BOATS	1-4
REMOVAL, OVERHAUL & INSTALLATION	5-4	NUMBERING OF VESSELS	1-4
BF2D/BF2.3D MOTORS	5-4	REGISTRATION OF BOATS	1-4
BF5A MOTORS	5-4	SALES & TRANSFERS	1-4
BF8A MOTORS	5-4	VENTILATION	1-4
BF15A MOTORS	5-5	VENTILATION SYSTEMS	1-5
BF8D/BF9.9D & BF15D/BF20D MOTORS	5-06	REGULATOR/RECTIFIER	4-56
25-50 HP MOTORS	5-7	DESCRIPTION	4-56
BF60A MOTORS	5-8	REMOVAL & INSTALLATION	4-59
BF75A/BF90A & BF75D/BF90D MOTORS	5-9	CARBURETED MOTORS & 40/50 HP EFI MOTORS	4-59

BF60A MOTORS	4-60	OVERHAUL	4-76
BF75D/BF90D MOTORS	4-60	CLEANING & INSPECTION	4-79
115 HP & LARGER EFI MOTORS	4-60	DISASSEMBLY/ASSEMBLY	4-76
TESTING	4-56	REMOVAL & INSTALLATION	4-71
<b>REMOTE CONTROL BOX</b>	<b>9-2</b>	8-20 HP POWERHEADS	4-71
DESCRIPTION & OPERATION	9-2	25-30 HP POWERHEADS	4-72
INTRODUCTION	9-2	40-50 HP POWERHEADS	4-73
REMOTE CONTROL BOX ASSEMBLY	9-3	60 HP POWERHEADS	4-74
REMOTE CONTROL CABLES	9-7	75-250 HP POWERHEADS	4-75
TROUBLESHOOTING REMOTE CONTROLS	9-3	TESTING	4-69
REMOTE CONTROL BOX ASSEMBLY	9-3	STARTER MOTOR SOLENOID SWITCH/RELAY	4-79
EXPLODED VIEWS	9-4	REMOVAL & INSTALLATION	4-82
REMOVAL & INSTALLATION	9-3	8-50 HP MOTORS (& REMOTE SOLENOIDS ON 75-130 HP)	4-82
SIDE/PANEL MOUNT	9-3	60-250 HP MOTORS	4-83
TOP MOUNT	9-3	TESTING	4-82
REMOTE CONTROL CABLES	9-7	<b>STARTING CIRCUIT</b>	<b>4-62</b>
RIGGING/REPLACEMENT	9-7	DESCRIPTION & OPERATION	4-62
REQUIRED SAFETY EQUIPMENT	1-5	STARTER MOTOR	4-69
FIRE EXTINGUISHERS	1-5	STARTER MOTOR SOLENOID SWITCH/RELAY	4-79
PERSONAL FLOTATION DEVICES	1-7	TROUBLESHOOTING	4-63
SOUND PRODUCING DEVICES	1-8	<b>STORAGE</b>	<b>2-121</b>
TYPES OF FIRES	1-5	RE-COMMISSIONING	2-124
VISUAL DISTRESS SIGNALS	1-8	WINTERIZATION	2-121
WARNING SYSTEM	1-6	SWIVEL CASE LINER & BUSHING	2-51
ROCKER ARMS/SHAFTS	6-39	REMOVAL & INSTALLATION	2-51
REMOVAL & INSTALLATION	6-39	TEMPERATURE SENSORS	3-125
BF2D/BF2.3D MOTORS	6-39	SERVICING	3-125
BF5A MOTORS	6-39	TEST EQUIPMENT	4-4
BF8A MOTORS	6-40	JUMPER WIRES	4-5
BF15A MOTORS	6-40	MULTI-METERS	4-5
BF8D/BF9.9D & BF15D/BF20D MOTORS	6-41	TEST LIGHTS	4-5
BF25A/BF30A & BF25D/BF30D MOTORS	6-41	THERMOSTAT	5-25
BF40A/BF50A & BF40D/BF50D MOTORS	6-43	REMOVAL & INSTALLATION	5-26
BF60A MOTORS	6-44	THROTTLE BODY & INTAKE MANIFOLD	3-90
BF75D/BF90D MOTORS	6-45	REMOVAL & INSTALLATION	3-90
BF75A/BF90A MOTORS	6-47	BF40D/BF50D & BF60A MOTORS	3-90
BF115A/BF130A MOTORS	6-49	BF75D/BF90D MOTORS	3-92
BF115D/BF135A/BF150A MOTORS	6-50	BF115A/BF130A MOTORS	3-94
BF175A/BF200A/BF225A & BF250A MOTORS	6-52	BF115D/BF135A/BF150A MOTORS	3-96
ROCKER COVER	6-39	BF175A/BF200A/BF225A AND BF250A MOTORS	3-97
REMOVAL & INSTALLATION	6-39	THROTTLE POSITION SENSOR (TPS)	3-129
<b>SAFETY IN SERVICE</b>	<b>1-12</b>	SERVICING	3-129
DO'S	1-12	<b>TILLER HANDLE</b>	<b>9-8</b>
DON'TS	1-12	DESCRIPTION & OPERATION	9-8
SAFETY TOOLS	1-16	TILLER HANDLE	9-8
EYE & EAR PROTECTION	1-16	TROUBLESHOOTING	9-8
WORK CLOTHES	1-17	TILLER HANDLE	9-8
WORK GLOVES	1-16	REMOVAL & INSTALLATION	9-8
SERIAL NUMBER IDENTIFICATION	2-3	BF2D/BF2.3D MOTORS	9-8
JET MODELS	2-4	BF5A MOTORS	9-9
MODEL YEARS	2-3	BF8A MOTORS	9-10
<b>SHOP EQUIPMENT</b>	<b>1-16</b>	BF15A MOTORS	9-10
CHEMICALS	1-17	BF8D/BF9.9D & BF15D/BF20D MOTORS	9-11
SAFETY TOOLS	1-16	EARLY-MODEL 25-50 HP MOTORS	9-12
SPARK PLUG WIRES	2-68	BF75A/BF90A MOTORS	9-12
TESTING	2-68	LATE-MODEL 25-90 HP MOTORS	9-12
SPARK PLUGS	2-63	TIMING BELT	2-45
INSPECTION & GAPPING	2-67	ADJUSTMENT	2-46
READING SPARK PLUGS	2-66	BF8A-BF20D	2-46
REMOVAL & INSTALLATION	2-64	BF25A/30A & BF25D/30D	2-46
SPARK PLUG HEAT RANGE	2-64	BF40A/BF50A & BF40D/BF50D	2-47
<b>SPECIFICATIONS</b>		BF60A	2-48
BOLT TORQUE - TYPICAL METRIC BOLT	1-28	BF75A/BF90A	2-49
BOLT TORQUE - TYPICAL U.S. STANDARD BOLT	1-28	BF115A/BF130A	2-49
CAPACITIES	2-128	BF175A/BF200A/BF225A & BF250A	2-50
CARBURETOR	3-48	INSPECTION	2-45
CONVERSION FACTORS	1-27	TIMING BELT OR CHAIN	6-71
COOLING SYSTEM	5-30	GENERAL INFORMATION	6-71
EFI ELECTRICAL TESTING	3-132	REMOVAL & INSTALLATION	6-71
ENGINE REBUILDING	6-144	2-5 HP MOTORS	6-71
GENERAL ENGINE	2-126	BF8A MOTORS	6-71
MAINTENANCE INTERVALS	2-127	BF15A MOTORS	6-72
PGM-FI	3-133	BF8D/BF9.9D & BF15D/BF20D MOTORS	6-72
SPARK PLUG DIAGNOSIS	2-130	BF25A/BF30A & BF25D/BF30D MOTORS	6-73
TUNE-UP	2-129	BF40A/BF50A & BF40D/BF50D MOTORS	6-74
STARTER MOTOR	4-69	BF60A MOTORS	6-76
DESCRIPTION & OPERATION	4-69	BF75D/BF90D MOTORS	6-77

# 11-88 MASTER INDEX

BF75A/BF90A MOTORS	6-80	<b>UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS</b>	<b>4-2</b>
BF115A/BF130A MOTORS	6-81	BASIC ELECTRICAL THEORY	4-2
BF115D/BF135A/BF150A MOTORS	6-82	ELECTRICAL COMPONENTS	4-2
BF175A/BF200A/BF225A & BF250A MOTORS	6-85	ELECTRICAL TESTING	4-6
TIMING SENSORS (CMP/CKP/PULSER COIL)	3-122	PRECAUTIONS	4-8
SERVICING	3-122	TEST EQUIPMENT	4-4
<b>TIMING &amp; SYNCHRONIZATION</b>	<b>2-86</b>	TROUBLESHOOTING	4-6
BF2D/BF2.3D	2-87	WIRE & CONNECTOR REPAIR	4-8
BF5A	2-88	VALVE COVER	6-39
BF8A	2-89	REMOVAL & INSTALLATION	6-39
BF15A	2-90	<b>VALVE CLEARANCE</b>	<b>2-69</b>
BF8D/BF9.9D & BF15D/BF20D	2-92	VALVE LASH	2-69
25-50 HP CARBURETED 3-CYL	2-94	VALVE LASH	2-69
BF40D/BF50D	2-100	ADJUSTMENT	2-69
BF60A	2-102	BF2D/BF2.3D	2-69
BF75D/BF90D	2-104	BF5A	2-70
BF75A/BF90A	2-107	BF8A	2-71
BF115A/BF130A	2-111	BF15A	2-72
BF115D/BF135A/BF150A	2-114	BF8D/BF9.9D & BF15D/BF20D	2-72
BF175A/BF200A/BF225A AND BF250A	2-116	BF25A/BF30A & BF25D/BF30D	2-74
CARBURETOR PILOT SCREW	2-87	BF40A/BF50A & BF40D/BF50D	2-75
<b>TOOLS</b>	<b>1-18</b>	BF60A	2-76
ELECTRONIC TOOLS	1-23	BF75D/BF90D	2-77
HAND TOOLS	1-19	BF75A/BF90A	2-79
MEASURING TOOLS	1-25	BF115A/BF130A	2-80
OTHER COMMON TOOLS	1-22	BF115D/BF135A/BF150A	2-82
SPECIAL TOOLS	1-23	BF175A/BF200A/BF225A & BF250A	2-84
TOOLS & SPARE PARTS	1-12	VAPOR SEPARATOR TANK (VST) & HIGH PRESSURE FUEL PUMP	3-102
TRIM ANGLE SENSOR	8-23	CLEANING & INSPECTION	3-117
REMOVAL & INSTALLATION	8-24	DESCRIPTION & OPERATION	3-102
TESTING	8-23	PUMP DISCHARGE TEST	3-103
TRIM/TILT ASSEMBLY	8-8	PUMP ELECTRICAL TEST	3-102
ASSEMBLY	8-19	PUMP PRESSURE/REGULATOR TEST	3-103
BLEEDING THE SYSTEM	8-8	REMOVAL & INSTALLATION	3-104
GENERAL INFORMATION	8-8	BF40D/BF50D & BF60A MOTORS	3-104
UNIT OFF OUTBOARD	8-8	BF75D/BF90D MOTORS	3-105
UNIT ON OUTBOARD	8-8	BF115A/BF130A MOTORS	3-108
CHECKING FLUID LEVEL	8-8	BF115D/BF135A/BF150A MOTORS	3-112
CLEANING & INSPECTION	8-19	BF175A/BF200A/BF225A & BF250A MOTORS	3-114
LOWER CHAMBER	8-9	VTEC OIL CONTROL VALVE	3-130
PRESSURE TESTS	8-8	SERVICING	3-130
ROD COMPRESSION TEST	8-8	WARNING BUZZER	4-89
UPPER CHAMBER	8-9	TESTING	4-89
DISASSEMBLY	8-16	<b>WARNING SYSTEM</b>	<b>4-84</b>
REMOVAL & INSTALLATION	8-10	DESCRIPTION & OPERATION	4-84
TESTING	8-8	OIL PRESSURE SWITCH	4-87
TRIM/TILT MOTOR	8-20	OVERHEAT THERMO-SWITCH/THERMO-SENSOR	4-86
OVERHAUL & INSPECTION	8-21	WARNING SYSTEM ALERTS ON EFI MOTORS	4-85
REMOVAL & INSTALLATION	8-21	WARNING BUZZER	4-89
TESTING	8-20	WARNING SYSTEM ALERTS ON EFI MOTORS	4-85
TRIM/TILT SWITCH	8-22	WATER JACKET COVER/EXHAUST MANIFOLD	6-53
TESTING	8-22	WATER LEVEL SWITCH	3-131
<b>TRIM/TILT SYSTEMS</b>	<b>8-2</b>	SERVICING	3-131
INTRODUCTION	8-2	WATER PRESSURE RELIEF VALVE	5-28
<b>TROUBLESHOOTING</b>		WATER PUMP	5-17
CARBURETOR	3-13	CLEANING & INSPECTION	5-24
CHARGING CIRCUIT	4-42	REMOVAL & INSTALLATION	5-17
COOLING SYSTEM	5-14	BF5A MOTORS	5-17
ELECTRICAL SYSTEMS	4-6	BF8A MOTORS	5-18
GEARCASE	7-4	BF15A MOTORS	5-19
HAND REWIND STARTER	10-2	BF8D/BF9.9D & BF15D/BF20D MOTORS	5-19
IGNITION SYSTEM	4-11	25-50 HP MOTORS	5-20
PGM-FI	3-51	60-250 HP MOTORS	5-22
POWER TRIM & TILT	8-5	WATER SEAL	2-51
REMOTE CONTROLS	9-3	REMOVAL & INSTALLATION	2-53
STARTING CIRCUIT	4-63	WINTERIZATION	2-121
TILLER HANDLE	9-8	PREPPING FOR STORAGE	2-121
TRIM/TILT SYSTEM DIAGNOSIS	8-7	STORAGE CHECKLIST	2-122
<b>TUNE-UP</b>	<b>2-60</b>	WIRE & CONNECTOR REPAIR	4-8
COMPRESSION TESTS	2-61	<b>WIRING DIAGRAMS</b>	<b>4-89</b>
INTRODUCTION	2-60		
SPARK PLUG WIRES	2-68		
SPARK PLUGS	2-63		
TUNE-UP SEQUENCE	2-60		
TUNE-UP SEQUENCE	2-60		