

Contents

1 GENERAL INFORMATION AND BOATING SAFETY

- 1-2 HOW TO USE THIS MANUAL
- 1-3 BOATING SAFETY
- 1-10 SAFETY IN SERVICE

2 TOOLS AND EQUIPMENT

- 2-2 TOOLS AND EQUIPMENT
- 2-4 TOOLS
- 2-11 FASTENERS, MEASUREMENTS AND CONVERSIONS

3 MAINTENANCE

- 3-2 ENGINE MAINTENANCE
- 3-8 BOAT MAINTENANCE
- 3-10 TUNE-UP
- 3-38 WINTER STORAGE CHECKLIST
- 3-39 SPRING COMMISSIONING CHECKLIST

4 FUEL SYSTEM

- 4-2 FUEL AND COMBUSTION
- 4-3 CARBURETED FUEL SYSTEM
- 4-50 ELECTRONIC FUEL INJECTION (EFI)
- 4-66 OPTIMAX DIRECT FUEL INJECTION (DFI)

5 IGNITION AND ELECTRICAL SYSTEMS

- 5-2 UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS
- 5-8 BREAKER POINTS IGNITION (MAGNETO IGNITION)
- 5-14 CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM
- 5-30 CHARGING CIRCUIT
- 5-40 STARTER CIRCUIT
- 5-42 IGNITION AND ELECTRICAL WIRING DIAGRAMS

6 LUBRICATION AND COOLING

- 6-2 OIL INJECTION SYSTEM
- 6-8 COOLING SYSTEM
- 6-22 WARNING SYSTEMS
- 6-27 OPTIMAX WARNING SYSTEMS

Contents

7-2 ENGINE MECHANICAL **7-19** POWERHEAD RECONDITIONING

POWERHEAD

7

8-2 LOWER UNIT **8-11** JET DRIVE

LOWER UNIT

8

9-2 MANUAL TILT **9-7** SINGLE RAM INTEGRAL POWER TILT/TRIM
9-5 GAS ASSIST TILT SYSTEM
9-6 POWER TRIM/TILT **9-12** THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM

TRIM AND TILT

9

10-2 REMOTE CONTROL BOX **10-6** TILLER HANDLE

REMOTE CONTROL

10

11-2 HAND REWIND STARTER **11-2** OVERHEAD TYPE STARTER

HAND REWIND STARTER

11

11-25 GLOSSARY

GLOSSARY

11-27 INDEX

MASTER INDEX

AIR COMPRESSOR 4-70
REMOVAL & INSTALLATION 4-70
TESTING 4-70
AIR PRESSURE REGULATOR 4-72
REMOVAL & INSTALLATION 4-72
AIR TEMPERATURE SENSOR (ELECTRONIC FUEL INJECTION) 4-60
REMOVAL & INSTALLATION 4-60
TESTING 4-60
AIR TEMPERATURE SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-72
REMOVAL & INSTALLATION 4-72
TESTING 4-72
ANODES (ZINCS) 3-6
INSPECTION 3-7
SERVICING 3-7
AVOIDING THE MOST COMMON MISTAKES 1-3
AVOIDING TROUBLE 1-2
BASIC ELECTRICAL THEORY 5-2
HOW ELECTRICITY WORKS: THE WATER ANALOGY 5-2
OHM'S LAW 5-2
BATTERIES (BOAT MAINTENANCE) 3-8
CLEANING 3-8
MAINTENANCE 3-8
STORAGE 3-9
TESTING 3-8
BATTERY (CHARGING CIRCUIT) 5-38
BATTERY CABLES 5-40
BATTERY CHARGERS 5-39
BATTERY CONSTRUCTION 5-38
BATTERY LOCATION 5-39
BATTERY RATINGS 5-38
MARINE BATTERIES 5-38
BEARINGS 7-29
GENERAL INFORMATION 7-29
INSPECTION 7-30
BLEEDING THE OIL INJECTION SYSTEM 6-3
PROCEDURE 6-3
BOAT MAINTENANCE 3-8
BOATING SAFETY 1-3
BOLTS, NUTS AND OTHER THREADED RETAINERS 2-11
BREAKER POINTS 5-9
POINT GAP CHECK 5-9
REMOVAL & INSTALLATION 5-11
BREAKER POINTS IGNITION (MAGNETO IGNITION) 5-8
BUY OR REBUILD? 7-19
CAN YOU DO IT? 1-2
CAPACITIES 3-42
CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM 5-14
CAPACITOR DISCHARGE MODULE (SWITCH BOX) 5-27
REMOVAL & INSTALLATION 5-28
TESTING 5-27
CARBURETED FUEL SYSTEM 4-3
2.5, 3 AND 3.3 HP 4-8
ASSEMBLY 4-10
CLEANING & INSPECTION 4-10
DISASSEMBLY 4-8
REMOVAL & INSTALLATION 4-8
4 AND 5 HP 4-11
ASSEMBLY 4-13
CLEANING & INSPECTION 4-13
DISASSEMBLY 4-12
REMOVAL & INSTALLATION 4-11
6, 8, 9.9, 10 AND 15 HP 4-14
ASSEMBLY 4-19
CLEANING & INSPECTION 4-17
DISASSEMBLY 4-15
REMOVAL & INSTALLATION 4-14
20 AND 25 HP 4-20
ASSEMBLY 4-22
CLEANING & INSPECTION 4-21
DISASSEMBLY 4-20
REMOVAL & INSTALLATION 4-20

MASTER INDEX

11-28 MASTER INDEX

- 30 AND 40 HP 4-23
 - ASSEMBLY 4-25
 - CLEANING & INSPECTION 4-25
 - DISASSEMBLY 4-24
 - REMOVAL & INSTALLATION 4-23
- 40-125 HP 4-26
 - ASSEMBLY 4-31
 - CLEANING & INSPECTION 4-30
 - DISASSEMBLY 4-28
 - REMOVAL & INSTALLATION 4-27
- 1990 135-200 HP 4-33
 - ASSEMBLY 4-36
 - CLEANING & INSPECTION 4-35
 - DISASSEMBLY 4-35
 - REMOVAL & INSTALLATION 4-33
- 1991-00 135-200 HP 4-37
 - ASSEMBLY 4-40
 - CLEANING & INSPECTION 4-40
 - DISASSEMBLY 4-38
 - REMOVAL & INSTALLATION 4-37
- 1991-00 275 HP 4-41
 - ASSEMBLY 4-44
 - CLEANING & INSPECTION 4-44
 - DISASSEMBLY 4-43
 - REMOVAL & INSTALLATION 4-42
- CARBURETION 4-3
 - BASIC FUNCTIONS 4-3
 - CARBURETOR CIRCUITS 4-4
 - FUEL & AIR METERING 4-4
 - FUEL PUMP 4-5
- CHARGING CIRCUIT 5-30**
- CHEMICALS 2-2
 - CLEANERS 2-3
 - LUBRICANTS & PENETRANTS 2-2
 - SEALANTS 2-3
- COMBUSTION 4-2
- COMPRESSION TEST 3-10
 - PRIMARY COMPRESSION TEST 3-10
 - SECONDARY COMPRESSION TEST 3-10
- CONDENSER 5-12
 - REMOVAL & INSTALLATION 5-12
 - TESTING 5-12
- CONNECTING RODS 7-27
 - GENERAL INFORMATION 7-27
 - INSPECTION 7-27
- CONTROL CABLES 10-10
 - REMOVAL & INSTALLATION 10-10
- CONVERSION FACTORS 2-12
- COOLANT TEMPERATURE SENSOR 4-60
 - REMOVAL & INSTALLATION 4-60
 - TESTING 4-60
- COOLING SYSTEM 6-8**
- COURTESY MARINE EXAMINATIONS 1-10
- CRANKSHAFT 7-28
 - GENERAL INFORMATION 7-28
 - INSPECTION 7-29
- CRANKSHAFT POSITION SENSOR (CPS) 4-72
 - REMOVAL & INSTALLATION 4-72
 - TESTING 4-72
- CYLINDER BLOCK AND HEAD 7-22
 - GENERAL INFORMATION 7-22
 - INSPECTION 7-23
- CYLINDER BORES 7-23
 - GENERAL INFORMATION 7-23
 - INSPECTION 7-23
 - REFINISHING 7-24
- DESCRIPTION & OPERATION (BREAKER POINTS IGNITION) 5-8
 - SYSTEM COMPONENTS 5-8
- DESCRIPTION AND OPERATION (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-14
 - 2.5-3.3 HP 5-15
 - 4-275 HP 5-15
- DESCRIPTION AND OPERATION (CHARGING CIRCUIT) 5-30
- DESCRIPTION AND OPERATION (COOLING SYSTEM) 6-8
 - OPTIMAX 6-8
- DESCRIPTION AND OPERATION (ELECTRONIC FUEL INJECTION) 4-50
 - FUEL INJECTION BASICS 4-50
 - MERCURY ELECTRONIC FUEL INJECTION 4-50
- DESCRIPTION AND OPERATION (GAS ASSIST TILT SYSTEM) 9-5
- DESCRIPTION AND OPERATION (HAND REWIND STARTER) 11-2
- DESCRIPTION AND OPERATION (JET DRIVE) 8-11
- DESCRIPTION AND OPERATION (MANUAL TILT) 9-2
 - SERVICING 9-2
- DESCRIPTION AND OPERATION (OIL INJECTION SYSTEM) 6-2
 - MERCURY OIL INJECTION 6-2
 - OPTIMAX OIL INJECTION 6-2
- DESCRIPTION AND OPERATION (OPTIMAX DIRECT FUEL INJECTION) 4-66
 - OPTIMAX COMPONENTS 4-68
- DESCRIPTION AND OPERATION (OPTIMAX WARNING SYSTEMS) 6-27
 - 1998-99 MODEL YEARS 6-27
 - GUARDIAN PROTECTION SYSTEM—2000 6-27
- DESCRIPTION AND OPERATION (POWER TRIM/TILT) 9-6
- DESCRIPTION AND OPERATION (REMOTE CONTROL BOX) 10-2
- DESCRIPTION AND OPERATION (SINGLE RAM INTEGRAL POWER TILT/TRIM) 9-7
- DESCRIPTION AND OPERATION (STARTER CIRCUIT) 5-40
- DESCRIPTION AND OPERATION (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-12
- DESCRIPTION AND OPERATION (TILLER HANDLE) 10-6
- DESCRIPTION AND OPERATION (WARNING SYSTEMS) 6-22
 - OIL QUANTITY INDICATOR 6-22
 - OVERHEAT TEMPERATURE WARNING 6-23
- DETERMINING POWERHEAD CONDITION 7-19
- DETONATION SENSOR AND MODULE 4-66
 - TESTING 4-66
- DIRECT INJECTOR 4-73
 - CLEANING & INSPECTION 4-74
 - REMOVAL & INSTALLATION 4-73
 - TESTING 4-73
- DIRECTIONS AND LOCATIONS 1-2
- DO'S (SAFETY IN SERVICE) 1-10
- DON'TS (SAFETY IN SERVICE) 1-10
- ELECTRIC FUEL PUMP 4-61
 - REMOVAL & INSTALLATION 4-62
 - TESTING 4-61
- ELECTRICAL COMPONENTS 5-2
 - CONNECTORS 5-4
 - GROUND 5-3
 - LOAD 5-4
 - POWER SOURCE 5-2
 - PROTECTIVE DEVICES 5-3
 - SWITCHES & RELAYS 5-3
 - WIRING & HARNESSSES 5-4
- ELECTRONIC CONTROL MODULE (ECM) 4-74
 - REMOVAL & INSTALLATION 4-74
- ELECTRONIC FUEL INJECTION (EFI) 4-50**
- ELECTRONIC TOOLS 2-8
- EMERGENCY STOP SWITCH (TILLER HANDLE) 10-12
 - REMOVAL & INSTALLATION 10-12
 - TESTING 10-12
- EMERGENCY STOP SWITCH, LANYARD (REMOTE CONTROL BOX) 10-5
 - REMOVAL & INSTALLATION 10-5
 - TESTING 10-5
- ENGINE MAINTENANCE 3-2**

ENGINE MECHANICAL 7-2

- 2.5-3.3 HP 7-14
 - REMOVAL & INSTALLATION 7-14
- 4-5 HP 7-14
 - REMOVAL & INSTALLATION 7-14
- 6-15 HP 7-15
 - REMOVAL & INSTALLATION 7-15
- 20-25 HP 7-15
 - REMOVAL & INSTALLATION 7-15
- 30 AND 40 HP 7-15
 - REMOVAL & INSTALLATION 7-15
- 40 HP (3-CYLINDER), 50 AND 60 HP 7-16
 - REMOVAL & INSTALLATION 7-17
- 40 HP (4-CYLINDER) 7-16
 - REMOVAL & INSTALLATION 7-16
- 75-125 HP 7-17
 - REMOVAL & INSTALLATION 7-17
- 135-225 DFI OPTIMAX 7-18
 - REMOVAL & INSTALLATION 7-18
- 135-250 HP 7-17
 - REMOVAL & INSTALLATION 7-17
- 275 HP 7-18
 - REMOVAL & INSTALLATION 7-19
- ENGINE REBUILDING SPECIFICATIONS 7-41
- ENGINE START SWITCH 10-12
 - REMOVAL & INSTALLATION 10-12
 - TESTING 10-12
- ENGINE STOP SWITCH (REMOTE CONTROL BOX) 10-5
 - REMOVAL & INSTALLATION 10-5
 - TESTING 10-5
- ENGINE STOP SWITCH (TILLER HANDLE) 10-12
 - REMOVAL & INSTALLATION 10-12
 - TESTING 10-12
- ENGINE TORQUE SPECIFICATIONS 7-39
- EQUIPMENT NOT REQUIRED BUT RECOMMENDED 1-9
 - ANCHORS 1-9
 - BAILING DEVICES 1-9
 - FIRST AID KIT 1-9
 - SECOND MEANS OF PROPULSION 1-9
 - TOOLS AND SPARE PARTS 1-10
 - VHF-FM RADIO 1-10
- FASTENERS, MEASUREMENTS AND CONVERSIONS 2-11**
- FIBERGLASS HULL 3-9
- FUEL 4-2
 - ALCOHOL-BLENDED FUELS 4-2
 - HIGH ALTITUDE OPERATION 4-2
 - OCTANE RATING 4-2
 - RECOMMENDATIONS 4-2
 - VAPOR PRESSURE 4-2
- FUEL AND COMBUSTION 4-2**
- FUEL FILTER 3-4
 - CLEANING & INSPECTION 3-5
 - RELIEVING FUEL SYSTEM PRESSURE 3-4
 - REMOVAL & INSTALLATION 3-5
- FUEL INJECTOR (OPTIMAX DIRECT FUEL INJECTION) 4-74
 - CLEANING & INSPECTION 4-74
 - REMOVAL & INSTALLATION 4-74
 - TESTING 4-74
- FUEL INJECTORS (ELECTRONIC FUEL INJECTION) 4-54
 - CLEANING & INSPECTION 4-60
 - REMOVAL & INSTALLATION 4-56
 - TESTING 4-54
- FUEL LINES 4-49
- FUEL PRESSURE REGULATOR (ELECTRONIC FUEL INJECTION) 4-64
 - REMOVAL & INSTALLATION 4-64
- FUEL PRESSURE REGULATOR (OPTIMAX DIRECT FUEL INJECTION) 4-75
 - CLEANING & INSPECTION 4-75
 - REMOVAL & INSTALLATION 4-75

- FUEL PUMP (CARBURETED FUEL SYSTEM) 4-45
 - OVERHAUL 4-48
 - REMOVAL & INSTALLATION 4-47
 - TESTING 4-45
- FUEL PUMP (OPTIMAX DIRECT FUEL INJECTION) 4-75
 - TESTING 4-75
- FUEL RAIL 4-76
 - CLEANING & INSPECTION 4-76
 - REMOVAL & INSTALLATION 4-76
- FUEL/WATER SEPARATOR 3-5
 - SERVICE 3-5
- GAS ASSIST DAMPER 9-5
 - REMOVAL & INSTALLATION 9-6
 - TESTING 9-5

GAS ASSIST TILT SYSTEM 9-5

- GAUGES 2-9
- GENERAL ENGINE SPECIFICATIONS 3-40
- GENERAL INFORMATION (LOWER UNIT) 8-2

HAND REWIND STARTER 11-2

- HAND TOOLS 2-4
 - HAMMERS 2-7
 - PLIERS 2-7
 - SCREWDRIVERS 2-7
 - SOCKET SETS 2-4
 - WRENCHES 2-6

HOW TO USE THIS MANUAL 1-2

IGNITION AND ELECTRICAL WIRING DIAGRAMS 5-42

- IGNITION COIL (BREAKER POINTS IGNITION) 5-13
 - REMOVAL & INSTALLATION 5-14
 - TESTING 5-13
- IGNITION COIL (CAPACITOR DISCHARGE IGNITION SYSTEM) 5-25
 - REMOVAL & INSTALLATION 5-26
 - TESTING 5-25
- IGNITION SWITCH 10-5
 - REMOVAL & INSTALLATION 10-5
 - TESTING 10-5
- IGNITION SYSTEM 3-14
- IGNITION TESTING SPECIFICATIONS 5-17
- INTRODUCTION (TUNE-UP) 3-10

JET DRIVE 8-11

- JET DRIVE ASSEMBLY 8-12
 - ADJUSTMENT 8-15
 - ASSEMBLY 8-18
 - CLEANING AND INSPECTING 8-17
 - DISASSEMBLY 8-16
 - REMOVAL & INSTALLATION 8-12
 - SHIMMING 8-19
- LOWER UNIT 8-5
 - REMOVAL & INSTALLATION 8-5

LOWER UNIT 8-2

- LOWER UNIT (ENGINE MAINTENANCE) 3-3
 - DRAINING AND FILLING 3-3
 - OIL RECOMMENDATIONS 3-3
- LOWER UNIT SPECIFICATIONS 8-20
- LUBRICATION POINTS 3-6
 - INSPECTION & LUBRICATION 3-6
- MAINTENANCE INTERVAL CHART 3-42
- MAINTENANCE OR REPAIR? 1-2
- MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR 4-76
 - REMOVAL & INSTALLATION 4-76
 - TESTING 4-76

MANUAL TILT 9-2

- MEASURING TOOLS 2-9
 - DEPTH GAUGES 2-10
 - DIAL INDICATORS 2-10
 - MICROMETERS & CALIPERS 2-9
 - TELESCOPING GAUGES 2-10

11-30 MASTER INDEX

- MECHANICAL FUEL PUMP 4-61
 - REMOVAL & INSTALLATION 4-61
 - TESTING 4-61
- MODEL IDENTIFICATION AND SERIAL NUMBERS 8-11
- NEUTRAL START SWITCH 10-4
 - REMOVAL & INSTALLATION 10-4
 - TESTING 10-4
- OIL GAUGE 6-26
 - TESTING 6-26
- OIL INJECTION SYSTEM 6-2**
- OIL LEVEL SWITCH 6-26
 - REMOVAL & INSTALLATION 6-26
 - TESTING 6-26
- OIL LINES 6-7
 - OIL LINE CAUTIONS 6-7
- OIL PUMP 6-6
 - REMOVAL & INSTALLATION 6-6
- OIL PUMP CONTROL ROD 6-7
 - ADJUSTMENT 6-7
- OIL PUMP DISCHARGE RATE 6-7
 - TESTING 6-7
- OIL TANK 6-4
 - CLEANING & INSPECTION 6-6
 - REMOVAL & INSTALLATION 6-4
- OPTIMAX DIRECT FUEL INJECTION (DFI) 4-66**
- OPTIMAX WARNING SYSTEMS 6-27**
- OTHER COMMON TOOLS 2-7
- OVERHEAD TYPE STARTER 11-2**
 - 2.5, 3 AND 3.3 HP 11-2
 - ASSEMBLY 11-4
 - CLEANING & INSPECTION 11-4
 - DISASSEMBLY 11-3
 - REMOVAL & INSTALLATION 11-2
 - 4 AND 5 HP 11-6
 - ASSEMBLY 11-8
 - CLEANING & INSPECTION 11-8
 - DISASSEMBLY 11-7
 - REMOVAL & INSTALLATION 11-6
 - 6-15 HP 11-11
 - ASSEMBLY 11-14
 - CLEANING & INSPECTION 11-13
 - DISASSEMBLY 11-12
 - REMOVAL & INSTALLATION 11-11
 - 20 AND 25 HP 11-15
 - ASSEMBLY 11-18
 - CLEANING & INSPECTION 11-17
 - DISASSEMBLY 11-16
 - REMOVAL & INSTALLATION 11-15
 - 30 AND 40 HP 11-19
 - ASSEMBLY 11-22
 - CLEANING & INSPECTION 11-22
 - DISASSEMBLY 11-20
 - REMOVAL & INSTALLATION 11-19
- PISTON PINS 7-25
 - GENERAL INFORMATION 7-25
 - INSPECTION 7-25
- PISTON RINGS 7-26
 - GENERAL INFORMATION 7-26
 - INSPECTION 7-27
- PISTONS 7-24
 - GENERAL INFORMATION 7-24
 - INSPECTION 7-24
- POWER TRIM/TILT 9-6**
- POWERHEAD 7-2
 - REMOVAL & INSTALLATION 7-2
- POWERHEAD EXPLODED VIEWS 7-30
- POWERHEAD OVERHAUL TIPS 7-20
 - CAUTIONS 7-20
- CLEANING 7-20
 - REPAIRING DAMAGED THREADS 7-21
 - TOOLS 7-20
- POWERHEAD PREPARATION 7-21
- POWERHEAD RECONDITIONING 7-19**
- PRIMARY COIL 5-13
 - REMOVAL & INSTALLATION 5-13
 - TESTING 5-13
- PROFESSIONAL HELP 1-2
- PROPELLER (ENGINE MAINTENANCE) 3-6
- PROPELLER (LOWER UNIT) 8-3
 - REMOVAL & INSTALLATION 8-3
- PURCHASING PARTS 1-3
- RECTIFIER 5-34
 - REMOVAL & INSTALLATION 5-34
 - TESTING 5-34
- RECTIFIER TROUBLESHOOTING - TEST "A" 5-37
- RECTIFIER TROUBLESHOOTING - TEST "B" 5-37
- REED VALVE 7-13
- REGULATIONS FOR YOUR BOAT 1-3
 - CAPACITY INFORMATION 1-4
 - CERTIFICATE OF COMPLIANCE 1-4
 - DOCUMENTING OF VESSELS 1-4
 - HULL IDENTIFICATION NUMBER 1-4
 - LENGTH OF BOATS 1-4
 - NUMBERING OF VESSELS 1-4
 - REGISTRATION OF BOATS 1-4
 - SALES AND TRANSFERS 1-4
 - VENTILATION 1-4
 - VENTILATION SYSTEMS 1-5
- REGULATOR/RECTIFIER 5-34
 - REMOVAL & INSTALLATION 5-38
 - TESTING 5-34
- REMOTE CONTROL BOX 10-2**
- REMOTE CONTROL BOX 10-2
 - REMOVAL & INSTALLATION 10-2
- REMOTE CONTROL CABLES 10-3
 - ADJUSTMENT 10-3
- REQUIRED SAFETY EQUIPMENT 1-5
 - FIRE EXTINGUISHERS 1-5
 - PERSONAL FLOTATION DEVICES 1-6
 - SOUND PRODUCING DEVICES 1-8
 - TYPES OF FIRES 1-5
 - VISUAL DISTRESS SIGNALS 1-8
 - WARNING SYSTEM 1-6
- SAFETY IN SERVICE 1-10**
- SAFETY TOOLS 2-2
 - EYE & EAR PROTECTION 2-2
 - WORK CLOTHES 2-2
 - WORK GLOVES 2-2
- SERIAL NUMBER IDENTIFICATION 3-2
- SHIFT INTERRUPT SWITCH 4-76
 - REMOVAL & INSTALLATION 4-76
 - TESTING 4-76
- SHIFTING PRINCIPLES 8-2
 - COUNTER-ROTATING UNIT 8-2
 - STANDARD ROTATING UNIT 8-2
- SINGLE RAM INTEGRAL POWER TILT/TRIM 9-7**
- SMALL VOLTAGE REGULATOR TEST (STATIC) 5-35
- SPARK PLUG WIRES 3-14
 - REMOVAL & INSTALLATION 3-14
 - TESTING 3-14
- SPARK PLUGS 3-11
 - INSPECTION & GAPPING 3-13
 - READING SPARK PLUGS 3-12
 - REMOVAL & INSTALLATION 3-11
 - SPARK PLUG HEAT RANGE 3-11
 - SPARK PLUG SERVICE 3-11

SPECIAL TOOLS 2-8

SPECIFICATION CHARTS

- CAPACITIES 3-42
- CONVERSION FACTORS 2-12
- ENGINE REBUILDING SPECIFICATIONS 7-41
- ENGINE TORQUE SPECIFICATIONS 7-39
- GENERAL ENGINE SPECIFICATIONS 3-40
- IGNITION TESTING SPECIFICATIONS 5-17
- LOWER UNIT SPECIFICATIONS 8-20
- MAINTENANCE INTERVAL CHART 3-42
- OIL PUMP DISCHARGE RATE 6-7
- SMALL VOLTAGE REGULATOR TEST (STATIC) 5-35
- STATOR ALTERNATOR RESISTANCE SPECIFICATIONS 5-30
- TUNEUP SPECIFICATIONS CHART 3-41
- WME CARBURETOR SPECIFICATIONS 4-26

SPRING COMMISSIONING CHECKLIST 3-39

STANDARD AND METRIC MEASUREMENTS 2-11

STARTER CIRCUIT 5-40

- STARTER MOTOR 5-41
 - REMOVAL & INSTALLATION 5-41
- STARTER SOLENOID 5-41
 - TESTING 5-41
- STATOR (ALTERNATOR) 5-30
 - REMOVAL & INSTALLATION 5-31
 - TESTING 5-30
- STATOR ALTERNATOR RESISTANCE SPECIFICATIONS 5-30
- TEST EQUIPMENT 5-4
 - JUMPER WIRES 5-4
 - MULTIMETERS 5-5
 - TEST LIGHTS 5-5
- THE TWO-STROKE CYCLE 7-2
- THERMOSTAT 6-20
 - CLEANING & INSPECTION 6-22
 - REMOVAL & INSTALLATION 6-20
 - TESTING 6-22

THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM 9-12

- THROTTLE PLATE ASSEMBLY 4-77
 - REMOVAL & INSTALLATION 4-77
- THROTTLE POSITION SENSOR (ELECTRONIC FUEL INJECTION) 4-65
 - ADJUSTMENT 4-65
 - REMOVAL & INSTALLATION 4-65
 - TESTING 4-65
- THROTTLE POSITION SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-73
 - REMOVAL & INSTALLATION 4-73
 - TESTING 4-73

TILLER HANDLE 10-6

- TILLER HANDLE 10-6
 - REMOVAL & INSTALLATION 10-6
- TILT/TRIM CYLINDER (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-10
 - CLEANING & INSPECTION 9-11
 - REMOVAL & INSTALLATION 9-10
- TILT/TRIM CYLINDER (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-18
 - CLEANING & INSPECTION 9-18
 - DISASSEMBLY 9-18
- TILT/TRIM MOTOR (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-8
 - CLEANING & INSPECTION 9-9
 - REMOVAL & INSTALLATION 9-8
 - TESTING 9-8
- TILT/TRIM MOTOR (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-16
 - REMOVAL & INSTALLATION 9-16
 - TESTING 9-16
- TILT/TRIM PUMP 9-13
 - HYDRAULIC SYSTEM BLEEDING 9-15
 - REMOVAL & INSTALLATION 9-13

- TILT/TRIM RELAY (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-12
 - TESTING 9-12
- TILT/TRIM RELAY (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-20
 - TESTING 9-20
- TILT/TRIM SOLENOID 9-18
 - TESTING 9-18
- TILT/TRIM SWITCH (SINGLE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-11
 - TESTING 9-11
- TILT/TRIM SWITCH (THREE RAM INTEGRAL POWER TILT/TRIM SYSTEM) 9-18
 - TESTING 9-18
- TIMING AND SYNCHRONIZATION 3-14

TOOLS 2-4

TOOLS AND EQUIPMENT 2-2

- TORQUE 2-11
- TORQUE SEQUENCE DIAGRAMS 7-36
- TRACKER VALVE 4-77
 - REMOVAL & INSTALLATION 4-77
- TRIGGER (CHARGE) COIL 5-16
 - REMOVAL & INSTALLATION 5-18
 - TESTING 5-16
- TRIM/TILT PUMP 9-7
 - HYDRAULIC SYSTEM BLEEDING 9-8
 - REMOVAL & INSTALLATION 9-7
- TRIM/TILT SWITCH 10-6
 - REMOVAL & INSTALLATION 10-6
 - TESTING 10-6

TROUBLESHOOTING CHARTS

- RECTIFIER TROUBLESHOOTING - TEST "A" 5-37
- RECTIFIER TROUBLESHOOTING - TEST "B" 5-37
- TROUBLESHOOTING ELECTRONIC FUEL INJECTION 4-53
- TROUBLESHOOTING THE BREAKER POINTS IGNITION SYSTEM 5-8
 - COMPRESSION TEST 5-9
 - SPARK PLUGS 5-9
- TROUBLESHOOTING THE CDI SYSTEM 5-15
 - TROUBLESHOOTING ALTERNATOR DRIVEN IGNITIONS 5-16
 - TROUBLESHOOTING BATTERY CD IGNITIONS 5-16
 - TROUBLESHOOTING WITH MINIMAL TEST EQUIPMENT 5-15
- TROUBLESHOOTING THE CHARGING SYSTEM 5-30
- TROUBLESHOOTING THE COOLING SYSTEM 6-9
- TROUBLESHOOTING THE ELECTRICAL SYSTEM 5-6
 - OPEN CIRCUITS 5-6
 - RESISTANCE 5-6
 - SHORT CIRCUITS 5-7
 - VOLTAGE 5-6
 - VOLTAGE DROP 5-6
- TROUBLESHOOTING THE FUEL SYSTEM 4-6
 - COMBUSTION RELATED PISTON FAILURES 4-7
 - COMMON PROBLEMS 4-6
- TROUBLESHOOTING THE LOWER UNIT 8-2
- TROUBLESHOOTING THE OIL INJECTION SYSTEM 6-3
- TROUBLESHOOTING THE OPTIMAX FUEL INJECTION SYSTEM 4-69
 - WITH THE DIGITAL DIAGNOSTIC TERMINAL (DDT) 4-70
 - WITHOUT THE DIGITAL DIAGNOSTIC TERMINAL (DDT) 4-69
- TROUBLESHOOTING THE POWER TRIM/TILT SYSTEM 9-6
- TROUBLESHOOTING THE REMOTE CONTROLS 10-2
- TROUBLESHOOTING THE REWIND STARTER 11-2
- TROUBLESHOOTING THE STARTING SYSTEM 5-40
- TROUBLESHOOTING THE TILLER HANDLE 10-6
- TROUBLESHOOTING THE WARNING SYSTEMS (OPTIMAX WARNING SYSTEMS) 6-28
- TROUBLESHOOTING THE WARNING SYSTEMS (WARNING SYSTEMS) 6-24

11-32 MASTER INDEX

TUNE-UP 3-10

- 2.5, 3 AND 3.3 HP 3-15
 - IDLE MIXTURE 3-15
 - IDLE SPEED 3-15
 - IGNITION TIMING 3-15
 - THROTTLE JET NEEDLE 3-16
- 4 AND 5 HP 3-16
 - IDLE SPEED & MIXTURE 3-17
 - IGNITION TIMING 3-16
 - PRELIMINARY ADJUSTMENTS 3-16
- 6, 8, 9.9 AND 15 HP 3-17
 - FAST IDLE SPEED 3-18
 - IDLE SPEED & MIXTURE 3-18
 - IGNITION TIMING 3-18
 - PRELIMINARY ADJUSTMENTS 3-17
- 20 AND 25 HP 3-19
 - CARBURETOR THROTTLE CAM 3-21
 - DASHPOT ADJUSTMENT 3-21
 - FAST IDLE SPEED 3-21
 - FULL THROTTLE STOP 3-19
 - IDLE SPEED & MIXTURE 3-20
 - IGNITION TIMING 3-19
 - PRELIMINARY ADJUSTMENTS 3-19
 - STARTER INTERLOCK ADJUSTMENT 3-21
- 30 AND 40 HP 3-22
 - CAM FOLLOWER 3-22
 - IDLE SPEED & MIXTURE 3-22
 - IGNITION TIMING 3-22
 - OIL PUMP 3-23
 - PRELIMINARY ADJUSTMENTS 3-22
- 40 (3-CYLINDER), 1994-00 50 AND 60 HP 3-26
 - CARBURETOR SYNCHRONIZATION 3-26
 - IDLE SPEED & MIXTURE 3-26
 - IGNITION TIMING 3-26
 - OIL PUMP 3-27
 - PRELIMINARY ADJUSTMENTS 3-26
 - THROTTLE CAM 3-26
- 40 HP (4-CYLINDER) 3-23
 - CARBURETOR SYNCHRONIZATION 3-23
 - FULL THROTTLE STOP 3-24
 - IDLE SPEED & MIXTURE 3-24
 - IGNITION TIMING 3-23
 - PRELIMINARY ADJUSTMENTS 3-23
- 1990-93 50-60 HP 3-25
 - CARBURETOR SYNCHRONIZATION 3-25
 - IDLE SPEED & MIXTURE 3-25
 - IGNITION TIMING 3-25
 - PRELIMINARY ADJUSTMENTS 3-25
- 75 AND 90 HP 3-27
 - CARBURETOR SYNCHRONIZATION 3-27
 - IDLE SPEED & MIXTURE 3-28
 - IGNITION TIMING 3-27
 - OIL PUMP 3-28
 - PRELIMINARY ADJUSTMENTS 3-27
 - THROTTLE CAM 3-28
- 100-125 HP 3-28
 - ACCELERATOR PUMP 3-29
 - CARBURETOR SYNCHRONIZATION 3-28
 - IDLE SPEED & MIXTURE 3-29
 - IGNITION TIMING 3-29
 - OIL PUMP 3-29
 - PRELIMINARY ADJUSTMENTS 3-28
 - THROTTLE CABLE PRELOAD 3-29
 - THROTTLE CAM 3-28

- 115-225 DIRECT FUEL INJECTION (DFI) OPTIMAX 3-37
 - CRANK POSITION SENSOR 3-37
 - FULL THROTTLE STOP 3-37
 - THROTTLE CAM 3-37
 - THROTTLE PLATE SCREW 3-38
- 135-225 HP CARBURETED 3-30
 - CARBURETOR SYNCHRONIZATION 3-30
 - FULL THROTTLE STOP 3-30
 - IDLE SPEED & MIXTURE 3-31
 - IGNITION TIMING 3-30
 - OIL PUMP 3-30
 - PRELIMINARY ADJUSTMENTS 3-30
 - THROTTLE CABLE PRELOAD 3-31
 - THROTTLE CAM 3-30
- 150-200 HP ELECTRONIC FUEL INJECTION 3-35
 - FULL THROTTLE STOP 3-36
 - IDLE SPEED 3-36
 - IGNITION TIMING 3-35
 - OIL PUMP 3-36
 - THROTTLE CAM 3-36
 - THROTTLE POSITION SENSOR (TPS) 3-37
- 225 HP (3.0L) CARBURETED 3-31
 - CARBURETOR SYNCHRONIZATION 3-32
 - CRANKSHAFT POSITION SENSOR 3-33
 - IDLE SPEED 3-33
 - IGNITION TIMING 3-32
 - OIL PUMP 3-32
 - THROTTLE CAM 3-32
 - THROTTLE POSITION SENSOR (TPS) 3-33
- 250 AND 275 HP 3-33
 - CARBURETOR SYNCHRONIZATION 3-34
 - FULL THROTTLE STOP 3-34
 - IDLE SPEED 3-34
 - IGNITION TIMING 3-33
 - OIL PUMP 3-34
- TUNEUP SPECIFICATIONS CHART 3-41
- 2-STROKE OIL 3-2
 - FILLING 3-2
 - OIL RECOMMENDATIONS 3-2
- UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS 5-2**
- VAPOR SEPARATOR (ELECTRONIC FUEL INJECTION) 4-62
 - CLEANING & INSPECTION 4-63
 - REMOVAL & INSTALLATION 4-62
- VAPOR SEPARATOR (OPTIMAX DIRECT FUEL INJECTION) 4-77
 - ASSEMBLY 4-78
 - CLEANING & INSPECTION 4-77
 - DISASSEMBLY 4-77
 - REMOVAL & INSTALLATION 4-77
- WARNING SYSTEMS 6-22**
- WATER PUMP 6-9
 - CLEANING & INSPECTION 6-20
 - REMOVAL & INSTALLATION 6-9
- WATER TEMPERATURE SENSOR (OPTIMAX DIRECT FUEL INJECTION) 4-78
 - REMOVAL & INSTALLATION 4-78
 - TESTING 4-78
- WATER TEMPERATURE SENSOR (WARNING SYSTEMS) 6-24
 - REMOVAL & INSTALLATION 6-24
 - TESTING 6-26
- WHERE TO BEGIN 1-2
- WINTER STORAGE CHECKLIST 3-38**
- WIRE AND CONNECTOR REPAIR 5-7
- WME CARBURETOR SPECIFICATIONS 4-26