

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT	1-10
SAFETY IN SERVICE	1-13
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

ENGINE & DRIVE MAINTENANCE	2-2
FLUIDS & LUBRICANTS	2-18
PWC MAINTENANCE	2-22
WINTER STORAGE	2-26
SPECIFICATIONS	2-29
SPRING COMMISSIONING	2-29
TROUBLESHOOTING	2-29

3

FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
ELECTRONIC FUEL INJECTION SYSTEM	3-18
COMPONENT LOCATIONS	3-87
TROUBLESHOOTING	3-28

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
ELECTRONIC IGNITION & CHARGING SYSTEMS	4-10
STARTING SYSTEM	4-37
ELECTRICAL SWITCH/SOLENOID SERVICE	4-52
WIRING DIAGRAMS	4-57
SPECIFICATIONS	4-69

CONTENTS

EXHAUST SYSTEM 5-2
COOLING SYSTEM 5-14
DESCRIPTION & OPERATION 5-14

EXHAUST & COOLING

5

ENGINE MECHANICAL 6-2
ENGINE REFINISHING & OVERHAUL 6-60
ENGINE BREAK-IN 6-62
SPECIFICATIONS 6-63

ENGINE MECHANICAL

6

JET DRIVE 7-2

DRIVE SYSTEM

7

HELM & STEERING 8-2
HULL & BODY 8-19
INTELLIGENT SUSPENSION (IS) 8-25

HULL, HELM & STEERING

8

MASTER INDEX 8-33

MASTER INDEX

ACTUATOR	8-25	CLEANERS	1-18
REMOVAL & INSTALLATION	8-25	LUBRICANTS & PENETRANTS	1-18
AIR FILTER/FLAME ARRESTOR	2-3	SEALANTS	1-18
DESCRIPTION & OPERATION	2-3	COIL SPRINGS	8-26
AIR INTAKE MANIFOLD	6-7	REMOVAL & INSTALLATION	8-26
REMOVAL & INSTALLATION	6-7	COMBUSTION	3-5
AIR TEMPERATURE SENSOR	4-52	ABNORMAL COMBUSTION	3-6
TESTING	4-52	FACTORS AFFECTING COMBUSTION	3-6
ANCHORS	1-10	GENERAL INFORMATION	3-5
ANODES (ZINCS)	2-22	COMPASS	1-10
GENERAL INFORMATION	2-22	INSTALLATION	1-11
SERVICING	2-22	PRECAUTIONS	1-12
AVOIDING THE MOST COMMON MISTAKES	1-3	SELECTION	1-10
AVOIDING TROUBLE	1-2	TESTING	4-53
BAILING DEVICES	1-10	COMPONENT LOCATIONS	3-86
BALANCE SHAFT	6-53	COOLANT TEMPERATURE SENSOR (CTS)	3-38, 5-19
REMOVAL & INSTALLATION	6-53	REMOVAL & INSTALLATION	3-38, 5-19
BASIC ELECTRICAL THEORY	4-2	TESTING	3-38, 5-19
HOW DOES ELECTRICITY WORK	4-2	COOLING SYSTEM	
OHM'S LAW	4-2	COOLANT TEMPERATURE SENSOR (CTS)	5-19
BASIC OPERATING PRINCIPLES	1-13	DESCRIPTION & OPERATION	2-4, 5-14
2-STROKE MOTORS	1-14	DRAINING & FILLING - CLOSED LOOP ONLY	2-6
4-STROKE MOTORS	1-16	EXHAUST FLUSHING	2-6
COMBUSTION	1-16	LEAK TEST - CLOSED LOOP ONLY	2-5
BATTERY		LEVEL CHECK - CLOSED LOOP ONLY	2-4
CHARGERS	2-26, 4-18	MAINTENANCE	5-17
CHECKING SPECIFIC GRAVITY	2-24	PRESSURE CAP TESTING - CLOSED LOOP ONLY	2-5
CLEANING	2-23	ROTARY SEAL & OIL PUMP SEAL	5-21
CONSTRUCTION	4-17	THERMOSTAT	5-17
LOCATION	4-17	TROUBLESHOOTING	5-16
MARINE BATTERIES	4-16	WATER PUMP HOUSING & IMPELLER	5-20
RATINGS	4-17	COURTESY MARINE EXAMINATIONS	1-10
REMOVAL & INSTALLATION	2-24	CRANKSHAFT POSITION SENSOR (CPS)	3-39, 4-19
REPLACING BATTERY CABLES	2-26, 4-19	ENCODER/TRIGGER WHEEL INSPECTION	3-41, 4-21
SAFETY PRECAUTIONS	2-25, 4-18	REMOVAL & INSTALLATION	3-39, 4-19
STORAGE	2-26	SENSOR TESTING	3-40, 4-19
TERMINALS	2-25	CRUISE SWITCH	3-41
BEFORE/AFTER EACH USE	2-2	REMOVAL & INSTALLATION	3-41
VISUALLY INSPECTING THE BOAT & MOTOR	2-3	CYLINDER BLOCK & CRANKCASE/OIL PAN	6-43
BOATING EQUIPMENT	1-10	CYLINDER BLOCK WARPAGE	6-47
ANCHORS	1-10	HONING CYLINDER WALLS	6-46
BAILING DEVICES	1-10	INSPECTION	6-45
COMPASS	1-10	REMOVAL & INSTALLATION	6-43
FIRST AID KIT	1-10	CYLINDER COMPRESSION	2-7
OAR/PADDLE	1-10	CHECKING COMPRESSION	2-7
TOOLS & SPARE PARTS	1-12	CYLINDER HEAD COVER	6-33
VHF-FM RADIO	1-10	REMOVAL & INSTALLATION	6-33
BOATING SAFETY	1-4	CYLINDER HEAD & VALVE TRAIN	6-38
COURTESY MARINE EXAMINATIONS	1-10	DISASSEMBLY & ASSEMBLY	6-39
REGULATIONS FOR YOUR BOAT	1-4	INSPECTION	6-39
REQUIRED SAFETY EQUIPMENT	1-5	REFINISHING & REPAIRING	6-42
BREAK-IN PROCEDURES	6-62	REMOVAL & INSTALLATION	6-38
CAMSHAFT POSITION SENSOR (CAPS)	3-36	CYLINDER SUPPORT	8-16
REMOVAL & INSTALLATION	3-36	DISASSEMBLY & ASSEMBLY	8-16
TESTING & SERVICE	3-36	REMOVAL & INSTALLATION	8-16
CAMSHAFT & TIMING SPROCKET	6-36	DECK EXTENSION	8-19
INSPECTION	6-37	REMOVAL & INSTALLATION	8-19
REMOVAL & INSTALLATION	6-36	DEPTH GAUGE/SOUNDER	4-54
CHECKS & ADJUSTMENTS	2-15	REMOVAL & INSTALLATION	4-54
iBR GATE BACKLASH	2-17	TROUBLESHOOTING	4-54
SHIFT/REVERSE CABLE	2-15	DESCRIPTION & OPERATION	
STEERING CABLE ALIGNMENT	2-16	CHARGING SYSTEM	4-13
THROTTLE CABLE	2-17	COOLING SYSTEM	5-14
CHEMICALS	1-17	DEPTH GAUGE/SOUNDER	4-54

8-34 MASTER INDEX

ELECTRONIC IGNITION SYSTEM.....	4-10	BATTERY.....	4-16
EXHAUST SYSTEM.....	5-2	CRANKSHAFT POSITION SENSOR (CPS).....	4-19
INTELLIGENT SUSPENSION (IS).....	8-25	DESCRIPTION & OPERATION.....	4-10
OFF-POWER ASSISTED STEERING (OPAS).....	8-13	ELECTRONIC CONTROL MODULE (ECM).....	4-21
OFF-THROTTLE ASSISTED STEERING (OTAS).....	8-19	GENERAL INFORMATION.....	4-10
STARTER.....	4-49	IGNITION & CHARGING SYSTEM TROUBLESHOOTING.....	4-16
STARTING SYSTEM.....	4-37	IGNITION COILS.....	4-22
THERMOSTAT.....	2-7, 5-17	KNOCK SENSOR (KS).....	4-24
DIRECTIONS & LOCATIONS.....	1-2	PTO COUPLING (DRIVESHAFT/CRANKSHAFT).....	4-33
DRAIN PLUGS.....	2-13	PTO HOUSING & STATOR.....	4-26
DRIVESHAFT.....	7-2	RECTIFIER/REGULATOR.....	4-33
REMOVAL & INSTALLATION.....	7-2	ROTOR, ENCODER/TRIGGER WHEEL & RING GEAR (FLYWHEEL).....	4-35
ELECTRICAL COMPONENTS.....	4-2	ELECTRONIC TOOLS.....	1-24
GROUND.....	4-3	BATTERY CHARGERS.....	1-24
LOAD.....	4-4	BATTERY TESTERS.....	1-24
POWER SOURCE.....	4-2	GAUGES.....	1-24
PROTECTIVE DEVICES.....	4-3	MULTI-METERS (DVOMS).....	1-24
SWITCHES & RELAYS.....	4-4	ENGINE.....	6-2
WIRING & HARNESSSES.....	4-4	REMOVAL, INSTALLATION & ALIGNMENT.....	6-2
ELECTRICAL SWITCH/SOLENOID SERVICE.....	4-52	ENGINE BREAK-IN.....	6-62
AIR TEMPERATURE SENSOR.....	4-52	BREAK-IN PROCEDURES.....	6-62
COMPASS.....	4-53	ENGINE CONTROL MODULE (EMS ECU, ECU OR ECM).....	3-35
DEPTH GAUGE/SOUNDER.....	4-54	GENERAL INFORMATION.....	3-35
POWER (MAIN OR CUT-OUT) RELAY.....	4-53	REMOVAL & INSTALLATION.....	3-35
SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS.....	4-52	ENGINE MECHANICAL.....	6-2
SPEED SENSOR.....	4-55	AIR INTAKE MANIFOLD.....	6-7
WARNING HORN.....	4-56	BALANCE SHAFT.....	6-53
WATER TEMPERATURE SENSOR.....	4-57	CAMSHAFT & TIMING SPROCKET.....	6-36
ELECTRICAL SYSTEM PRECAUTIONS.....	4-9	CYLINDER BLOCK & CRANKCASE/OIL PAN.....	6-43
ELECTRICAL TESTING.....	4-7	CYLINDER HEAD & VALVE TRAIN.....	6-38
OPEN CIRCUITS.....	4-8	CYLINDER HEAD COVER.....	6-33
RESISTANCE.....	4-7	ENGINE.....	6-2
SHORT CIRCUITS.....	4-8	ENGINE MOUNTS.....	6-7
VOLTAGE.....	4-7	EXHAUST MANIFOLD.....	6-9
VOLTAGE DROP.....	4-7	GENERAL INFORMATION.....	6-2
ELECTRONIC CONTROL MODULE (ECM).....	4-21	OIL COOLER.....	6-17
GENERAL INFORMATION.....	4-21	OIL FILTER BYPASS.....	6-17
REMOVAL & INSTALATION.....	4-21	OIL PRESSURE PUMP.....	6-18
ELECTRONIC FUEL INJECTION SYSTEM.....	3-21	OIL PRESSURE REGULATOR.....	6-21
CAMSHAFT POSITION SENSOR (CAPS).....	3-36	OIL PRESSURE SWITCH/SENSOR (OPS).....	6-54
COOLANT TEMPERATURE SENSOR (CTS).....	3-38	OIL SEPARATOR.....	6-21
CRANKSHAFT POSITION SENSOR (CPS).....	3-39	OIL SEPARATOR COVER.....	6-22
CRUISE SWITCH.....	3-41	OIL SEPARATOR PRESSURE SWITCH/SENSOR (OSPS).....	6-55
ENGINE CONTROL MODULE (EMS ECU, ECU OR ECM).....	3-35	OIL SPRAY JET/NOZZLE.....	6-24
EXHAUST GAS TEMPERATURE SENSOR (EGTS).....	3-42	OIL STRAINERS.....	6-24
FUEL INJECTION BASICS.....	3-21	OIL SUCTION PUMP.....	6-25
FUEL RAIL & INJECTORS.....	3-29	PISTONS, CONNECTING RODS & CRANKSHAFT.....	6-47
GENERAL INFORMATION.....	3-21	PTO HOUSING & STATOR.....	6-13
IDLE AIR CONTROL VALVE (IACV).....	3-42	ROCKER ARMS & SHAFT.....	6-33
IDLE BYPASS VALVE (IBV).....	3-43	SUPERCHARGER.....	6-27
KNOCK SENSOR (KS).....	3-43	TIMING CHAIN.....	6-38
MANIFOLD AIR PRESSURE SENSOR (MAPS).....	3-45	TOPS SWITCH.....	6-58
MANIFOLD AIR TEMPERATURE SENSOR (MATS).....	3-46	ENGINE MOUNTS.....	6-7
OIL PRESSURE SWITCH/SENSOR (OPS).....	3-47	REMOVAL & INSTALLATION.....	6-7
OIL SEPARATOR PRESSURE SWITCH/SENSOR (OSPS).....	3-49	ENGINE OIL.....	2-18
SELF-DIAGNOSTIC MODE CHARTS.....	3-77	OIL LEVEL CHECK.....	2-18
SELF-DIAGNOSTIC SYSTEM.....	3-57	OIL & FILTER CHANGE.....	2-19
THROTTLE ACCELERATOR SENSOR (TAS).....	3-51	ENGINE REFINISHING & OVERHAUL.....	6-60
THROTTLE BODY ASSEMBLY.....	3-34	GENERAL INFORMATION.....	6-60
THROTTLE POSITION SENSOR (TPS).....	3-52	ENGINE & DRIVE MAINTENANCE.....	2-2
TOPS SWITCH.....	3-54	AIR FILTER/FLAME ARRESTOR.....	2-3
TROUBLE CODE & SYMPTOM CHARTS.....	3-58	BEFORE/AFTER EACH USE.....	2-2
TROUBLESHOOTING.....	3-28	CHECKS & ADJUSTMENTS.....	2-15
ELECTRONIC IGNITION & CHARGING SYSTEMS.....	4-10		

COOLING SYSTEM.....	2-4	FUEL, WATER, OIL & BREATHER LINES.....	2-12
CYLINDER COMPRESSION.....	2-7	FUEL FILTER.....	2-3
DRAIN PLUGS.....	2-13	DESCRIPTION & OPERATION.....	2-3
FUEL, WATER, OIL & BREATHER LINES.....	2-12	REMOVAL & INSTALLATION.....	2-4
FUSES.....	2-13	FUEL INJECTION BASICS.....	3-21
IDLE SPEED & MIXTURE.....	2-12	INTELLIGENT THROTTLE CONTROL (ITC).....	3-28
IGNITION TIMING.....	2-12	FUEL LEVEL SENSOR.....	3-17
JET PUMP.....	2-12	REMOVAL & INSTALLATION.....	3-17
SERIAL NUMBERS.....	2-2	FUEL PUMP MODULE.....	3-12
SPARK PLUGS.....	2-8	REMOVAL & INSTALLATION.....	3-12
FUEL FILTER.....	2-3	TESTING.....	3-14
THERMOSTAT.....	2-7	FUEL RAIL & INJECTORS.....	3-29
VALVE CLEARANCE.....	2-12	REMOVAL, DISASSEMBLY & INSTALLATION.....	3-29
EXHAUST GAS TEMPERATURE SENSOR (EGTS).....	3-42, 5-8	TESTING.....	3-31
REMOVAL & INSTALLATION.....	3-42, 5-8	FUEL SYSTEM PRESSURIZATION.....	3-4
TESTING.....	3-42, 5-8	GENERAL INFORMATION/CHECKING.....	3-4
EXHAUST MANIFOLD.....	5-5, 6-9	RELIEVING FUEL SYSTEM PRESSURE.....	3-5
REMOVAL & INSTALLATION.....	5-5, 6-9	FUEL SYSTEM SERVICE CAUTIONS.....	3-2
2002-07 MODELS.....	5-5	FUEL TANK.....	3-7
2008-11 MODELS.....	5-6	REMOVAL & INSTALLATION.....	3-7
EXHAUST OUTLET/ADAPTER PIPE.....	5-9	FUEL TANK & LINES.....	3-6
REMOVAL & INSTALLATION.....	5-9	FUEL LEVEL SENSOR.....	3-17
2002-03 MODELS.....	5-9	FUEL PUMP MODULE.....	3-12
2004-07 MODELS.....	5-10	FUEL TANK.....	3-7
2008-11 MODELS.....	5-10	GENERAL INFORMATION.....	3-6
EXHAUST PIPE.....	5-6	FUEL & COMBUSTION BASICS.....	3-2
REMOVAL & INSTALLATION.....	5-6	FUEL.....	3-2
2002-03 MODELS.....	5-6	FUEL SYSTEM PRESSURIZATION.....	3-4
2004-07 MODELS.....	5-7	FUEL SYSTEM SERVICE CAUTIONS.....	3-2
2008-11 MODELS.....	5-8	GENERAL INFORMATION.....	3-2
EXHAUST SYSTEM.....	5-2	FUSE BOX.....	4-9
DESCRIPTION & OPERATION.....	5-2	REMOVAL & INSTALLATION.....	4-9
EXHAUST GAS TEMPERATURE SENSOR (EGTS).....	5-8	FUSES.....	2-13
EXHAUST MANIFOLD.....	5-5	2002-06 MODELS.....	2-13
EXHAUST OUTLET/ADAPTER PIPE.....	5-9	2007 & LATER MODELS.....	2-14
EXHAUST PIPE.....	5-6	HAND TOOLS.....	1-19
MUFFLER.....	5-11	BREAKER BARS.....	1-21
RESONATOR.....	5-13	HAMMERS.....	1-22
FASTENERS, MEASUREMENTS & CONVERSIONS.....	1-27	PLIERS.....	1-22
BOLTS, NUTS & OTHER THREADED RETAINERS.....	1-27	SCREWDRIVERS.....	1-22
STANDARD & METRIC MEASUREMENTS.....	1-27	SOCKET SETS.....	1-9
TORQUE.....	1-27	TORQUE WRENCHES.....	1-20
FIRST AID KIT.....	1-10	WRENCHES.....	1-21
FLUID DISPOSAL.....	2-18	HANDLEBARS & STEERING COVERS.....	8-2
FLUIDS & LUBRICANTS.....	2-18	REMOVAL & INSTALLATION.....	8-2
ENGINE OIL.....	2-18	HELM & STEERING.....	8-2
FLUID DISPOSAL.....	2-18	HANDLEBARS & STEERING COVERS.....	8-2
FUEL & OIL RECOMMENDATIONS.....	2-18	OFF-POWER ASSISTED STEERING (OPAS).....	8-13
JET PUMP/INTERMEDIATE HOUSING.....	2-20	OFF-THROTTLE ASSISTED STEERING (OTAS).....	8-19
LUBRICATION POINTS.....	2-21	STEERING ASSEMBLY.....	8-6
FRONT SUSPENSION ARM.....	8-28	HOOD/STORAGE COMPARTMENT/FRONT COVER.....	8-20
REMOVAL & INSTALLATION.....	8-28	REMOVAL & INSTALLATION.....	8-20
SHAFT REPLACEMENT.....	8-28	2006-11 GTI MODELS.....	8-20
FUEL.....	3-2	HOW TO USE THIS MANUAL.....	1-2
ALCOHOL-BLENDED FUELS.....	3-3	AVOIDING THE MOST COMMON MISTAKES.....	1-3
CHECKING FOR STALE/CONTAMINATED FUEL.....	3-3	AVOIDING TROUBLE.....	1-2
GENERAL INFORMATION.....	3-2	CAN YOU DO IT?.....	1-2
HIGH ALTITUDE OPERATION.....	3-3	DIRECTIONS & LOCATIONS.....	1-2
OCTANE RATING.....	3-2	MAINTENANCE OR REPAIR?.....	1-2
THE BOTTOM LINE WITH FUELS.....	3-3	PROFESSIONAL HELP.....	1-2
VAPOR PRESSURE.....	3-3	PURCHASING PARTS.....	1-3
FUEL & OIL RECOMMENDATIONS.....	2-18	WHERE TO BEGIN.....	1-2
FUEL.....	2-18	HULL & BODY.....	8-19
OIL.....	2-18	DECK EXTENSION.....	8-19

8-36 MASTER INDEX

HOOD/STORAGE COMPARTMENT/FRONT COVER	8-20	TESTING	3-44, 4-25
MOVING DECK & BOARDING PLATFORM	8-24	LATERAL BELLOWS	8-30
HYDRAULIC PUMP	8-29	REMOVAL & INSTALLATION	8-30
FLUID LEVEL CHECK	8-29	LATERAL SUPPORT	8-30
REMOVAL & INSTALLATION	8-29	REMOVAL & INSTALLATION	8-30
iBR GATE, STEERING NOZZLE & VTS RING	7-22	LUBRICATION POINTS	2-21
iBR GATE BACKLASH	7-23	JET THRUST NOZZLE	2-21
REMOVAL & INSTALLATION	7-22	SHIFT & STEERING CABLES	2-21
IDLE AIR CONTROL VALVE (IACV)	3-42	THROTTLE CABLE	2-21
REMOVAL & INSTALLATION	3-42	MANIFOLD AIR PRESSURE SENSOR (MAPS)	3-45
TESTING	3-43	REMOVAL & INSTALLATION	3-46
IDLE BYPASS VALVE (IBV)	3-43	TESTING	3-46
REMOVAL & INSTALLATION	3-43	MANIFOLD AIR TEMPERATURE SENSOR (MATS)	3-46
TESTING	3-43	REMOVAL & INSTALLATION	3-47
IDLE SPEED & MIXTURE	2-12	TESTING	3-47
IGNITION TIMING	2-12	MEASURING TOOLS	1-25
IGNITION COILS	4-22	DEPTH GAUGES	1-26
REMOVAL & INSTALLATION	4-22	DIAL INDICATORS	1-25
TESTING	4-22	MICROMETERS & CALIPERS	1-25
IMPELLER	5-20	TELESCOPING GAUGES	1-26
REMOVAL & INSTALLATION	5-20	MOVING DECK & BOARDING PLATFORM	8-24
INLET GRATE & RIDING PLATE	7-7	REMOVAL & INSTALLATION	8-24
REMOVAL & INSTALLATION	7-7	TILTING THE MOVING DECK	8-25
INLET GRATE, RIDE PLATE & JET PUMP SUPPORT	7-9	MPEM BOX	4-9
REMOVAL & INSTALLATION	7-9	REMOVAL & INSTALLATION	4-9
INSIDE THE VESSEL	2-22	MUFFLER	5-11
INTELLIGENT SUSPENSION (IS)	8-25	REMOVAL & INSTALLATION	5-11
ACTUATOR	8-25	OFF-POWER ASSISTED STEERING (OPAS)	8-13
COIL SPRINGS	8-26	CYLINDER SUPPORT	8-16
DESCRIPTION & OPERATION	8-25	DESCRIPTION & OPERATION	8-13
FRONT SUSPENSION ARM	8-28	OPAS FILTER	8-16
HYDRAULIC PUMP	8-29	OPAS VALVE	8-16
IS MODULE	8-29	SIDE VANE	8-17
LATERAL BELLOWS	8-30	TIE ROD & SEALED TUBE	8-18
LATERAL SUPPORT	8-30	OFF-THROTTLE ASSISTED STEERING (OTAS)	8-19
REAR SUSPENSION ARM	8-30	DESCRIPTION & OPERATION	8-19
SHOCK ABSORBER	8-32	OTAS SWITCH	8-19
SUSPENSION POSITION SENSOR	8-32	OTAS MAGNET REPLACEMENT	8-19
iS MODULE	8-29	OIL COOLER	6-17
REMOVAL & INSTALLATION	8-29	REMOVAL & INSTALLATION	6-17
JET DRIVE	7-2	OIL FILTER BYPASS	6-17
DRIVESHAFT	7-2	REMOVAL & INSTALLATION	6-17
GENERAL INFORMATION	7-2	OIL PRESSURE PUMP	6-18
iBR GATE, STEERING NOZZLE & VTS RING	7-22	INSPECTION	6-18
INLET GRATE & RIDING PLATE	7-7	INSTALLATION	6-19
INLET GRATE, RIDE PLATE & JET PUMP SUPPORT	7-9	PRESSURE TEST	6-19
JET PUMP ASSEMBLY	7-10	REMOVAL	6-18
JET PUMP SUPPORT	7-24	ROTARY SEAL & OIL PUMP SEAL REPLACEMENT	6-20
REVERSE GATE	7-26	OIL PRESSURE REGULATOR	6-21
VARIABLE TRIM SYSTEM (VTS)	7-26	REMOVAL & INSTALLATION	6-21
VENTURI & JET/STEERING NOZZLE	7-28	OIL PRESSURE SWITCH/SENSOR (OPS)	3-47, 6-54
JET PUMP ASSEMBLY		REMOVAL & INSTALLATION	3-47, 6-54
DISASSEMBLY & ASSEMBLY	7-13	TESTING	3-48, 6-54
IMPELLER INSPECTION	2-12, 7-21	OIL SEPARATOR	6-21
REMOVAL & INSTALLATION	7-10	REMOVAL & INSTALLATION	6-21
REVERSE CABLE ADJUSTMENT	7-12	OIL SEPARATOR COVER	6-22
JET PUMP SUPPORT	7-24	REMOVAL & INSTALLATION	6-33
REMOVAL & INSTALLATION	7-24	OIL SEPARATOR PRESSURE SWITCH/SENSOR (OSPS)	3-49, 6-55
JET PUMP/INTERMEDIATE HOUSING	2-20	REMOVAL & INSTALLATION	3-49, 6-55
LUBRICATION	2-20	TESTING	3-49, 6-55
OIL CHANGE	2-20	OIL SPRAY JET/NOZZLE	6-24
KNOCK SENSOR (KS)	3-43, 4-24	REMOVAL & INSTALLATION	6-24
REMOVAL & INSTALLATION	3-43, 4-24	OIL STRAINERS	6-24
		REMOVAL & INSTALLATION	6-24

OIL SUCTION PUMP	6-25	REMOVAL & INSTALLATION	5-21
REMOVAL & INSTALLATION	6-25	SAFETY IN SERVICE	1-13
OPAS FILTER	8-16	DO'S	1-13
OPAS VALVE	8-16	DON'TS	1-13
DISASSEMBLY & ASSEMBLY	8-17	SAFETY TOOLS	1-17
REMOVAL & INSTALLATION	8-16	EYE & EAR PROTECTION	1-17
OTAS SWITCH	8-19	WORK CLOTHES	1-17
REPLACEMENT	8-19	WORK GLOVES	1-17
TESTING	8-19	SELF-DIAGNOSTIC MODE CHARTS	3-77
OTAS MAGNET REPLACEMENT	8-19	SELF-DIAGNOSTIC SYSTEM	3-57
PISTONS, CONNECTING RODS & CRANKSHAFT	6-47	READING TROUBLE CODES	3-57
INSPECTION	6-50	SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	3-34, 4-52
REMOVAL & INSTALLATION	6-47	TESTING ELECTRONIC COMPONENTS	3-34, 4-52
PREPPING FOR STORAGE	2-26	SERIAL NUMBERS	2-2
THE GREAT ETHANOL DEBATE	2-26	ENGINE IDENTIFICATION NUMBER (EIN)	2-2
WHERE TO STORE YOUR PWC	2-26	HULL IDENTIFICATION NUMBER (HIN)	2-2
POWER (MAIN OR CUT-OUT) RELAY	4-53	SHOCK ABSORBER	8-32
TESTING	4-53	REMOVAL & INSTALLATION	8-32
PTO COUPLING (DRIVESHAFT/CRANKSHAFT)	4-33	SHOP EQUIPMENT	1-17
REMOVAL & INSTALLATION	4-33	CHEMICALS	1-17
PTO HOUSING & STATOR	4-26, 6-13	SAFETY TOOLS	1-17
REMOVAL & INSTALLATION	4-26, 6-13	SIDE VANE	8-17
PTO SEAL	4-32	ADJUSTMENT	8-18
STATOR TESTING	4-31	REMOVAL & INSTALLATION	8-17
PWC MAINTENANCE	2-22	SPARK PLUGS	2-8
ANODES (ZINGS)	2-22	HEAT RANGE	2-8
BATTERY	2-23	INSPECTION & GAPPING	2-12
INSIDE THE VESSEL	2-22	READING SPARK PLUGS	2-9
THE PWC'S EXTERIOR	2-22	REMOVAL & INSTALLATION	2-9
REAR SUSPENSION ARM	8-30	SERVICE	2-8
LOWER SHAFT REPLACEMENT	8-31	SPECIFICATIONS	
REMOVAL & INSTALLATION	8-30	CONVERSION FACTORS	1-28
UPPER SHAFT REPLACEMENT	8-31	ELECTRONIC COMPONENT RESISTANCE	4-69
RECTIFIER/REGULATOR	4-33	ENGINE	6-63
REMOVAL & INSTALLATION	4-34	GENERAL ENGINE	2-41
TESTING	4-34	MAINTENANCE INTERVALS	2-47
REGULATIONS FOR YOUR BOAT	1-4	METRIC BOLTS - TYPICAL TORQUE VALUES	1-28
CAPACITY INFORMATION	1-4	MODEL IDENTIFICATION	2-38
CERTIFICATE OF COMPLIANCE	1-5	STARTER	4-69
DOCUMENTING OF VESSELS	1-4	TUNE-UP & CAPACITIES	2-44
HULL IDENTIFICATION NUMBER	1-4	U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28
LENGTH OF BOATS	1-4	SPEED SENSOR	4-55
NUMBERING OF VESSELS	1-4	TESTING	4-55
REGISTRATION OF BOATS	1-4	SPRING COMMISSIONING	2-29
SALES & TRANSFERS	1-4	SPRING COMMISSIONING CHECKLIST	2-29
VENTILATION	1-5	SPRING COMMISSIONING CHECKLIST	2-29
VENTILATION SYSTEMS	1-5	STARTER DRIVE GEAR	4-52
REQUIRED SAFETY EQUIPMENT	1-5	REMOVAL & INSTALLATION	4-52
FIRE EXTINGUISHERS	1-6	STARTER MOTOR	4-49
PERSONAL FLOTATION DEVICES	1-7	ASSEMBLY	4-50
SOUND PRODUCING DEVICES	1-9	CLEANING & INSPECTION	4-50
TYPES OF FIRES	1-5	DESCRIPTION	4-49
VISUAL DISTRESS SIGNALS	1-9	DISASSEMBLY	4-49
WARNING SYSTEM	1-7	REMOVAL & INSTALLATION	4-49
RESONATOR	5-13	STARTER SOLENOID	4-44
REMOVAL & INSTALLATION	5-13	REMOVAL & INSTALLATION	4-44
REVERSE GATE	7-26	TESTING	4-46
REMOVAL & INSTALLATION	7-26	STARTING SYSTEM	4-37
ROCKER ARMS & SHAFT	6-33	DESCRIPTION & OPERATION	4-37
REMOVAL & INSTALLATION	6-33	STARTER DRIVE GEAR	4-52
ROTOR, ENCODER/TRIGGER WHEEL & RING GEAR (FLYWHEEL)	4-35	STARTER MOTOR	4-49
INSPECTION	4-36	STARTER SOLENOID	4-44
REMOVAL & INSTALLATION	4-35	STOP/START SWITCH	4-43
ROTARY SEAL & OIL PUMP SEAL	5-21	TROUBLESHOOTING	4-42

8-38 MASTER INDEX

STEERING ASSEMBLY	8-6	TESTING	3-55, 6-58
REMOVAL & INSTALLATION	8-6	TROUBLE CODE & SYMPTOM CHARTS	3-58
STEERING ALIGNMENT	8-12	TROUBLESHOOTING	
STOP/START SWITCH	4-43	BASIC OPERATING PRINCIPLES	1-13
TESTING & VERIFICATION	4-43	COOLING SYSTEM	5-16
SUPERCHARGER	6-27	EFI	3-28
INSPECTION	6-32	ELECTRICAL SYSTEMS	4-6
REMOVAL & INSTALLATION	6-27	GENERAL ENGINE	2-29
SUSPENSION POSITION SENSOR	8-32	IGNITION & CHARGING SYSTEM	4-16
REMOVAL & INSTALLATION	8-32	STARTING SYSTEM	4-42
TEST EQUIPMENT	4-5	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS . 4-2	
JUMPER WIRES	4-5	BASIC ELECTRICAL THEORY	4-2
MULTI-METERS	4-6	ELECTRICAL COMPONENTS	4-2
TEST LIGHTS	4-5	ELECTRICAL SYSTEM PRECAUTIONS	4-9
THE PWC'S EXTERIOR	2-22	ELECTRICAL TESTING	4-7
HULL	2-22	MPEM/FUSE BOX	4-9
BELOW WATERLINE	2-22	TEST EQUIPMENT	4-5
THERMOSTAT		TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6
DESCRIPTION & OPERATION	2-7, 5-17	WIRE & CONNECTOR REPAIR	4-8
REMOVAL & INSTALLATION	5-18	VALVE CLEARANCE	2-12
TESTING	2-7, 5-18	VARIABLE TRIM SYSTEM (VTS)	7-26
THROTTLE ACCELERATOR SENSOR (TAS)	3-51	DISASSEMBLY & ASSEMBLY	7-28
REMOVAL & INSTALLATION	3-51	REMOVAL & INSTALLATION	7-26
TESTING	3-51	VENTURI & JET/STEERING NOZZLE	7-28
THROTTLE BODY ASSEMBLY	3-34	REMOVAL & INSTALLATION	7-28
REMOVAL & INSTALLATION	3-34	VHF-FM RADIO	1-10
THROTTLE POSITION SENSOR (TPS)	3-52	WARNING HORN	4-56
CLOSED THROTTLE & ACTUATOR RESET	3-54	REMOVAL & INSTALLATION	4-56
REMOVAL & INSTALLATION	3-52	TESTING	4-56
RESISTANCE TEST	3-53	WATER PUMP HOUSING & IMPELLER	5-20
VOLTAGE TEST - 2002-09 MODELS (EXC. iS) & 2010-11 GTI/WAKE 155 MODELS	3-53	REMOVAL & INSTALLATION	5-20
TIE ROD & SEALED TUBE	8-18	WATER TEMPERATURE SENSOR	4-57
REMOVAL & INSTALLATION	8-18	TESTING	4-57
TIMING CHAIN	6-38	WINTER STORAGE	2-26
REMOVAL & INSTALLATION	6-38	GENERAL INFORMATION	2-26
TOOLS	1-19	PREPPING FOR STORAGE	2-26
ELECTRONIC TOOLS	1-24	WINTER STORAGE CHECKLIST	2-27
HAND TOOLS	1-19	WINTER STORAGE CHECKLIST	2-27
MEASURING TOOLS	1-25	2002-07 MODELS	2-27
OTHER COMMON TOOLS	1-22	2008-11 MODELS	2-28
SPECIAL TOOLS	1-23	WIRE & CONNECTOR REPAIR	4-8
TOOLS & SPARE PARTS	1-12	WIRING DIAGRAMS	4-57
TOPS SWITCH	3-54, 6-58	INDEX	4-57
REMOVAL & INSTALLATION	3-54, 6-58		