

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE AND TUNE-UP

LUBRICATION SERVICE	2-5
ENGINE MAINTENANCE	2-9
BOAT MAINTENANCE	2-36
TUNE-UP	2-39
TIMING & SYNCHRONIZATION	2-49
VALVE CLEARANCE (4-STROKE MODELS)	2-73
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-78
CLEARING A SUBMERGED MOTOR	2-82
SPECIFICATIONS	2-83

3

FUEL SYSTEMS

FUEL SYSTEM BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-11
ELECTRONIC FUEL INJECTION SYSTEMS (EFI/TLDI)	3-35
SPECIFICATIONS	3-75

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS (ELECTRONIC)	4-8
CHARGING CIRCUIT	4-30
STARTING CIRCUIT	4-41
WARNING SYSTEM	4-50
WIRING DIAGRAMS	4-55
SPECIFICATIONS	4-106

5

LUBRICATION & COOLING

AUTOMIX OILING SYSTEM (2-STROKE MOTORS)	5-2
LUBRICATION SYSTEM (4-STROKE MOTORS)	5-11
COOLING SYSTEM	5-17
SPECIFICATIONS	5-36

CONTENTS

POWERHEAD 6-2
POWERHEAD – 2-STROKE 6-5
POWERHEAD – 4-STROKE 6-10
POWERHEAD REFINISHING 6-59
POWERHEAD BREAK-IN 6-73
SPECIFICATIONS 6-74

POWERHEAD

6

LOWER UNIT 7-2
GEARCASE 7-4

LOWER UNIT

7

MECHANICAL TILT (UNASSISTED OR GAS-ASSIST) 8-2
POWER TILT/TRIM SYSTEMS 8-12

TRIM & TILT SYSTEMS

8

REMOTE CONTROLS 9-2
TILLER HANDLE 9-2
CONTROL CABLES 9-12

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-17

MASTER INDEX

<p>AIR COMPRESSOR - TLDI 3-57 DESCRIPTION & OPERATION 3-57 OVERHAUL 3-58 REMOVAL & INSTALLATION 3-57</p> <p>AIR FILTER (TLDI AIR COMPRESSOR) 2-32 INSPECTION & SERVICE 2-32</p> <p>AIR PRESSURE REGULATOR (TLDI ONLY) 3-59 DESCRIPTION & OPERATION 3-59 REMOVAL & INSTALLATION 3-59 TESTING 3-59</p> <p>ANODES 2-29 INSPECTION 2-30 LOCATION & GENERAL INFORMATION 2-29 SERVICING 2-30</p> <p>AUTOMIX BLEEDING, VERIFICATION & TROUBLESHOOTING 5-2 BLEEDING THE OIL SYSTEM 5-2 TESTING THE ELECTRIC PUMP 5-3 VERIFYING THE PUMP IS WORKING 5-2</p> <p>AUTOMIX CHECK VALVE (CARBURETED MOTORS ONLY) 5-3 CHECKING 5-3</p> <p>AUTOMIX OIL PUMP & TANK ASSEMBLY 5-3 REMOVAL & INSTALLATION 5-3</p> <p>AUTOMIX OILING SYSTEM - 2-STROKE MOTORS 5-2 AUTOMIX BLEEDING, VERIFICATION & TROUBLESHOOTING 5-2 AUTOMIX CHECK VALVE (CARBURETED MOTORS ONLY) 5-3 AUTOMIX OIL PUMP & TANK ASSEMBLY 5-3 DESCRIPTION & OPERATION 5-2 OIL PUMP & SYSTEM LINES 5-6 OIL RECIRCULATION & VENT HOSES 5-8</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK: THE WATER ANALOGY 4-2 OHM'S LAW 4-2</p> <p>BATTERY CABLES 4-41 CHARGERS 4-40 CONSTRUCTION 4-39 LOCATION 4-40 MAINTENANCE 2-36 MARINE BATTERIES 4-39 RATINGS 4-39 SAFETY PRECAUTIONS 4-40 STORAGE 2-38 TESTING 2-37</p> <p>BEFORE/AFTER EACH USE 2-4 VISUALLY INSPECTING THE BOAT & MOTOR 2-4</p> <p>BOAT MAINTENANCE 2-36 BATTERIES 2-36 FIBERGLASS HULL 2-38</p> <p>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .. 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-10 INSTALLATION 1-10 PRECAUTIONS 1-11 SELECTION 1-10 FIRST AID KIT 1-10 OAR/PADDLE (SECOND MEANS OF PROPULSION) 1-10 TOOLS & SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 CAPACITY INFORMATION 1-4 CERTIFICATE OF COMPLIANCE 1-4 DOCUMENTING OF VESSELS 1-4 HULL IDENTIFICATION NUMBER 1-4 LENGTH OF BOATS1-4 NUMBERING OF VESSELS 1-4 REGISTRATION OF BOATS 1-4 SALES & TRANSFERS 1-4 VENTILATION 1-4 VENTILATION SYSTEMS</p>	<p>REQUIRED SAFETY EQUIPMENT 1-5 FIRE EXTINGUISHERS 1-5 PERSONAL FLOTATION DEVICES 1-7 SOUND PRODUCING DEVICES 1-8 TYPES OF FIRES 1-5 VISUAL DISTRESS SIGNALS 1-8 WARNING SYSTEM 1-7</p> <p>BREAKING IN A POWERHEAD 6-73 CARBURETED 2-STROKE MOTORS 6-73 TLDI 2-STROKE MOTORS 6-74 4-STROKE MOTORS 6-74</p> <p>CARBURETED FUEL SYSTEM 3-11 CARBURETOR - 2.5/3.5 HP (2-STROKE) 3-15 CARBURETOR - 2-6 HP (4-STROKE) 3-17 CARBURETOR - 5-40 HP (2-STROKE, 1 & 2-CYL) 3-20 CARBURETOR - 8-30 HP (4-STROKE) 3-22 CARBURETOR - 60/70 HP (2-STROKE, 2-CYL) & 40-140 HP (2-STROKE, 3- OR 4- CYL) 3-25 CARBURETOR SERVICE TIPS 3-14 CLEANING & INSPECTION 3-28 DESCRIPTION & OPERATION 3-12 ELECTRIC CHOKE SOLENOID 3-32 ELECTRIC FUEL PRIMER 3-33 FUEL PUMP 3-29 IDLE MIXTURE ADJUSTMENTS 3-15 TROUBLESHOOTING 3-13</p> <p>CARBURETOR 2.5/3.5 HP (2-STROKE) 3-15 2-6 HP (4-STROKE) 3-17 5-40 HP (2-STROKE, 1 & 2-CYL) 3-20 8-30 HP (4-STROKE) 3-22 60/70 HP (2-STROKE, 2-CYL) & 40-140 HP (2-STROKE, 3- OR 4-CYL) 3-25 CLEANING & INSPECTION 3-28 SERVICE TIPS 3-14</p> <p>CD UNIT (IGNITION MODULE) - CARBURETED ENGINES ONLY 4-19 REMOVAL & INSTALLATION 4-25 TESTING 4-19</p> <p>CHARGING CIRCUIT 4-30 BATTERY 4-36 GENERAL INFORMATION 4-30 RECTIFIER OR REGULATOR/RECTIFIER 4-35 STATOR/BATTERY CHARGE COIL 4-34 TROUBLESHOOTING 4-32</p> <p>CLEARING A SUBMERGED MOTOR 2-82</p> <p>COMPRESSION TESTS 2-41 OVERHAUL LEAKAGE CHECK 2-42 TUNE-UP COMPRESSION CHECK 2-41</p> <p>CONNECTING RODS 6-63 INSPECTION 6-63</p> <p>CONTROL CABLES 9-12 RIGGING 9-12</p> <p>COOLING SYSTEM SCHEMATICS 5-18 DESCRIPTION & OPERATION 5-17 FLUSHING THE SYSTEM 2-10 SCHEMATICS 5-18 THERMOSTAT 5-28 TROUBLESHOOTING 5-25 WATER PUMP 5-30</p> <p>COOLING SYSTEM SCHEMATICS 5-18</p> <p>CRANKSHAFT 6-61 INSPECTION 6-61 MEASURING BEARING CLEARANCE USING PLASTIGAGE® 6-62</p> <p>CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL 3-68 REMOVAL & INSTALLATION 3-69 TESTING 3-68</p>
--	---

10-18 MASTER INDEX

CYLINDER BLOCK	6-66	SELF DIAGNOSTIC SYSTEM	3-38
BLOCK & CYLINDER HEAD WARPAGE	6-68	SENSOR & CIRCUIT RESISTANCE TESTS	3-45
HONING CYLINDER WALLS	6-67	TEMPERATURE SENSORS	3-69
INSPECTION	6-67	THROTTLE BODY & INTAKE ASSEMBLY	3-46
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-69	THROTTLE POSITION SENSOR (TPS)	3-67
CHECKING FOR VALVE LEAKAGE	6-69	TROUBLESHOOTING CHARTS	3-42
CHECKING THE CAMSHAFT	6-69	TROUBLESHOOTING ELECTRONIC FUEL INJECTION	3-38
CHECKING THE ROCKER ARMS & SHAFTS	6-71	TWO-STROKE LOW-PRESSURE DIRECT INJECTION (TLDI)	3-37
CHECKING THE VALVE ASSEMBLIES	6-71	VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-49
DE-CARBONING THE PISTONS	2-40	ELECTRONIC SAFETY GOVERNOR (60/70 HP 2-CYL ONLY)	4-30
AIR COMPRESSOR - TLDI	3-57	TESTING & SERVICE	4-30
AIR PRESSURE REGULATOR (TLDI ONLY)	3-59	EMERGENCY STOP SWITCH	9-8
AUTOMIX SYSTEM	5-2	ENGINE CONTROL UNIT (ECU)	3-66
CARBURETOR	3-12	REMOVAL & INSTALLATION	3-66
COOLING SYSTEM	5-17	ENGINE COVER LATCHES	2-5
FUEL/AIR RAIL & INJECTORS (TLDI)	3-60	LUBRICATION	2-6
GAS ASSIST TILT SYSTEMS	8-3	RECOMMENDED LUBRICANT	2-5
HAND REWIND STARTER	10-2	ENGINE COVERS	2-9
IGNITION COILS	4-25	REMOVAL & INSTALLATION	2-9
IGNITION SYSTEMS	4-9	ENGINE IDENTIFICATION	2-2
LUBRICATION SYSTEM	5-11	ENGINE MODEL CODE & SERIAL NUMBER	2-3
MANUAL TILT SYSTEMS	8-2	ENGINE MAINTENANCE	2-9
POWER TRIM/TILT SYSTEMS	8-12	AIR FILTER (TLDI AIR COMPRESSOR)	2-32
REMOTE CONTROLS	9-8	ANODES (ZINCS)	2-29
STARTING CIRCUIT	4-41	COOLING SYSTEM	2-10
TILLER HANDLE	9-2	DRIVE BELT (TLDI COMPRESSOR)	2-30
WARNING SYSTEM	4-50	ENGINE COVERS	2-9
DRIVE BELT (TLDI COMPRESSOR)	2-30	ENGINE OIL (2-STROKE)	2-13
INSPECTION	2-31	ENGINE OIL & FILTER (4-STROKE)	2-15
REMOVAL & INSTALLATION	2-31	FUEL FILTER	2-20
ELECTRIC CHOKE SOLENOID	3-32	GEARCASE (LOWER UNIT) OIL	2-18
REMOVAL & INSTALLATION	3-33	OIL FILTER (2-STROKE TLDI OR AUTOMIX MODELS)	2-32
TESTING	3-32	PROPELLER	2-23
ELECTRIC FUEL PRIMER	3-33	TIMING BELT	2-33
REMOVAL & INSTALLATION	3-33	ENGINE MOUNT CLAMP SCREWS	2-6
TESTING	3-33	LUBRICATION	2-6
ELECTRIC STARTER MOTOR PINION	2-5	RECOMMENDED LUBRICANT	2-6
LUBRICATION	2-5	ENGINE OIL (2-STROKE)	2-13
RECOMMENDED LUBRICANT	2-5	FILLING	2-13
ELECTRICAL COMPONENTS	4-2	FUEL:OIL RATIO	2-13
GROUND	4-3	OIL RECOMMENDATIONS	2-13
LOAD	4-4	ENGINE OIL & FILTER (4-STROKE)	2-15
POWER SOURCE	4-2	CHECKING OIL LEVEL	2-15
PROTECTIVE DEVICES	4-3	OIL CHANGE & FILTER SERVICE	2-16
SWITCHES & RELAYS	4-4	OIL RECOMMENDATIONS	2-15
WIRING & HARNESSSES	4-4	ENGINE TEMPERATURE SENSORS (EFI/TLDI)	4-51
ELECTRICAL SYSTEM PRECAUTIONS	4-8	ENGINE TEMPERATURE SWITCHES (CARBURETED)	4-51
ELECTRICAL TESTING	4-7	REMOVAL & INSTALLATION	4-52
OPEN CIRCUITS	4-7	TESTING	4-51
RESISTANCE	4-7	EXCITER/CHARGE COIL	4-13
SHORT CIRCUITS	4-8	REMOVAL & INSTALLATION	4-14
VOLTAGE	4-7	TESTING	4-13
VOLTAGE DROP	4-7	EXHAUST COVER	6-60
ELECTRONIC FUEL INJECTION SYSTEMS (EFI/TLDI)	3-35	INSPECTION	6-60
AIR COMPRESSOR - TLDI	3-57	EXHAUST GASES	7-2
AIR PRESSURE REGULATOR (TLDI ONLY)	3-59	FASTENERS, MEASUREMENTS & CONVERSIONS	1-27
CRANKSHAFT POSITION SENSOR (CPS)/PULSER COIL	3-68	BOLTS, NUTS & OTHER THREADED RETAINERS	1-27
ENGINE CONTROL UNIT (ECU)	3-66	STANDARD & METRIC MEASUREMENTS	1-27
FUEL INJECTION BASICS	3-35	TORQUE	1-27
FUEL PRESSURE REGULATOR	3-59	FIBERGLASS HULL	2-38
FUEL RAIL & INJECTORS (EFI)	3-65	INSPECTION & CARE	2-38
FUEL/AIR RAIL & INJECTORS (TLDI)	3-60	FLYWHEEL	6-3
HIGH-PRESSURE FUEL FEED PUMP (FFP)	3-52	REMOVAL & INSTALLATION	6-3
IDLE SPEED CONTROL (ISC) VALVE (EFI ONLY)	3-74	FUEL	3-2
LOW-PRESSURE FUEL PUMP	3-54	ALCOHOL-BLENDED FUELS	4-3
MAIN RELAY (115 HP TLDI MODELS)	3-73	CHECKING FOR STALE/CONTAMINATED FUEL	3-4
MANIFOLD AIR PRESSURE (MAP) SENSOR	3-72	HIGH ALTITUDE OPERATION	4-3
NISSAN/TOHATSU 4-STROKE EFI	3-37	OCTANE RATING	3-2
		RECOMMENDATIONS	4-3
		VAPOR PRESSURE	4-3

<p>FUEL FILTER 2-20</p> <p>FUEL FILTER SERVICE 2-20</p> <p style="padding-left: 20px;">LOW PRESSURE FILTERS 2-20</p> <p style="padding-left: 20px;">HIGH PRESSURE EFI/TLDI FILTERS 2-22</p> <p>FUEL INJECTION BASICS 3-35</p> <p>FUEL LINES & FITTINGS 3-8</p> <p style="padding-left: 20px;">SERVICE 3-10</p> <p style="padding-left: 20px;">TESTING 3-8</p> <p>FUEL PRESSURE REGULATOR 3-59</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-60</p> <p style="padding-left: 20px;">TESTING 3-60</p> <p>FUEL PUMP 3-29</p> <p style="padding-left: 20px;">LOW-PRESSURE 3-54</p> <p style="padding-left: 20px;">HIGH-PRESSURE 3-52</p> <p style="padding-left: 20px;">OVERHAUL 3-56</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-55</p> <p style="padding-left: 20px;">TESTING 3-54</p> <p style="padding-left: 20px;">OVERHAUL 3-32</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-31</p> <p style="padding-left: 20px;">TESTING 3-30</p> <p>FUEL RAIL & INJECTORS (EFI) 3-65</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-66</p> <p style="padding-left: 20px;">TESTING 3-65</p> <p>FUEL SYSTEM BASICS 3-2</p> <p style="padding-left: 20px;">FUEL 3-2</p> <p style="padding-left: 20px;">FUEL SYSTEM PRESSURIZATION 3-4</p> <p style="padding-left: 20px;">FUEL SYSTEM SERVICE CAUTIONS 3-2</p> <p>FUEL SYSTEM PRESSURIZATION 3-4</p> <p style="padding-left: 20px;">PRESSURIZING THE FUEL SYSTEM (CHECKING FOR LEAKS) 3-5</p> <p style="padding-left: 20px;">RELIEVING FUEL SYSTEM PRESSURE (EFI/TLDI MOTORS ONLY) 3-5</p> <p>FUEL SYSTEM SERVICE CAUTIONS 3-2</p> <p>FUEL TANK 3-6</p> <p style="padding-left: 20px;">SERVICE 3-7</p> <p>FUEL TANK & LINES 3-6</p> <p style="padding-left: 20px;">FUEL LINES & FITTINGS 3-8</p> <p style="padding-left: 20px;">FUEL TANK 3-6</p> <p>FUEL/AIR RAIL & INJECTORS (TLDI) 3-60</p> <p style="padding-left: 20px;">DESCRIPTION & OPERATION 3-60</p> <p style="padding-left: 20px;">REMOVAL & INSTALLATION 3-62</p> <p style="padding-left: 20px;">TESTING DIRECT (AIR) INJECTORS RESISTANCE 3-61</p> <p style="padding-left: 20px;">TESTING THE FUEL INJECTORS 3-62</p> <p>GEARCASE - ALL</p> <p style="padding-left: 20px;">2.5/3.5 HP, 2-STROKE (NON-SHIFTING) 7-4</p> <p style="padding-left: 20px;">2-3.5 HP, 2 & 4-STROKE (SHIFTING) 7-8</p> <p style="padding-left: 20px;">5-70 HP (2-STROKE, 1 & 2-CYL) 7-15</p> <p style="padding-left: 20px;">4-8 HP (4-STROKE) 7-27</p> <p style="padding-left: 20px;">9.9-20 HP (4-STROKE) 7-36</p> <p style="padding-left: 20px;">25/30 HP (CARB & EFI, 4-STROKE) 7-50</p> <p style="padding-left: 20px;">40-140 HP 2-STROKE (3 & 4-CYL) 7-60</p> <p>GEARCASE - 2-STROKE</p> <p style="padding-left: 20px;">2.5/3.5 HP (NON-SHIFTING) 7-4</p> <p style="padding-left: 40px;">ASSEMBLY 7-7</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-6</p> <p style="padding-left: 40px;">DISASSEMBLY 7-5</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-4</p> <p style="padding-left: 40px;">SHIMMING 7-7</p> <p style="padding-left: 20px;">2-3.5 HP (SHIFTING) 7-8</p> <p style="padding-left: 40px;">ASSEMBLY 7-11</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-10</p> <p style="padding-left: 40px;">DISASSEMBLY 7-9</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-8</p> <p style="padding-left: 40px;">SHIMMING 7-14</p> <p style="padding-left: 20px;">5-70 HP (1 & 2-CYL) 7-15</p> <p style="padding-left: 40px;">ASSEMBLY 7-19</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-19</p> <p style="padding-left: 40px;">DISASSEMBLY 7-16</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-15</p> <p style="padding-left: 40px;">SHIMMING 7-23</p>	<p style="padding-left: 20px;">40-140 HP (3 & 4-CYL) 7-60</p> <p style="padding-left: 40px;">ASSEMBLY 7-70</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-65</p> <p style="padding-left: 40px;">DISASSEMBLY 7-61</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-60</p> <p style="padding-left: 40px;">SHIMMING 7-73</p> <p>GEARCASE - 4-STROKE</p> <p style="padding-left: 20px;">2-3.5 HP (SHIFTING) 7-8</p> <p style="padding-left: 40px;">ASSEMBLY 7-11</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-10</p> <p style="padding-left: 40px;">DISASSEMBLY 7-9</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-8</p> <p style="padding-left: 40px;">SHIMMING 7-14</p> <p style="padding-left: 20px;">4-9.8 HP 7-27</p> <p style="padding-left: 40px;">ASSEMBLY 7-31</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-31</p> <p style="padding-left: 40px;">DISASSEMBLY 7-28</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-27</p> <p style="padding-left: 40px;">SHIMMING 7-35</p> <p style="padding-left: 20px;">9.9-20 HP 7-36</p> <p style="padding-left: 40px;">ASSEMBLY 7-45</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-41</p> <p style="padding-left: 40px;">DISASSEMBLY 7-37</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-36</p> <p style="padding-left: 40px;">SHIMMING 7-48</p> <p style="padding-left: 20px;">25/30 HP (CARB & EFI) 7-50</p> <p style="padding-left: 40px;">ASSEMBLY 7-56</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 7-53</p> <p style="padding-left: 40px;">DISASSEMBLY 7-51</p> <p style="padding-left: 40px;">REMOVAL & INSTALLATION 7-50</p> <p style="padding-left: 40px;">SHIMMING 7-58</p> <p>GEARCASE OIL 2-18</p> <p style="padding-left: 20px;">CHECKING LEVEL & CONDITION 2-18</p> <p style="padding-left: 20px;">DRAINING & FILLING 2-19</p> <p style="padding-left: 20px;">OIL RECOMMENDATIONS 2-18</p> <p>GENERAL INFORMATION 2-2</p> <p style="padding-left: 20px;">BEFORE/AFTER EACH USE 2-4</p> <p style="padding-left: 20px;">ENGINE IDENTIFICATION 2-2</p> <p style="padding-left: 20px;">LOWER UNIT 7-2</p> <p style="padding-left: 20px;">MAINTENANCE COVERAGE 2-2</p> <p style="padding-left: 20px;">MAINTENANCE EQUALS SAFETY 2-2</p> <p style="padding-left: 20px;">OUTBOARDS ON SAIL BOATS 2-2</p> <p>HAND REWIND STARTER 10-2</p> <p style="padding-left: 20px;">DESCRIPTION & OPERATION 10-2</p> <p style="padding-left: 20px;">TROUBLESHOOTING 10-2</p> <p style="padding-left: 20px;">2.5/3.5 HP (2-STROKE) MOTORS 10-3</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-4</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-3</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-3</p> <p style="padding-left: 20px;">2/2.5/3.5 HP (4-STROKE) MOTORS 10-5</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-6</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-5</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-5</p> <p style="padding-left: 20px;">4/5/6 HP & 8/9.8 HP (4-STROKE) MOTORS 10-7</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-9</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-7</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-7</p> <p style="padding-left: 20px;">5-40 HP (2-STROKE, 2-CYL) MOTORS 10-9</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-12</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-10</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-9</p> <p style="padding-left: 20px;">9.9-30 HP (4-STROKE) MOTORS 10-13</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-13</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-13</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-13</p> <p style="padding-left: 20px;">40-70 HP (2-STROKE, 3-CYL) MOTORS 10-14</p> <p style="padding-left: 40px;">ASSEMBLY & INSTALLATION 10-15</p> <p style="padding-left: 40px;">CLEANING & INSPECTION 10-15</p> <p style="padding-left: 40px;">REMOVAL & DISASSEMBLY 10-14</p>
---	---

10-20 MASTER INDEX

HIGH-PRESSURE FUEL FEED PUMP (FFP).....	3-52	LUBRICATION SERVICE	2-5
FUEL PRESSURE & PUMP TESTING.....	3-52	ELECTRIC STARTER MOTOR PINION.....	2-5
REMOVAL & INSTALLATION.....	3-53	ENGINE COVER LATCHES.....	2-5
HOW TO USE THIS SERVICE	1-2	ENGINE MOUNT CLAMP SCREWS.....	2-6
AVOIDING THE MOST COMMON MISTAKES.....	1-3	LINKAGE, CABLES & SHAFTS.....	2-7
AVOIDING TROUBLE.....	1-2	POWER TRIM/TILT RESERVOIR.....	2-6
CAN YOU DO IT?.....	1-2	STEERING SHAFT.....	2-8
DIRECTIONS & LOCATIONS.....	1-2	TILT & SWIVEL BRACKET.....	2-8
MAINTENANCE OR REPAIR?.....	1-2	LUBRICATION SYSTEM (4-STROKE MOTORS)	5-11
PROFESSIONAL HELP.....	1-3	DESCRIPTION & OPERATION.....	5-11
PURCHASING PARTS.....	1-3	OIL PRESSURE.....	5-12
WHERE TO BEGIN.....	1-2	OIL PRESSURE SWITCH & WARNING SYSTEM.....	5-16
IDLE MIXTURE ADJUSTMENTS	3-15	OIL PUMP.....	5-14
IDLE SPEED CONTROL (ISC) VALVE (EFI ONLY)	3-74	MAIN RELAY (115 HP TLDI MODELS)	3-73
TESTING & REPLACEMENT.....	3-74	TESTING & REPLACEMENT.....	3-73
IGNITION COILS	4-25	MAINTENANCE COVERAGE	2-2
DESCRIPTION & OPERATION.....	4-25	OWNER'S MANUALS.....	2-2
REMOVAL & INSTALLATION.....	4-28	MAINTENANCE EQUALS SAFETY	2-2
TESTING.....	4-26	MANIFOLD AIR PRESSURE (MAP) SENSOR	3-72
IGNITION SYSTEMS	2-48	REMOVAL & INSTALLATION.....	3-73
INSPECTION.....	2-48	TESTING.....	3-72
IGNITION SYSTEMS (ELECTRONIC)	4-8	MECHANICAL TILT (UNASSISTED OR GAS-ASSIST)	8-2
CD UNIT - CARBURETED ENGINES ONLY.....	4-19	DESCRIPTION & OPERATION.....	8-2
DESCRIPTION & OPERATION.....	4-9	INTRODUCTION.....	8-2
ELECTRONIC SAFETY GOVERNOR (60/70 HP 2-CYL ONLY).....	4-30	SERVICING.....	8-3
EXCITER/CHARGE COIL.....	4-13	NEUTRAL LOCK-OUT ASSEMBLY	9-8
IGNITION COILS.....	4-25	NEUTRAL START SWITCH	9-8
KNOCK SENSOR & CONTROLLER (140 HP ONLY).....	4-29	NISSAN/TOHATSU 4-STROKE EFI	3-37
PULSER/TRIGGER COIL (CARBURETED MODELS ONLY).....	4-15	OIL FILTER (2-STROKE TLDI OR AUTOMIX MODELS)	2-32
STOP SWITCH CIRCUIT.....	4-12	REMOVAL & INSTALLATION.....	2-32
TROUBLESHOOTING.....	4-10	OIL LEVEL SWITCH (OIL INJECTED 2-STROKES)	4-54
UNDER-FLYWHEEL IGNITION & CHARGE COIL EXPLODED VIEWS.....	4-16	TESTING & SERVICE.....	4-54
IMPORTANT POINTS FOR POWERHEAD OVERHAUL	6-2	OIL PRESSURE - 4-STROKE	5-12
CLEANLINESS.....	6-3	TESTING.....	5-12
POWERHEAD COMPONENTS.....	6-3	OIL PRESSURE SWITCH (4-STROKE ONLY)	4-53
REPAIR PROCEDURES.....	6-2	REMOVAL & INSTALLATION.....	4-53
TORQUE SEQUENCE & VALUES.....	6-2	TESTING.....	4-53
KNOCK SENSOR & CONTROLLER (140 HP ONLY)	4-30	OIL PRESSURE SWITCH & WARNING SYSTEM - 4-STROKE	5-16
TESTING & SERVICE.....	4-30	OIL PUMP - 4-STROKE	5-14
LEVER (CONTROL HANDLE)	9-7	REMOVAL, OVERHAUL & INSTALLATION.....	5-14
LINKAGE, CABLES & SHAFTS	2-7	4/5/6 HP MOTORS.....	5-14
LUBRICATION.....	2-7	8-30 HP MOTORS.....	5-15
RECOMMENDED LUBRICANT.....	2-7	OIL PUMP & SYSTEM LINES - AUOTMIX	5-6
LOW-PRESSURE FUEL PUMP	3-54	OIL RECIRCULATION & VENT HOSES - AUTOMIX	5-8
OVERHAUL.....	3-56	OUTBOARDS ON SAIL BOATS	2-2
REMOVAL & INSTALLATION.....	3-55	PISTONS	6-64
TESTING.....	3-54	INSPECTION.....	6-64
LOWER UNIT	7-2	OVERSIZE PISTONS & RINGS.....	6-66
EXHAUST GASES.....	7-2	PISTON RING SIDE/GROOVE CLEARANCE.....	6-65
GENERAL INFORMATION.....	7-2	RING END-GAP CLEARANCE.....	6-65
REPAIR & OVERHAUL TIPS.....	7-3	POWER TRIM/TILT RESERVOIR	2-6
SHIFTING PRINCIPLES.....	7-2	CHECKING FLUID LEVEL/CONDITION.....	2-7
TROUBLESHOOTING.....	7-2	RECOMMENDED LUBRICANT.....	2-6
2.5/3.5 HP, 2-STROKE (NON-SHIFTING).....	7-4	POWER TRIM/TILT (PTT) SWITCH	9-8
2-3.5 HP, 2 & 4-STROKE (SHIFTING).....	7-8	POWER TRIM/TILT SYSTEMS	8-12
5-70 HP (2-STROKE, 1 & 2-CYL).....	7-15	DESCRIPTION & OPERATION.....	8-12
4-8 HP (4-STROKE).....	7-27	INTRODUCTION.....	8-12
9.9-20 HP (4-STROKE).....	7-36	PTT ASSEMBLY.....	8-16
25/30 HP (CARB & EFI, 4-STROKE).....	7-50	PTT SOLENOIDS.....	8-27
40-140 HP 2-STROKE (3 & 4-CYL).....	7-60	PTT SWITCH.....	8-28
LOWER UNIT OIL	2-18	TILT ROD.....	8-22
CHECKING LEVEL & CONDITION.....	2-18	TRIM ROD & CAP (3-RAM SYSTEMS ONLY).....	8-18
DRAINING & FILLING.....	2-19	TROUBLESHOOTING.....	8-12
OIL RECOMMENDATIONS.....	2-18	TRIM MOTOR & PUMP.....	8-25
		TRIM SENDER & GAUGE.....	8-28

POWERHEAD	6-2	RE-COMMISSIONING	2-81
FLYWHEEL	6-3	REMOVAL FROM STORAGE	2-81
GENERAL INFORMATION	6-2	RECTIFIER OR REGULATOR/RECTIFIER	4-35
IMPORTANT POINTS FOR POWERHEAD OVERHAUL	6-2	REMOVAL & INSTALLATION	4-36
POWERHEAD - 2-STROKE		TESTING	4-36
2.5-40 HP (1 & 2-CYL)	6-5	REMOTE CONTROLS	9-2
CLEANING & INSPECTION	6-9	DESCRIPTION & OPERATION	9-8
DISSASSEMBLY & ASSEMBLY	6-6	EMERGENCY STOP SWITCH	9-8
REMOVAL & INSTALLATION	6-5	EXPLODED VIEWS & WIRING	9-9
60/70 HP (2-CYL)	6-33	INTRODUCTION	9-2
CLEANING & INSPECTION	6-37	LEVER (CONTROL HANDLE)	9-7
DISSASSEMBLY & ASSEMBLY	6-35	NEUTRAL LOCK-OUT ASSEMBLY	9-8
REMOVAL & INSTALLATION	6-33	NEUTRAL START SWITCH	9-8
40-140 HP (3 & 4-CYL)	6-45	POWER TRIM/TILT (PTT) SWITCH	9-8
CLEANING & INSPECTION	6-58	TROUBLESHOOTING	9-8
DISSASSEMBLY & ASSEMBLY	6-55	WARNING BUZZER/HORN	9-8
REMOVAL & INSTALLATION	6-45	RIGGING	9-12
POWERHEAD - 4-STROKE		SAFETY IN SERVICE	1-12
2/2.5/3.5 HP	6-10	DO'S	1-12
CLEANING & INSPECTION	6-15	DON'TS	1-13
DISASSEMBLY & ASSEMBLY	6-15	SELF DIAGNOSTIC SYSTEM	3-38
REMOVAL & INSTALLATION	6-10	READING CODES	3-38
4/5/6 HP	6-15	EFI MOTORS	3-38
CLEANING & INSPECTION	6-22	TLDI MOTORS	3-39
CYLINDER BLOCK OVERHAUL	6-18	TROUBLE CODE CHART	3-41
CYLINDER HEAD REMOVAL & INSTALLATION	6-16	SENSOR & CIRCUIT RESISTANCE TESTS	3-45
CYLINDER HEAD OVERHAUL	6-17	TESTING ELECTRONIC COMPONENTS	3-45
POWERHEAD REMOVAL & INSTALLATION	6-15	SHIFTING PRINCIPLES	7-2
8-20 HP	6-22	NON-REVERSE TYPE	7-2
CLEANING & INSPECTION	6-33	REVERSE TYPE	7-2
CYLINDER BLOCK OVERHAUL	6-29	SHOP EQUIPMENT	1-17
CYLINDER HEAD DISASSEMBLY & ASSEMBLY	6-26	CHEMICALS	1-17
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-25	CLEANERS	1-18
POWERHEAD REMOVAL & INSTALLATION	6-22	LUBRICANTS & PENETRANTS	1-17
STRIPPING THE POWERHEAD FOR DISASSEMBLY	6-23	SEALANTS	1-18
25/30 HP (CARB & EFI)	6-38	SAFETY TOOLS	1-17
CLEANING & INSPECTION	6-45	EYE & EAR PROTECTION	1-17
CYLINDER BLOCK OVERHAUL	6-43	WORK CLOTHES	1-17
CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION	6-41	WORK GLOVES	1-17
POWERHEAD REMOVAL & INSTALLATION	6-38	SPARK PLUG WIRES	2-48
STRIPPING THE POWERHEAD FOR DISASSEMBLY	6-39	REMOVAL & INSTALLATION	2-48
POWERHEAD BREAK-IN	6-73	TESTING	2-48
BREAKING IN A POWERHEAD	6-73	SPARK PLUGS	2-43
POWERHEAD REFINISHING	6-59	HEAT RANGE	2-44
CLEANING	6-59	INSPECTION & GAPPING	2-46
CONNECTING RODS	6-63	READING SPARK PLUGS	2-46
CRANKSHAFT	6-61	REMOVAL & INSTALLATION	2-44
CYLINDER BLOCK	6-66	SPARK PLUG WIRE TORQUE VALUES	1-29
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-69	BOLT TORQUE - TYPICAL U.S. STANDARD BOLT TORQUE VALUES	1-30
EXHAUST COVER	6-60	CAPACITIES	2-92
GENERAL INFORMATION	6-59	CARBURETOR SET-UP	3-34
PISTONS	6-64	CHARGING SYSTEM TESTING	4-108
PROPELLER	2-23	CONVERSION FACTORS	1-28
GENERAL INFORMATION	2-23	COOLING SYSTEM	5-36
INSPECTION	2-26	ENGINE - 2-STROKE MOTORS	6-74
REMOVAL & INSTALLATION	2-26	ENGINE - 4-STROKE MOTORS	6-80
2-3.5 HP MOTORS	2-26	FUEL INJECTION SENSOR SPECIFICATIONS	
5 HP & LARGER MODELS	2-27	EFI MODELS	3-75
PTT ASSEMBLY	8-16	TLDI MODELS	3-76
EXPLODED VIEWS	8-18	GENERAL ENGINE	2-83
REMOVAL & INSTALLATION	8-16	GENERAL ENGINE SYSTEM	2-85
SYSTEM BLEEDING	8-17	IGNITION TESTING	4-106
PTT SOLENOIDS	8-27	LUBRICATION SERVICES	2-91
TESTING	8-27	MAINTENANCE INTERVALS	2-87
PTT SWITCH	8-28	SPARK PLUG DIAGNOSIS	2-96
TESTING	8-28	TUNE-UP SPECIFICATIONS	2-94
PULSER/TRIGGER COIL (CARBURETED MODELS ONLY)	4-15	TWO-STROKE MOTOR FUEL:OIL RATIO	2-91
REMOVAL & INSTALLATION	4-16	VALVE CLEARANCE	2-96
TESTING	4-15		

10-22 MASTER INDEX

STARTER MOTOR	4-44	4/5/6 HP (4-STROKE)	2-54
CLEANING & INSPECTION	4-48	GEAR SHIFT INSPECTION	2-55
DISASSEMBLY & ASSEMBLY	4-46	IDLE SPEED	2-54
GENERAL INFORMATION	4-44	IGNITION TIMING	2-54
REMOVAL & INSTALLATION	4-45	THROTTLE CABLE	2-55
TESTING	4-45	8/9.8 HP (2-STROKE)	2-55
STARTER MOTOR SOLENOID	4-50	IDLE SPEED	2-56
SERVICE	4-50	IGNITION TIMING	2-55
STARTING CIRCUIT	4-41	THROTTLE CABLE ADJUSTMENT	2-55
DESCRIPTION & OPERATION	4-41	8/9.8 HP (4-STROKE)	2-56
STARTER MOTOR	4-44	IDLE SPEED	2-56
STARTER MOTOR SOLENOID	4-50	IGNITION TIMING	2-56
TROUBLESHOOTING	4-41	THROTTLE CABLE ADJUSTMENT	2-57
STATOR/BATTERY CHARGE COIL	4-34	9.9/15/18, 25/30 HP & 40 HP (2-STROKE, 2-CYL)	2-58
REMOVAL & INSTALLATION	4-35	IDLE SPEED	2-59
TESTING	4-34	IGNITION TIMING	2-58
STEERING SHAFT	2-8	9.9/15/18 HP (4-STROKE)	2-59
LUBRICATION	2-8	GEAR SHIFT & REVERSE LOCK INSPECTION	2-60
RECOMMENDED LUBRICANT	2-8	IDLE SPEED	2-59
STOP SWITCH CIRCUIT	4-12	IGNITION TIMING	2-59
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-78	9.9/15/20 HP (4-STROKE)	2-61
RE-COMMISSIONING	2-81	GEAR SHIFT INSPECTION (REMOTE CONTROL)	2-62
WINTERIZATION	2-78	IDLE SPEED	2-62
TEMPERATURE SENSORS	3-69	IGNITION TIMING	2-62
REMOVAL & INSTALLATION	3-72	THROTTLE CABLE/LINK	2-61
TESTING	3-70	60/70 HP (2-STROKE, 2-CYL)	2-63
TEST EQUIPMENT	4-5	CARBURETOR LINKAGE	2-63
JUMPER WIRES	4-5	IDLE SPEED	2-64
MULTI-METERS	4-6	IGNITION TIMING	2-64
TEST LIGHTS	4-5	REMOTE CABLES	2-63
THERMOSTAT	5-28	25/30 HP (492CC, 4-STROKE)	2-65
REMOVAL & INSTALLATION	5-28	CARBURETOR BALANCING	2-65
THROTTLE BODY & INTAKE ASSEMBLY	3-46	IDLE SPEED	2-65
REMOVAL & INSTALLATION	3-46	IGNITION TIMING	2-66
EFI MOTORS	3-46	THROTTLE CABLES/LINK	2-65
TLDI MOTORS	3-47	25/30 HP (526CC, 4-STROKE)	2-66
THROTTLE POSITION SENSOR (TPS)	3-67	GEAR SHIFT INSPECTION (REMOTE CONTROL)	2-67
REMOVAL & INSTALLATION	3-68	IDLE SPEED	2-67
RESETTING THE TPS ON TLDI MOTORS	3-68	IGNITION TIMING	2-68
TESTING	3-67	THROTTLE CABLE/LINK	2-66
TILLER HANDLE	9-2	40-140 HP (CARB, 2-STROKE)	2-68
DESCRIPTION & OPERATION	9-2	CARBURETOR SYNCHRONIZATION & ADJUSTMENT	2-70
TROUBLESHOOTING	9-2	IGNITION TIMING	2-68
EXPLODED VIEWS	9-2	OIL PUMP APERTURE ADJUSTMENT	2-71
TILT ROD	8-22	40/50 HP & 70/90 HP (2-STROKE, TLDI 3-CYL)	2-71
REMOVAL & INSTALLATION	8-23	IDLE SPEED INSPECTION	2-72
25/30 HP 4-STROKE MODELS	8-23	REMOTE CABLE INSTALLATION/ADJUSTMENT	2-72
9.8/9.9C/15C/20C 4-Stroke & 40B/50B TLDI MODELS	8-24	115 HP (2-STROKE TLDI)	2-72
EARLY 60-140 HP CARB MODELS	8-24	IDLE SPEED INSPECTION	2-73
ALL EXCEPT 9.8/9.9C/15C/20C/25/30 Hp 4-STROKE, 40B/50B TLDI & EARLY 60-140 Hp CARB MODELS	8-25	REMOTE CABLE ADJUSTMENT	2-72
TILT & SWIVEL BRACKET	2-8	TOOLS	1-19
LUBRICATION	2-8	ELECTRONIC TOOLS	1-23
RECOMMENDED LUBRICANT	2-8	BATTERY CHARGERS	1-23
TIMING BELT	2-33	BATTERY TESTERS	1-23
INSPECTOR	2-33	GAUGES	1-25
REMOVAL & INSTALLATION	2-33	MULTI-METERS (DVOMS)	1-24
TIMING & SYNCHRONIZATION	2-49	HAND TOOLS	1-19
2.5/3.5 HP (2-STROKE)	2-50	BREAKER BARS	1-20
IDLE SPEED	2-50	HAMMERS	1-22
IGNITION TIMING	2-50	PLIERS	1-22
MAIN JET NEEDLE	2-50	SCREWDRIVERS	1-22
2/2.5/3.5 HP (4-STROKE)	2-51	SOCKET SETS	1-19
GEAR SHIFT INSPECTION	2-53	TORQUE WRENCHES	1-19
IDLE SPEED	2-51	WRENCHES	1-20
IGNITION TIMING	2-52	MEASURING TOOLS	1-25
THROTTLE CABLE	2-52	DEPTH GAUGES	1-26
5 HP (2-STROKE)	2-53	DIAL INDICATORS	1-26
IDLE SPEED	2-53	MICROMETERS & CALIPERS	1-25
IGNITION TIMING	2-53	TELESCOPING GAUGES	1-26
		OTHER COMMON TOOLS	1-22
		SPECIAL TOOLS	1-23
		TRIM MOTOR & PUMP	8-25
		REMOVAL & INSTALLATION	8-26
		TESTING	8-25

TRIM ROD & CAP (3-RAM SYSTEMS ONLY)	8-18	VALVE LASH	2-73
REMOVAL & INSTALLATION	8-22	ADJUSTMENT	2-74
TRIM SENDER & GAUGE	8-28	VALVE CLEARANCE (4-STROKE MODELS)	2-73
TESTING	8-28	VALVE LASH	2-73
AUTOMIX	5-2	VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-49
BASIC OPERATING PRINCIPLES	1-13	OVERHAUL	3-50
CARBURETOR	3-13	REMOVAL & INSTALLATION	3-49
CHARGING CIRCUIT	4-32	WARNING BUZZER/HORN	9-8
COMBUSTION	1-16	WARNING BUZZER/LAMP	4-54
COOLING SYSTEM	5-25	TESTING	4-54
ELECTRICAL SYSTEMS	4-6	WARNING SYSTEM	4-50
ELECTRONIC FUEL INJECTION	3-38	DESCRIPTION & OPERATION	4-50
HAND REWIND STARTER	10-2	ENGINE TEMPERATURE SENSORS (EFI/TLDI)	4-51
IGNITION SYSTEM	4-10	ENGINE TEMPERATURE SWITCHES (CARBURETED)	4-51
LOWER UNIT	7-2	OIL LEVEL SWITCH (OIL INJECTED 2-STROKES)	4-54
POWER TRIM/TILT SYSTEMS	8-12	OIL PRESSURE SWITCH (4-STROKE ONLY)	4-53
REMOTE CONTROLS	9-8	TROUBLESHOOTING	4-49
STARTING CIRCUIT	4-41	WARNING BUZZER/LAMP	4-55
TILLER HANDLE	9-2	WATER PRESSURE SWITCH (60-140 HP CARB 2-STROKE ONLY)	4-54
WARNING SYSTEM	4-50	WATER PRESSURE SWITCH (60-140 HP CARB 2-STROKE ONLY)	4-54
2-STROKE MOTORS	1-13	TESTING & SERVICE	4-54
4-STROKE MOTORS	1-16	WATER PUMP	5-30
TUNE-UP	2-39	INSPECTION & OVERHAUL	5-35
COMPRESSION TESTS	2-41	REMOVAL & INSTALLATION	5-30
DE-CARBONING THE PISTONS	2-40	2.5/3.5 HP (NON-SHIFTING) MODELS	5-30
IGNITION SYSTEMS	2-48	2-140 HP (SHIFTING) MODELS	5-32
INTRODUCTION	2-39	WINTERIZATION	2-78
SPARK PLUG WIRES	2-48	PREPPING FOR STORAGE	2-78
SPARK PLUGS	2-43	STORAGE CHECKLIST	2-79
TUNE-UP SEQUENCE	2-39	THE GREAT ETHANOL DEBATE	2-79
TUNE-UP SEQUENCE	2-39	WHERE TO STORE	2-78
TWO-STROKE LOW-PRESSURE DIRECT INJECTION (TLDI)	3-37	WIRE & CONNECTOR REPAIR	4-8
UNDER-FLYWHEEL IGNITION & CHARGE COIL EXPLODED VIEWS	4-16	WIRING DIAGRAMS	4-55
2-STROKE MODELS	4-16	INDEX	4-55
4-STROKE MODELS	4-18	CARBURETED 2-STROKE MOTORS	4-55
UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2	CARBURETED 4-STROKE MOTORS	4-74
BASIC ELECTRICAL THEORY	4-2	EFI/TLDI MOTORS	4-88
ELECTRICAL COMPONENTS	4-2	PTT	8-13
ELECTRICAL SYSTEM PRECAUTIONS	4-8	REMOTE CONTROL	9-8
ELECTRICAL TESTING	4-7	ZINCS	2-29
TEST EQUIPMENT	4-5	INSPECTION	2-30
TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6	LOCATION & GENERAL INFORMATION	2-29
WIRE & CONNECTOR REPAIR	4-8	SERVICING	2-30