

CONTENTS

1

GENERAL INFORMATION, SAFETY & TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-16
TOOLS	1-18
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-26
SPECIFICATIONS	1-27

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION	2-4
ENGINE MAINTENANCE	2-8
BOAT MAINTENANCE	2-16
TUNE-UP	2-20
TIMING & SYNCHRONIZING - CHRYSLER	2-28
TIMING & SYNCHRONIZING - FORCE	2-50
CLEARING A SUBMERGED MOTOR	2-63
SPRING COMMISSIONING CHECKLIST	2-63
SPECIFICATIONS - CHRYSLER	2-64
SPECIFICATIONS - FORCE	2-72

3

FUEL SYSTEM

FUEL & COMBUSTION	3-2
CARBURETED FUEL SYSTEM	3-3
CARBURETOR SERVICE - CHRYSLER MODELS	3-8
CARBURETOR SERVICE - FORCE MODELS	3-35
FUEL PUMP	3-52
SPECIFICATIONS	3-60
TROUBLESHOOTING	3-5

4

IGNITION & ELECTRICAL

UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
FLYWHEEL	4-11
IGNITION - GENERAL	4-15
TYPE I IGNITION SYSTEM - FLYWHEEL MAGNETO, BATTERY-TYPE & MAGNAPOWER I	4-19
TYPE II IGNITION SYSTEM - MAGNAPOWER II	4-25
TYPE III IGNITION SYSTEM - CD, PRESTOLITE & MAGNAPOWER III	4-30
TYPE IV IGNITION SYSTEM - UNITS w/DISTRIBUTOR	4-39
TYPE V IGNITION SYSTEM - BREAKER POINTS (MAGNETO) IGNITION	4-48
TYPE VI IGNITION SYSTEM - MOTOROLA DISTRIBUTOR IGNITION	4-52
TYPE VII IGNITION SYSTEM - ELECTRONIC IGNITION UP TO 25 HP	4-59
TYPE VIII IGNITION SYSTEM - PRESTOLITE ELECTRONIC IGNITION	4-60
TYPE IX IGNITION SYSTEM - THUNDERBOLT ELECTRONIC IGNITION	4-66
TYPE X IGNITION SYSTEM - CAPACITOR DISCHARGE MODULE (CDM) IGNITION	4-70
CHARGING SYSTEM	4-74
STARTER MOTOR CIRCUIT	4-77
AUTO ELECTRIC SYSTEM - CHRYSLER	4-89
SENDERS & SWITCHES	4-91
SPECIFICATIONS	4-133
WIRING DIAGRAMS - CHRYSLER	4-93
WIRING DIAGRAMS - FORCE	4-107

CONTENTS

COOLING SYSTEM 5-2
OIL INJECTION SYSTEM 5-13
WARNING SYSTEMS 5-14

LUBRICATION & COOLING

5

DESCRIPTION & OPERATION 6-2
ENGINE MECHANICAL 6-2
POWERHEAD - CHRYSLER 6-12
POWERHEAD - FORCE 6-34

POWERHEAD

6

LOWER UNIT - GENERAL 7-2
LOWER UNIT - APPLICATIONS 7-4
DESCRIPTION & OPERATION 7-2
TROUBLESHOOTING 7-4
TYPE "A" (CHRYSLER CONSTANT MESH - NO SHIFT) 7-8
TYPE "B" (CHRYSLER 1-PIECE -
CAM SHIFT, F-N OR F-N-R) 7-13
TYPE "C" (CHRYSLER 1-PIECE - COUPLER SHIFT, F-N-R) 7-22
TYPE "D" (CHRYSLER 2-PIECE -
CAM OR COUPLER SHIFT, F-N-R) 7-35
TYPE "E" (FORCE 3-7.5 HP ENGINES) 7-49
TYPE "F" (FORCE 9.9-60 HP ENGINES
W/SPLIT GEARCASE) 7-56
TYPE "G" (FORCE 1984-91 70-150 HP) 7-65
TYPE "H" (FORCE 1991-95 70-150 HP) 7-76
TYPE "I" (FORCE 1995-99 70-120 HP) 7-91
L-DRIVE MODELS 7-101
SPECIFICATIONS 7-108

LOWER UNIT

7

TRIM/TILT SYSTEMS 8-2
MANUAL TILT 8-4
EARLY MODEL CHRYSLER TRIM/TILT SYSTEM 8-4
CENTER-MOUNTED PISTON TRIM/TILT SYSTEM 8-8
SINGLE RAM POWER TRIM/TILT SYSTEM 8-21
L-DRIVE POWER TRIM/TILT SYSTEM 8-28

TRIM & TILT

8

REMOTE CONTROLS 9-2
TILLER HANDLE - FORCE MODELS 9-12
TROUBLESHOOTING

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-25

MASTER INDEX

ANCHORS	1-10	CLEANING & INSPECTION	3-10
ANODES (ZINCS)	2-15	REMOVAL & DISASSEMBLY	3-9
INSPECTION	2-15	CARBURETOR "B" (CHRYSLER) - TILLOTSON MT	3-14
SERVICING	2-15	ASSEMBLY & INSTALLATION	3-16
AUTO ELECTRIC SYSTEM - CHRYSLER	4-89	CLEANING & INSPECTION	3-14
DESCRIPTION & OPERATION	4-89	REMOVAL & DISASSEMBLY	3-14
ASSEMBLY & INSTALLATION	4-90	CARBURETOR "C" (CHRYSLER) - TILLOTSON MD	3-17
CHECKING CHARGING SYSTEM OUTPUT	4-90	ASSEMBLY & INSTALLATION	3-19
CHECKING THE STARTING SYSTEM	4-90	CLEANING & INSPECTION	3-19
CLEANING & INSPECTION	4-90	REMOVAL & DISASSEMBLY	3-17
REMOVAL & DISASSEMBLY	4-90	CARBURETOR "D" (CHRYSLER) - TILLOTSON CO, TC & WB	3-21
AVOIDING COMMON MISTAKES	1-3	ASSEMBLY & INSTALLATION	3-24
AVOIDING TROUBLE	1-2	CLEANING & INSPECTION	3-24
BAILING DEVICES	1-10	REMOVAL & DISASSEMBLY	3-22
BASIC OPERATING PRINCIPLES	1-13	CARBURETOR "E" (CHRYSLER) - WALBRO WE	3-27
COMBUSTION	1-16	ASSEMBLY & INSTALLATION	3-32
GENERAL INFORMATION	1-13	CLEANING & INSPECTION	3-31
2-STROKE MOTORS	1-13	REMOVAL & DISASSEMBLY	3-28
4-STROKE MOTORS	1-15	CARBURETOR "F" (CHRYSLER) - AMAL	3-34
BATTERY		CARBURETOR MODELS (CHRYSLER)	3-8
CHARGERS	4-10	CARBURETOR SERVICE - CHRYSLER MODELS	3-8
CONSTRUCTION	4-9	CARBURETOR MODELS	3-8
LOCATION	4-9	CARBURETOR "A" - WALBRO LMB	3-9
MAINTENANCE	2-16	CARBURETOR "B" - TILLOTSON MT	3-14
MARINE BATTERIES	4-9	CARBURETOR "C" - TILLOTSON MD	3-17
RATINGS	4-9	CARBURETOR "D" - TILLOTSON CO, TC & WB	3-21
REPLACING CABLES	4-10	CARBURETOR "E" - WALBRO WE	3-27
SAFETY PRECAUTIONS	4-9	CARBURETOR "F" - AMAL	3-34
STORAGE	2-18	CARBURETOR SERVICE - FORCE MODELS	3-35
TESTING	2-18	CARBURETOR WITH FACEPLATE-MOUNTED CONTROL	3-35
BEFORE/AFTER EACH USE	2-3	SINGLE OR MULTIPLE CARBURETORS w/REMOTE CONTROL	3-44
GENERAL INFORMATION	2-3	1984-88 SINGLE CARBURETOR w/TILLER HANDLE	3-38
VISUALLY INSPECTING THE BOAT & MOTOR	2-3	1989-99 SINGLE CARBURETOR w/TILLER HANDLE	3-41
BOAT MAINTENANCE	2-16	CHARGING SYSTEM	4-74
BATTERIES	2-16	DESCRIPTION & OPERATION	4-74
FIBERGLASS HULL	2-19	RECTIFIER/REGULATOR	4-75
INTERIOR	2-19	REMOVAL & INSTALLATION	4-75
BOATING EQUIPMENT	1-10	TERMINALS & LEADS	4-75
ANCHORS	1-10	TESTING	4-75
BAILING DEVICES	1-10	STATOR SERVICE	4-77
COMPASS	1-10	REMOVAL & INSTALLATION	4-77
FIRST AID KIT	1-10	TESTING	4-77
OAR/PADDLE	1-10	TROUBLESHOOTING	4-74
TOOLS & SPARE PARTS	1-12	CHEMICALS	1-17
VHF-FM RADIO	1-10	CLEANERS	1-18
BOATING SAFETY	1-4	GENERAL INFORMATION	1-17
COURTESY MARINE EXAMINATIONS	1-10	LUBRICANTS & PENETRANTS	1-17
GENERAL INFORMATION	1-4	SEALANTS	1-17
REGULATIONS FOR YOUR BOAT	1-4	CLEARING A SUBMERGED MOTOR	2-63
REQUIRED SAFETY EQUIPMENT	1-5	COMPRESSION TESTING	2-21
BREAKER POINTS	2-27	COMPRESSION CHECK	2-21
CARBURETED FUEL SYSTEM	3-3	LOW COMPRESSION	2-22
DESCRIPTION & OPERATION	3-3	COMBUSTION	3-2
CARBURETOR (FORCE) - w/FACEPLATE-MOUNTED CONTROL	3-35	COMPASS	1-10
DISASSEMBLY & ASSEMBLY	3-35	INSTALLATION	1-11
REMOVAL & INSTALLATION	3-35	PRECAUTIONS	1-11
CARBURETOR (FORCE) - 1984-88 SINGLE CARB w/TILLER HANDLE	3-38	SELECTION	1-10
DISASSEMBLY & ASSEMBLY	3-39	COOLING SYSTEM	
REMOVAL & INSTALLATION	3-38	DESCRIPTION & OPERATION	5-2
CARBURETOR (FORCE) - 1988-89 SINGLE CARB w/TILLER HANDLE	3-38	FLUSHING	2-8
DISASSEMBLY & ASSEMBLY	3-42	THERMOSTAT	5-12
REMOVAL & INSTALLATION	3-41	TROUBLESHOOTING THE COOLING SYSTEM	5-2
CARBURETOR (FORCE) - SINGLE OR MULTIPLE		WATER PUMP	5-3
CARB w/REMOTE CONTROL	3-44	COURTESY MARINE EXAMINATIONS	1-10
DISASSEMBLY & ASSEMBLY	3-46	CYLINDER HEAD TEMPERATURE SENSOR	5-14
REMOVAL & INSTALLATION	3-44	GENERAL INFORMATION	5-14
CARBURETOR "A" (CHRYSLER) - WALBRO LMB	3-9	REMOVAL & INSTALLATION	5-14
ASSEMBLY & INSTALLATION	3-12	TESTING	5-14

10-26 MASTER INDEX

DESCRIPTION & OPERATION		
AUTO ELECTRIC SYSTEM	4-89	
CARBURETED FUEL SYSTEM	3-3	
CENTER-MOUNTED PISTON TRIM/TILT	8-8	
CHARGING SYSTEM	4-74	
COOLING SYSTEM	5-2	
FUEL PUMP	3-52	
LOWER UNIT	7-2	
L-DRIVE POWER TRIM/TILT	8-28	
MANUAL TILT	8-4	
OIL INJECTION SYSTEM	5-13	
POWERHEAD	6-2	
SINGLE RAM INTEGRAL POWER TRIM/TILT	8-21	
STARTER MOTOR CIRCUIT	4-77	
TRIM/TILT SYSTEMS	8-2	
TYPE I IGNITION SYSTEM	4-21	
TYPE II IGNITION SYSTEM	4-25	
TYPE III IGNITION SYSTEM	4-30	
TYPE IV IGNITION SYSTEM	4-39	
TYPE V IGNITION SYSTEM	4-48	
TYPE VI IGNITION SYSTEM	4-52	
TYPE VII IGNITION SYSTEM	4-59	
TYPE VIII IGNITION SYSTEM	4-60	
TYPE IX IGNITION SYSTEM	4-66	
TYPE X IGNITION SYSTEM	4-70	
WARNING SYSTEMS	5-14	
DIRECTIONS & LOCATIONS	1-2	
ELECTRICAL SYSTEM CHECKS	2-27	
ELECTRONIC TOOLS	1-23	
BATTERY CHARGERS	1-23	
BATTERY TESTERS	1-23	
GAUGES	1-24	
MULTI-METERS (DVOMS)	1-23	
EMERGENCY STOP SWITCH (LANYARD) - REMOTE	9-8	
REMOVAL & INSTALLATION	9-8	
TESTING	9-8	
EMERGENCY STOP SWITCH (LANYARD) - TILLER	9-14	
REMOVAL & INSTALLATION	9-14	
TESTING	9-14	
ENGINE MAINTENANCE	2-8	
ANODES (ZINCS)	2-15	
COOLING SYSTEM	2-8	
FUEL FILTER	2-10	
FUEL/WATER SEPARATOR	2-10	
PROPELLER	2-11	
ENGINE MECHANICAL	6-2	
DESCRIPTION & OPERATION	6-2	
INTAKE MANIFOLD & REED BLOCK ASSEMBLY	6-7	
INTRODUCTION	6-2	
PREPARATION FOR SERVICE WORK	6-5	
ENGINE STOP SWITCH	9-14	
REMOVAL & INSTALLATION	9-14	
TESTING	9-14	
FASTENERS, MEASUREMENTS & CONVERSIONS	1-26	
BOLTS, NUTS & OTHER THREADED RETAINERS	1-26	
STANDARD & METRIC MEASUREMENTS	1-27	
TORQUE	1-27	
FIRE EXTINGUISHERS	1-6	
CARE & TREATMENT	1-6	
CONTENTS OF EXTINGUISHERS	1-6	
FIRE EXTINGUISHER APPROVAL	1-6	
HALON EXTINGUISHERS	1-6	
LEGAL REQUIREMENTS	1-6	
USING A FIRE EXTINGUISHER	1-6	
FIRST AID KIT	1-10	
FIBERGLASS HULL	2-19	
INSPECTION & CARE	2-19	
FLYWHEEL	4-11	
FLYWHEEL ASSEMBLY	4-11	
CLEANING & INSPECTION	4-14	
REMOVAL & INSTALLATION	4-11	
FUEL	3-2	
ALCOHOL-BLENDED FUELS	3-2	
HIGH ALTITUDE OPERATION	3-2	
OCTANE RATING	3-2	
RECOMMENDATIONS	3-2	
VAPOR PRESSURE	3-2	
FUEL FILTER	2-10	
GENERAL INFORMATION	2-10	
RELIEVING SYSTEM PRESSURE	2-10	
REMOVAL & INSTALLATION	2-10	
FUEL LINES	3-57	
FUEL PRIMER - MECHANICAL	3-53	
GENERAL INFORMATION	3-53	
FUEL PUMP	3-53	
ASSEMBLY & INSTALLATION	3-56	
CLEANING & INSPECTION	3-55	
PRESSURE CHECK	3-53	
REMOVAL & DISASSEMBLY	3-54	
SERVICE	3-54	
FUEL PUMP	3-52	
DESCRIPTION & OPERATION	3-52	
FUEL LINES	3-57	
FUEL PRIMER - MECHANICAL	3-53	
FUEL PUMP	3-53	
RECIRCULATING SYSTEM	3-58	
FUEL SYSTEM CHECKS	2-27	
FUEL/OIL RATIO	2-8	
PRE-MIXING FUEL	2-8	
RECOMMENDATIONS	2-8	
FUEL/WATER SEPARATOR	2-10	
DRAINING	2-11	
GENERAL INFORMATION	2-10	
SERVICING	2-11	
FUEL & COMBUSTION	3-2	
FUEL	3-2	
COMBUSTION	3-2	
GEAR HOUSING - L-DRIVE	7-101	
DISASSEMBLY & ASSEMBLY	7-101	
REMOVAL & INSTALLATION	7-101	
SHIMMING	7-102	
GENERAL INFORMATION (MAINTENANCE)	2-2	
BEFORE/AFTER EACH USE	2-3	
GENERAL INFORMATION	2-2	
MAINTENANCE COVERAGE	2-2	
MAINTENANCE EQUALS SAFETY	2-2	
OUTBOARDS ON SAIL BOATS	2-2	
SERIAL NUMBER IDENTIFICATION	2-2	
HAND REWIND STARTER	10-2	
INTRODUCTION	10-2	
STARTER TYPE "A" (HORIZONTAL-TYPE) - CHRYSLER & FORCE MODELS	10-2	
STARTER TYPE "B" (HORIZONTAL-TYPE) - CHRYSLER MODELS	10-6	
STARTER TYPE "C" (HORIZONTAL-TYPE) - 2 & 3-CYL. FORCE MODELS	10-10	
STARTER TYPE "D" (VERTICALLY MOUNTED, BENDIX-STYLE) CHRYSLER & FORCE MODELS	10-16	
HAND TOOLS	1-19	
BREAKER BARS	1-20	
HAMMERS	1-22	
PLIERS	1-21	
SCREWDRIVERS	1-21	
SOCKET SETS	1-19	
TORQUE WRENCHES	1-20	
WRENCHES	1-21	
HOW TO USE THIS MANUAL	1-2	

AVOIDING COMMON MISTAKES.....	1-3	REMOVAL & ADJUSTMENT.....	4-23
AVOIDING TROUBLE.....	1-2	COMPONENT FUNCTIONS.....	4-19
CAN YOU DO IT?.....	1-2	BREAKER POINTS.....	4-20
DIRECTIONS & LOCATIONS.....	1-2	CD MODULE - MAGNAPOWER I ONLY.....	4-21
GENERAL INFORMATION.....	1-2	CONDENSER.....	4-19
MAINTENANCE OR REPAIR?.....	1-2	POINT GAP.....	4-20
PROFESSIONAL HELP.....	1-3	DESCRIPTION & OPERATION.....	4-21
PURCHASING PARTS.....	1-3	SERVICING.....	4-23
WHERE TO BEGIN.....	1-2	SYSTEM COMPONENTS.....	4-19
IGNITION - GENERAL.....	4-15	BATTERY-TYPE IGNITION.....	4-19
INTRODUCTION.....	4-15	FLYWHEEL MAGNETO IGNITION.....	4-19
POLARITY CHECK.....	4-16	MAGNAPOWER I IGNITION.....	4-19
TESTING.....	4-16	TESTING.....	4-22
TROUBLESHOOTING.....	4-16	IGNITION COILS.....	4-22
WIRING HARNESS.....	4-16	MAGNAPOWER I CD MODULE.....	4-23
IGNITION SWITCH.....	9-8	IGNITION SYSTEM - MAGNAPOWER II.....	4-25
REMOVAL & INSTALLATION.....	9-9	DESCRIPTION & OPERATION.....	4-25
TESTING.....	9-8	SERVICING.....	4-28
IGNITION SYSTEM - BREAKER POINTS (MAGNETO) IGNITION.....	4-48	ASSEMBLY.....	4-29
BREAKER POINTS.....	4-50	CLEANING & INSPECTION.....	4-29
GAP ADJUSTMENT.....	4-50	REMOVAL.....	4-28
REMOVAL & INSTALLATION.....	4-50	TESTING.....	4-26
TESTING.....	4-50	CAPACITOR MODULE USING DVOM.....	4-26
CONDENSER.....	4-50	CD MODULE USING VOLTMETER.....	4-27
REMOVAL & INSTALLATION.....	4-51	IGNITION COIL.....	4-28
TESTING.....	4-50	TRIGGER CAPACITOR & CD MODULE w/o USING A DVOM.....	4-26
DESCRIPTION & OPERATION.....	4-48	TRIGGER MODULE TEST USING TIMING LIGHT.....	4-27
IGNITION COIL.....	4-51	IGNITION SYSTEM - MOTOROLA DISTRIBUTOR IGNITION.....	4-52
REMOVAL & INSTALLATION.....	4-51	DESCRIPTION & OPERATION.....	4-52
TESTING.....	4-51	DISTRIBUTOR.....	4-52
TROUBLESHOOTING.....	4-49	ASSEMBLY.....	4-56
IGNITION SYSTEM - CD, PRESTOLITE & MAGNAPOWER III.....	4-30	CLEANING & INSPECTION.....	4-56
DESCRIPTION & OPERATION.....	4-30	DISASSEMBLY.....	4-54
IGNITION STATOR & TRIGGER.....	4-37	REMOVAL & INSTALLATION.....	4-52
ASSEMBLY & INSTALLATION.....	4-38	TESTING.....	4-51
CLEANING & INSPECTION.....	4-38	IGNITION COILS.....	4-56
REMOVAL & DISASSEMBLY.....	4-37	REMOVAL & INSTALLATION.....	4-57
TESTING.....	4-31	TESTING.....	4-56
6.0, 7.5 & 8.0 HP MODELS (1979-84).....	4-31	IGNITION MODULE.....	4-58
9.9-15 HP (1979-84), 20 HP (1979-80), 25 HP (1981-84), 30 HP (1979-82) & 35 HP (1979-84) MODELS.....	4-33	REMOVAL & INSTALLATION.....	4-58
55 HP (1980-83), 60 HP (1984), 75/85 HP (1982-84) & 125 HP (1982) MODELS.....	4-34	TESTING.....	4-58
ALL MODELS - IGNITION COIL RESISTANCE TESTS.....	4-36	TROUBLESHOOTING.....	4-52
IGNITION SYSTEM - CAPACITOR DISCHARGE MODULE (CDM) IGNITION.....	4-70	IGNITION SYSTEM - PRESTOLITE ELECTRONIC IGNITION.....	4-60
CDM IGNITION COIL MODULE.....	4-74	CHARGING COILS.....	4-60
REMOVAL & INSTALLATION.....	4-74	REMOVAL & INSTALLATION.....	4-61
TESTING.....	4-74	TESTING.....	4-60
CHARGING COILS.....	4-71	DESCRIPTION & OPERATION.....	4-60
REMOVAL & INSTALLATION.....	4-72	IGNITION COILS.....	4-64
TESTING.....	4-71	REMOVAL & INSTALLATION.....	4-65
DESCRIPTION & OPERATION.....	4-70	TESTING.....	4-64
TRIGGER COILS.....	4-73	IGNITION MODULE.....	4-65
REMOVAL & INSTALLATION.....	4-73	REMOVAL & INSTALLATION.....	4-65
TESTING.....	4-73	TESTING.....	4-65
TROUBLESHOOTING.....	4-71	TRIGGER COILS.....	4-63
IGNITION SYSTEM - ELECTRONIC IGNITION UP TO 25 HP.....	4-59	REMOVAL & INSTALLATION.....	4-63
DESCRIPTION & OPERATION.....	4-59	TESTING.....	4-60
TROUBLESHOOTING.....	4-59	IGNITION SYSTEM - THUNDERBOLT ELECTRONIC IGNITION.....	4-66
IGNITION COILS.....	4-59	CHARGING COILS.....	4-67
REMOVAL & INSTALLATION.....	4-59	REMOVAL & INSTALLATION.....	4-68
TESTING.....	4-59	TESTING.....	4-67
IGNITION SYSTEM - FLYWHEEL MAGNETO, BATTERY-TYPE & MAGNAPOWER I.....	4-19	DESCRIPTION & OPERATION.....	4-66
BREAKER POINT/CONDENSER.....	4-23	IGNITION COILS.....	4-70
CLEANING & INSPECTION.....	4-24	REMOVAL & INSTALLATION.....	4-70
INSTALLATION & SET-UP.....	4-24	TESTING.....	4-70
		SWITCH BOX.....	4-70
		REMOVAL & INSTALLATION.....	4-70
		TESTING.....	4-70

10-28 MASTER INDEX

TRIGGER COILS	4-68	TYPE "G" (FORCE 1984-91 70-150 HP)	7-65
REMOVAL & INSTALLATION	4-68	TYPE "H" (FORCE 1991-95 70-150 HP)	7-76
TESTING	4-68	TYPE "I" (FORCE 1995-99 70-120 HP)	7-91
TROUBLESHOOTING	4-66		
IGNITION SYSTEM - UNITS w/DISTRIBUTOR	4-39	LOWER UNIT - GENERAL	
DESCRIPTION & OPERATION	4-39	CAM SHIFT IDENTIFICATION	7-3
TESTING	4-40	COUPLER SHIFT IDENTIFICATION	7-2
CD MODULE	4-41	DESCRIPTION & OPERATION	7-2
IGNITION COIL RESISTANCE	4-42	DRAINING	2-6
PREPARATION & EQUIPMENT	4-40	FILLING	2-7
TRIP REGULATOR	4-41	FROZEN POWERHEAD	7-5
VOLTAGE AT DISTRIBUTOR	4-42	GENERAL INFORMATION	7-2
VOLTAGE TEST TO SPARK PLUG	4-42	JUMPING OUT OF GEAR	7-5
DISTRIBUTOR	4-42	OIL RECOMMENDATIONS	2-5
ASSEMBLY & INSTALLATION	4-46	PRELIMINARY CHECKS	7-5
CLEANING & INSPECTION	4-45	PROPELLER	7-6
REMOVAL & DISASSEMBLY	4-42	SECTION COVERAGE	7-4
		SHIFT MECHANISMS	7-2
		TROUBLESHOOTING	7-4
		WATER IN THE LOWER UNIT	7-5
IGNITION TIMING	2-43		
ALL MODELS w/DISTRIBUTOR	2-48	LOWER UNIT - TYPE "A" (CHRYSLER CONSTANT MESH - NO SHIFT) . 7-8	
AT WOT FOR MAXIMUM SPARK ADVANCE -		ASSEMBLY	7-12
ALL MODELS w/MARKS ON THE FLYWHEEL	2-44	CLEANING & INSPECTION	7-11
1976-79 & 1983-84 35 HP MODELS	2-43	DISASSEMBLY	7-8
35 HP (1964-75 & 1980-82), 45 HP (1965-84), 50 HP		SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-8
(1965-66 & 1981-84) AND 55 HP (1967-76) MODELS	2-46		
55 HP (1977-83), 60 HP (1974-76 & 1984), 65 HP (1977-78)		LOWER UNIT - TYPE "B" (CHRYSLER 1-PIECE -	
MODELS AND ALL 4-CYL. MODELS w/o DISTRIBUTOR	2-47	CAM SHIFT, F-N OR F-N-R)	7-13
		ASSEMBLY	7-20
IMPELLER	5-3	CLEANING & INSPECTION	7-18
CLEANING & INSPECTION	5-12	DISASSEMBLY	7-15
SERVICE CAUTIONS	5-3	SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING &	
REMOVAL & INSTALLATION	5-3	MOTOR LEG EXTENSION	7-13
SERVICE CAUTIONS	5-3		
TYPE "I" (CHRYSLER CONSTANT MESH - NO SHIFT MODELS)	5-3	LOWER UNIT - TYPE "C" (CHRYSLER 1-PIECE - COUPLER SHIFT,	
TYPE "II" (CHRYSLER 1-PIECE - CAM SHIFT,		F-N-R)	7-22
F-N OR F-N-R MODELS)	5-3	ASSEMBLY	7-29
TYPE "III" (CHRYSLER 1-PIECE - COUPLER SHIFT, F-N-R MODELS)	5-4	CLEANING & INSPECTION	7-27
TYPE "IV" (CHRYSLER 2-PIECE - CAM OR COUPLER SHIFT, F-N-R		DISASSEMBLY	7-23
MODELS)	5-5	SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-22
TYPE "V" (FORCE 3-15 HP MODELS)	5-6	SHIFT ROD ADJUSTMENT	7-35
TYPE "VI" (FORCE 25-150 HP MODELS w/INTERNAL-TYPE			
CONNECTION)	5-7	LOWER UNIT - TYPE "D" (CHRYSLER 2-PIECE -	
TYPE "VII" (FORCE 25-150 HP MODELS w/THREADED SHIFT		CAM OR COUPLER SHIFT, F-N-R)	7-35
COUPLING)	5-8	ASSEMBLY	7-43
TYPE "VIII" (FORCE 25-150 HP MODELS w/SHIFT SHAFT PIN		CLEANING & INSPECTION	7-41
CONNECTION, ALUMINUM PUMP HOUSING)	5-8	DISASSEMBLY	7-37
TYPE "IX" (FORCE 25-150 HP MODELS w/SHIFT SHAFT PIN		SEPARATING LOWER UNIT FROM INTERMEDIATE HOUSING	7-35
CONNECTION, PLASTIC PUMP HOUSING)	5-10		
TYPE "X" (FORCE 25-150 HP MODELS w/SPLINED SHIFT SHAFT		LOWER UNIT - TYPE "E" (FORCE 3-7.5 HP ENGINES)	7-49
CONNECTIONS)	5-10	ASSEMBLY	7-54
TYPE "XI" (FORCE 85-125 HP L-DRIVE MODELS)	5-11	CLEANING & INSPECTION	7-52
		DISASSEMBLY	7-50
		REMOVAL & INSTALLATION	7-49
INTAKE MANIFOLD & REED BLOCK ASSEMBLY	6-7		
CLEANING & SERVICE	6-11	LOWER UNIT - TYPE "F" (FORCE 9.9-60 HP ENGINES W/SPLIT	
REMOVAL & INSTALLATION	6-9	GEARCASE)	7-56
ALL CHRYSLER MOTORS	6-9	ASSEMBLY	7-62
3-4 HP FORCE MOTORS	6-10	CLEANING & INSPECTION	7-59
5-25 HP FORCE MOTORS	6-10	DISASSEMBLY	7-57
35-150 HP FORCE MOTORS	6-11	REMOVAL & INSTALLATION	7-56
		SHIMMING	7-64
INTERIOR	2-19		
INSPECTION & CARE	2-19	LOWER UNIT - TYPE "G" (FORCE 1984-91 70-150 HP)	7-65
		ASSEMBLY	7-72
LOWER ASSEMBLY - L-DRIVE	7-104	CLEANING & INSPECTION	7-69
REMOVAL & INSTALLATION	7-104	DISASSEMBLY	7-66
		REMOVAL & INSTALLATION	7-65
		SHIMMING	7-72
LOWER UNIT - APPLICATIONS		LOWER UNIT - TYPE "H" (FORCE 1991-95 70-150 HP)	7-76
L-DRIVE MODELS	7-101	ASSEMBLY	7-86
TYPE "A" (CHRYSLER CONSTANT MESH - NO SHIFT)	7-8	CLEANING & INSPECTION	7-82
TYPE "B" (CHRYSLER 1-PIECE - CAM SHIFT, F-N OR F-N-R)	7-13	DISASSEMBLY	7-76
TYPE "C" (CHRYSLER 1-PIECE - COUPLER SHIFT, F-N-R)	7-22	REMOVAL & INSTALLATION	7-76
TYPE "D" (CHRYSLER 2-PIECE - CAM OR COUPLER SHIFT, F-N-R)	7-35	SHIMMING	7-84
TYPE "E" (FORCE 3-7.5 HP ENGINES)	7-49		
TYPE "F" (FORCE 9.9-60 HP ENGINES W/SPLIT GEARCASE)	7-56		

LOWER UNIT - TYPE "I" (FORCE 1995-99 70-120 HP)	7-91
ASSEMBLY	7-96
CLEANING & INSPECTION	7-95
DISASSEMBLY	7-91
REMOVAL & INSTALLATION	7-91
SHIMMING	7-99
LUBRICATING THE MOTOR	2-4
LUBRICATION	2-4
GENERAL INFORMATION	2-4
LOWER UNIT	2-5
LUBRICATION INSIDE THE BOAT	2-4
LUBRICATING THE MOTOR	2-4
2-STROKE OIL	2-8
LUBRICATION INSIDE THE BOAT	2-4
L-DRIVE MODELS	7-101
GEAR HOUSING	7-101
LOWER ASSEMBLY	7-104
SHOCK MOUNTS & MOUNTING BASE	7-104
STEERING YOKE	7-106
TRANSOM PLATE WATER SEAL	7-105
U-JOINTS & HOUSING	7-106
MAINTENANCE COVERAGE	2-2
MAINTENANCE EQUALS SAFETY	2-2
MAINTENANCE OR REPAIR?	1-2
MEASURING TOOLS	1-24
DEPTH GAUGES	1-26
DIAL INDICATORS	1-25
MICROMETERS & CALIPERS	1-24
TELESCOPING GAUGES	1-26
NEUTRAL START SWITCH	9-7
REMOVAL & INSTALLATION	9-8
TESTING	9-7
OAR/PADDLE	1-10
OTHER COMMON TOOLS	1-22
OIL INJECTION SYSTEM	5-13
GENERAL INFORMATION	5-13
OUTBOARDS ON SAIL BOATS	2-2
PERSONAL FLOTATION DEVICES	1-7
CARE OF LIFE JACKETS	1-8
GENERAL CONSIDERATIONS	1-8
LEGAL REQUIREMENTS	1-8
TYPE I PFDS	1-7
TYPE II PFDS	1-7
TYPE III PFDS	1-7
TYPE IV PFDS	1-7
TYPE V PFDS	1-7
POWERHEAD - CHRYSLER	6-12
ASSEMBLY & INSTALLATION	6-23
BREAK-IN PROCEDURES	6-31
CLEANING & INSPECTION	6-19
BLOCK & CYLINDER HEAD WARPAGE	6-23
CONNECTING ROD	6-20
CRANKCASE COVER	6-23
CRANKSHAFT	6-19
CYLINDER BLOCK	6-21
HONING CYLINDER WALLS	6-22
PISTON	6-20
RING END GAP	6-21
DISASSEMBLY	6-13
REMOVAL	6-12
POWERHEAD - FORCE	6-34
BEARINGS	6-52
BUY OR REBUILD?	6-40
CONNECTING RODS	6-49
CRANKSHAFT	6-50
CYLINDER BLOCK & HEAD	6-43
CYLINDER BORES	6-44
FLYWHEEL TIMING MARKS	6-53
ALTERNATE METHOD	6-55
USING THE FACTORY TIMING GAUGE	6-54
PISTON PINS	6-47
PISTON RINGS	6-48
PISTONS	6-46
POWERHEAD EXPLODED VIEWS	6-56
POWERHEAD OVERHAUL TIPS	6-40
POWERHEAD PREPARATION	6-42
POWERHEAD RECONDITIONING	6-39
DETERMINING POWERHEAD CONDITION	6-39
REMOVAL & INSTALLATION	6-34
TORQUE SEQUENCE DIAGRAMS	6-67
PROFESSIONAL HELP	1-3
PROPELLER	
CAVITATION	2-12
CUPPING	2-13
DIAMETER & PITCH	2-11
HIGH PERFORMANCE PROPS	2-14
INSPECTION	2-14
PROGRESSIVE PITCH	2-13
PROPELLER RAKE	2-13
PROPELLER SELECTION	2-11
REMOVAL & INSTALLATION	7-6
SEIZED PROPELLER	7-7
SHEAR PIN STYLE	7-6
SPLINE DRIVEN STYLE	7-6
ROTATION	2-13
SHOCK ABSORBERS	2-13
VIBRATION	2-13
PURCHASING PARTS	1-3
RECIRCULATING SYSTEM	3-58
REGULATIONS FOR YOUR BOAT	1-4
CAPACITY INFORMATION	1-4
CERTIFICATE OF COMPLIANCE	1-5
DOCUMENTING OF VESSELS	1-4
HULL IDENTIFICATION NUMBER	1-4
LENGTH OF BOATS	1-4
NUMBERING OF VESSELS	1-4
REGISTRATION OF BOATS	1-4
SALES & TRANSFERS	1-4
VENTILATION	1-4
VENTILATION SYSTEMS	1-5
REMOTE CONTROL BOX	9-2
ASSEMBLY	9-5
CLEANING & INSPECTION	9-4
DISASSEMBLY	9-2
REMOVAL & INSTALLATION	9-2
REMOTE CONTROL CABLES	9-7
ADJUSTMENT	9-7
REMOVAL & INSTALLATION	9-7
REMOTE CONTROLS	9-2
EMERGENCY STOP SWITCH (LANYARD)	9-8
IGNITION SWITCH	9-8
INTRODUCTION	9-2
NEUTRAL START SWITCH	9-7
OPERATION	9-2
REMOTE CONTROL BOX	9-2
REMOTE CONTROL CABLES	9-7
TROUBLESHOOTING	9-2
WARNING BUZZER	9-9
WIRING DIAGRAMS - FORCE	9-10
REQUIRED SAFETY EQUIPMENT	1-5
FIRE EXTINGUISHERS	1-5
PERSONAL FLOTATION DEVICES	1-7
SOUND PRODUCING DEVICES	1-8
TYPES OF FIRES	1-5
VISUAL DISTRESS SIGNALS	1-8
WARNING SYSTEM	1-6

10-30 MASTER INDEX

SENDERS & SWITCHES	4-91	REMOVAL & DISASSEMBLY	4-82
CHOKE SOLENOID TESTING	4-91	TESTING	4-84
CIRCUIT BREAKER TESTING	4-93	STARTER MOTOR RELAY	4-80
IGNITION SWITCH TESTING	4-91	REMOVAL & INSTALLATION	4-81
KILL SWITCH TESTING	4-92	TESTING	4-81
OVERHEAT WARNING HORN TESTING	4-93	TROUBLESHOOTING	4-80
POWER TRIM/TILT SWITCH	4-91	THEORY OF OPERATION	4-78
SHIFT INTERLOCK SWITCH TESTING	4-92	TROUBLESHOOTING	4-79
TEMPERATURE SENDING UNIT	4-91	STARTER TYPE "A" (HORIZONTAL-TYPE) -	
TRIM/TILT MOTOR TESTING	4-91	CHRYSLER & FORCE MODELS	10-2
SAFETY IN SERVICE	1-12	ASSEMBLY & INSTALLATION	10-4
DO'S	1-12	CLEANING & INSPECTION	10-3
DON'TS	1-12	REMOVAL & DISASSEMBLY	10-2
GENERAL INFORMATION	1-12	STARTER TYPE "B" (HORIZONTAL-TYPE) - CHRYSLER MODELS ...	10-6
SAFETY TOOLS	1-16	ASSEMBLY & INSTALLATION	10-8
EYE & EAR PROTECTION	1-16	CLEANING & INSPECTION	10-8
WORK CLOTHES	1-17	REMOVAL & DISASSEMBLY	10-6
WORK GLOVES	1-16	SHIFT INTERLOCK SYSTEM	10-6
SERIAL NUMBER IDENTIFICATION	2-2	STARTER TYPE "C" (HORIZONTAL-TYPE) -	
SHOCK MOUNTS & MOUNTING BASE - L-DRIVE	7-104	2 & 3-CYL. FORCE MODELS	10-10
REMOVAL & INSTALLATION	7-104	ASSEMBLY	10-14
SHOP EQUIPMENT	1-16	CLEANING & INSPECTION	10-13
CHEMICALS	1-17	DISASSEMBLY	10-12
SAFETY TOOLS	1-16	REMOVAL & INSTALLATION	10-10
SOUND PRODUCING DEVICES	1-8	STARTER TYPE "D" (VERTICALLY MOUNTED, BENDIX-STYLE) -	
SPARK PLUG WIRES	2-26	CHRYSLER & FORCE MODELS	10-16
REMOVAL & INSTALLATION	2-26	CLEANING & INSPECTION	10-17
TESTING	2-26	INSTALLATION OF ROPE	10-18
SPARK PLUGS	2-22	INTERLOCK SYSTEM ADJUSTMENT	10-23
HEAT RANGE	2-22	4.4-8HP MOTORS	10-23
INSPECTION & GAPPING	2-26	9.2 HP & 20 HP MOTORS	10-23
READING PLUGS	2-24	9.9-15 HP MOTORS	10-23
REMOVAL & INSTALLATION	2-23	35 HP MOTORS	10-24
SPECIAL TOOLS	1-23	REPLACING A BROKEN SPRING	10-20
SPECIFICATIONS - CHRYSLER		REPLACING FRAYED OR BROKEN STARTER ROPE	10-16
CARBURETOR JET SIZE	2-72, 3-60	STEERING YOKE - L-DRIVE	7-106
COMPRESSION	2-72, 6-84	REMOVAL & INSTALLATION	7-106
CONVERSION FACTORS	1-27	THERMOSTAT	5-12
GENERAL ENGINE	6-72	REMOVAL & INSTALLATION	5-12
LOWER UNIT CAPACITIES - CHRYSLER	7-108	TESTING	5-13
MAINTENANCE INTERVALS	2-71	TILLER HANDLE - FORCE	9-12
METRIC BOLTS - TYPICAL TORQUE VALUES	1-28	REMOVAL & INSTALLATION	9-12
POWERHEAD	6-82	MESHED GEAR TYPE	9-12
TORQUE	6-71	SINGLE CABLE TYPE	9-13
TUNE-UP	2-64	TILLER HANDLE - FORCE MODELS	9-12
SPECIFICATIONS - FORCE		DESCRIPTION & OPERATION	9-12
CARBURETOR	2-75	TROUBLESHOOTING	9-12
CONVERSION FACTORS	1-27	TILLER HANDLE	9-12
ENGINE REBUILDING	6-85	ENGINE STOP SWITCH	9-14
GENERAL ENGINE	2-72	EMERGENCY STOP SWITCH (LANYARD)	9-14
IGNITION SYSTEM	4-134	TIMING & SYNCHRONIZATION - CHRYSLER	2-28
LOWER UNIT CAPACITIES	2-74	GENERAL INFORMATION	2-30
LUBRICATION	2-75	CARBURETOR A - WALBRO LMB	2-30
MAINTENANCE INTERVALS	2-74	CARBURETOR B - TILLOTSON MT	2-33
METRIC BOLTS - TYPICAL TORQUE VALUES	1-28	CARBURETOR C - TILLOTSON MD	2-34
POWERHEAD TORQUE	6-93	CARBURETOR D - MODELS BELOW 45 HP w/TILLOTSON CO,	
SPARK PLUG DIAGNOSIS	2-76	TC OR WB	2-36
STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28	CARBURETOR D OR E - TILLOTSON CO, TC & WB OR WALBRO	
STATOR ALTERNATOR RESISTANCE	4-133	WE, 35 HP (1980-84) & LARGER	2-38
TUNE-UP	2-73	CARBURETOR F - AMAL	2-43
SPRING COMMISSIONING CHECKLIST	2-63	IGNITION TIMING - ALL 35 HP & LARGER MODELS	2-43
STARTER MOTOR CIRCUIT	4-77	TIMING & SYNCHRONIZATION - FORCE	2-50
DESCRIPTION & OPERATION	4-77	ENGINES w/FACE PLATE MOUNTED CONTROLS	2-50
FAULTY SYMPTOMS	4-79	ENGINES w/SINGLE CARB & TILLER HANDLE	2-51
MAINTENANCE	4-79	MULTIPLE CARB ENGINES w/MOTOROLA DISTRIBUTOR IGNITION	2-54
STARTER MOTOR	4-81	MULTIPLE CARB ENGINES w/NO DISTRIBUTOR	2-58
ASSEMBLY & INSTALLATION	4-87	1984-89 ENGINES w/SINGLE CARB & REMOTE CONTROL	2-51
CLEANING & INSPECTION	4-84	1990-99 ENGINES w/SINGLE CARB & REMOTE CONTROL	2-53
DESCRIPTION	4-81		

TOOLS	1-18	BREAKER POINT (MAGNETO) IGNITION	4-49
ELECTRONIC TOOLS	1-23	BASIC IGNITION COMPONENTS	4-16
GENERAL INFORMATION	1-18	CDM SYSTEM	4-71
HAND TOOLS	1-19	CHARGING SYSTEM	4-74
MEASURING TOOLS	1-24	COOLING SYSTEM	5-2
OTHER COMMON TOOLS	1-22	ELECTRICAL SYSTEM	4-6
SPECIAL TOOLS	1-23	ELECTRONIC IGNITION	4-59
TOOLS & SPARE PARTS	1-12	FUEL SYSTEM	3-5
TRANSOM PLATE WATER SEAL - L-DRIVE	7-105	GENERAL INFORMATION	1-13
REPLACEMENT	7-105	LOWER UNIT	7-4
TRIM/TILT SYSTEM - CENTER-MOUNTED PISTON	8-8	MOTOROLA DISTRIBUTOR IGNITION	4-52
DESCRIPTION & OPERATION	8-8	PRESTOLITE ELECTRONIC IGNITION	4-60
HYDRAULIC PUMP & MOTOR	8-13	REMOTE CONTROLS	9-2
PURGING AIR FROM SYSTEM	8-9	STARTER MOTOR CIRCUIT	4-79
SERVICE	8-13	THUNDERBOLT ELECTRONIC IGNITION	4-66
TESTING TRIM/TILT SYSTEM	8-10	TILLER HANDLE - FORCE MODELS	9-12
TRIM/TILT MOTOR	8-16	WARNING SYSTEMS	5-14
TRIM/TILT RELAY	8-20	TUNE-UP	2-20
TRIM/TILT SENDING UNIT	8-20	BREAKER POINTS	2-27
TRIM CYL, TILT CYL & SHOCK	8-17	COMPRESSION TESTING	2-21
TROUBLESHOOTING	8-10	ELECTRICAL SYSTEM CHECKS	2-27
TRIM/TILT SYSTEM - EARLY MODEL CHRYSLER	8-4	FUEL SYSTEM CHECKS	2-27
SERVICE	8-4	INTRODUCTION TO TUNE-UPS	2-20
TRIM/TILT COMPONENTS	8-5	SPARK PLUG WIRES	2-26
ASSEMBLY - SYSTEM "A"	8-7	SPARK PLUGS	2-22
CLEANING & INSPECTION - SYSTEM "A"	8-6	TUNE-UP SEQUENCE	2-20
DISASSEMBLY - SYSTEM "A"	8-6	TUNE-UP SEQUENCE	2-20
DISASSEMBLY & ASSEMBLY - SYSTEM "B"	8-8	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
INSTALLATION TO CLAMP BRACKET	8-6	BASIC ELECTRICAL THEORY	4-2
REMOVAL	8-5	HOW ELECTRICITY WORKS	4-2
TRIM/TILT SYSTEM - L-DRIVE POWER	8-28	OHM'S LAW	4-2
DESCRIPTION & OPERATION	8-28	BATTERY	4-9
PRESSURE SWITCH	8-30	CHARGERS	4-10
TESTING	8-30	CONSTRUCTION	4-9
TRIM/TILT PUMP ASSEMBLY	8-28	LOCATION	4-9
BLEEDING	8-29	MARINE BATTERIES	4-9
REMOVAL & INSTALLATION	8-28	RATINGS	4-9
TESTING	8-29	REPLACING CABLES	4-10
TILT CYLINDER	8-29	SAFETY PRECAUTIONS	4-9
REMOVAL & INSTALLATION	8-29	ELECTRICAL COMPONENTS	4-2
TRIM/TILT SYSTEM - MANUAL TILT	8-4	CONNECTORS	4-4
DESCRIPTION & OPERATION	8-4	GROUND	4-3
SERVICE	8-4	LOAD	4-4
TRIM/TILT SYSTEM - SINGLE RAM POWER	8-21	POWER SOURCE	4-2
DESCRIPTION & OPERATION	8-21	PROTECTIVE DEVICES	4-3
TRIM/TILT CYLINDER	8-24	SWITCHES & RELAYS	4-3
CLEANING & INSPECTION	8-25	WIRING & HARNESSSES	4-4
REMOVAL & INSTALLATION	8-24	TACHOMETERS & CONNECTIONS	4-8
TRIM/TILT MOTOR	8-22	TEST EQUIPMENT	4-4
CLEANING & INSPECTION	8-24	GENERAL INFORMATION	4-4
REMOVAL & INSTALLATION	8-23	JUMPER WIRES	4-4
TESTING	8-22	MULTI-METERS	4-5
TRIM/TILT PUMP	8-21	TEST LIGHTS	4-5
BLEEDING	8-22	TROUBLESHOOTING	4-6
REMOVAL & INSTALLATION	8-21	WIRE & CONNECTOR REPAIR	4-8
TRIM/TILT RELAY	8-26	U-JOINTS & HOUSING - L-DRIVE	7-106
TESTING	8-26	REMOVAL & INSTALLATION	7-106
TRIM/TILT SWITCH	8-26	VHF-FM RADIO	1-10
TESTING	8-26	VISUAL DISTRESS SIGNALS	1-8
TRIM/TILT SYSTEMS		WARNING BUZZER	9-9
CENTER-MOUNTED PISTON TRIM/TILT	8-8	REMOVAL & INSTALLATION	9-9
DESCRIPTION & OPERATION	8-2	TESTING	9-9
EARLY MODEL CHRYSLER TRIM/TILT	8-4	WARNING SYSTEMS	5-14
L-DRIVE POWER TRIM/TILT	8-28	CYLINDER HEAD TEMPERATURE SENSOR	5-14
MANUAL TILT	8-4	DESCRIPTION & OPERATION	5-14
SINGLE RAM POWER TRIM/TILT	8-21	TROUBLESHOOTING THE WARNING SYSTEMS	5-14
TROUBLESHOOTING		WATER PUMP	5-3
BASIC OPERATING PRINCIPLES	1-13	CLEANING & INSPECTION	5-12

10-32 MASTER INDEX

SERVICE CAUTIONS	5-3	TYPE "VIII" (FORCE 25-150 HP MODELS w/SHIFT SHAFT PIN CONNECTION, ALUMINUM PUMP HOUSING)	5-8
REMOVAL & INSTALLATION	5-3	TYPE "IX" (FORCE 25-150 HP MODELS w/SHIFT SHAFT PIN CONNECTION, PLASTIC PUMP HOUSING)	5-10
SERVICE CAUTIONS	5-3	TYPE "X" (FORCE 25-150 HP MODELS w/SPLINED SHIFT SHAFT CONNECTIONS)	5-10
TYPE "I" (CHRYSLER CONSTANT MESH - NO SHIFT MODELS)	5-3	TYPE "XI" (FORCE 85-125 HP L-DRIVE MODELS)	5-11
TYPE "II" (CHRYSLER 1-PIECE - CAM SHIFT, F-N OR F-N-R MODELS)	5-3	WINTER STORAGE	2-61
TYPE "III" (CHRYSLER 1-PIECE - COUPLER SHIFT, F-N-R MODELS)	5-4	CHRYSLER MODELS	2-61
TYPE "IV" (CHRYSLER 2-PIECE - CAM OR COUPLER SHIFT, F-N-R MODELS)	5-5	FORCE MODELS	2-62
TYPE "V" (FORCE 3-15 HP MODELS)	5-6	WIRING DIAGRAMS	
TYPE "VI" (FORCE 25-150 HP MODELS w/INTERNAL-TYPE CONNECTION)	5-7	CHRYSLER MODELS	4-93
TYPE "VII" (FORCE 25-150 HP MODELS w/THREADED SHIFT COUPLING)	5-8	FORCE MODELS	4-107