

# CONTENTS

---

## 1

### GENERAL INFORMATION, SAFETY & TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-12
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

---

## 2

### MAINTENANCE & TUNE-UP

GENERAL INFORMATION (WHAT EVERYONE SHOULD KNOW ABOUT MAINTENANCE)	2-2
LUBRICATION	2-4
ENGINE MAINTENANCE	2-10
BOAT MAINTENANCE	2-29
TUNE-UP	2-32
STORAGE (WHAT TO DO BEFORE AND AFTER)	2-76
CLEARING A SUBMERGED MOTOR	2-79
SPECIFICATIONS	2-81

---

## 3

### FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-12
ELECTRONIC FUEL INJECTION (EFI)	3-45
OPTIMAX DIRECT FUEL INJECTION (DFI)	3-73
FUEL/OIL ROUTING DIAGRAMS (EFI)	3-115
AIR/FUEL ROUTING DIAGRAMS	3-117
SPECIFICATIONS	3-121

---

## 4

### IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING CIRCUIT	4-39
DESCRIPTION & OPERATION	
SPECIFICATIONS	
STARTER CIRCUIT	4-51
ELECTRICAL SWITCH/SOLENOID SERVICE	4-61
WIRING DIAGRAMS	4-64

---

## 5

### COOLING & LUBRICATION

OIL INJECTION SYSTEM	5-2
COOLING SYSTEM	5-11
WARNING SYSTEMS	5-31
COOLING SYSTEM FLOW SCHEMATICS	5-41
SPECIFICATIONS	5-44

# CONTENTS

POWERHEAD MECHANICAL	6-2
POWERHEAD RECONDITIONING	6-60
POWERHEAD BREAK-IN	6-71
SPECIFICATION CHARTS	6-73

## POWERHEAD

# 6

LOWER UNIT	7-2
TROUBLESHOOTING	7-3
JET DRIVE	7-88

## LOWER UNIT

# 7

MECHANICAL TILT (UNASSISTED)	8-2
GAS ASSIST TILT SYSTEM	8-6
POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM	8-19
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL	8-24
POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL	8-29

## TRIM & TILT

# 8

REMOTE CONTROLS - MECHANICAL UNITS	9-2
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS	9-11
TILLER HANDLE	9-16
REMOTE CONTROL WIRING	9-22

## REMOTE CONTROL

# 9

HAND REWIND STARTER	10-2
---------------------	------

## HAND REWIND STARTER

# 10

MASTER INDEX	10-15
--------------	-------

## MASTER INDEX

ADDITIONAL REMOTE UNITS . . . . .	9-6	4/5 HP MODELS . . . . .	3-21
EXPLODED VIEWS . . . . .	9-6	CLEANING & INSPECTION . . . . .	3-24
<b>AIR/FUEL ROUTING DIAGRAMS (OPTIMAX) . . . . .</b>	<b>3-117</b>	OVERHAUL . . . . .	3-23
AIR COMPRESSOR . . . . .	3-78	REMOVAL & INSTALLATION . . . . .	3-21
DESCRIPTION & OPERATION . . . . .	3-78	6/8, 9.9/10/15 & 20/20 JET/25 HP MODELS . . . . .	3-25
OVERHAUL . . . . .	3-84	CLEANING & INSPECTION . . . . .	3-28
REMOVAL & INSTALLATION . . . . .	3-83	OVERHAUL . . . . .	3-26
TESTING . . . . .	3-78	REMOVAL & INSTALLATION . . . . .	3-25
AIR FILTER . . . . .	2-27	30/40 HP 2-CYLINDER MODELS . . . . .	3-28
REMOVAL & INSTALLATION . . . . .	2-27	CLEANING & INSPECTION . . . . .	3-31
AIR PRESSURE REGULATOR . . . . .	3-87	OVERHAUL . . . . .	3-29
DESCRIPTION & OPERATION . . . . .	3-87	REMOVAL & INSTALLATION . . . . .	3-28
REMOVAL & INSTALLATION . . . . .	3-88	40-125 HP 3 & 4-CYLINDER MODELS . . . . .	3-32
TESTING . . . . .	3-88	OVERHAUL . . . . .	3-33
AIR TEMPERATURE SENSOR (ATS) . . . . .	3-58	REMOVAL & INSTALLATION . . . . .	3-32
DESCRIPTION & OPERATION . . . . .	3-58	150/200 HP (2.5L) V6 MODELS . . . . .	3-34
REMOVAL & INSTALLATION . . . . .	3-58	CLEANING & INSPECTION . . . . .	3-37
TESTING . . . . .	3-58	OVERHAUL . . . . .	3-35
ALTERNATOR (EXTERNAL) . . . . .	4-45	REMOVAL & INSTALLATION . . . . .	3-34
DESCRIPTION & OPERATION . . . . .	4-45	<b>CHARGING CIRCUIT . . . . .</b>	<b>4-39</b>
REMOVAL & INSTALLATION . . . . .	4-46	ALTERNATOR (EXTERNAL) . . . . .	4-45
TESTING . . . . .	4-45	BATTERY . . . . .	4-42
ANODES (ZINCS) . . . . .	2-24	DESCRIPTION & OPERATION . . . . .	4-39
INSPECTION . . . . .	2-24	RECTIFIER . . . . .	4-47
SERVICING . . . . .	2-25	REGULATOR/RECTIFIER . . . . .	4-49
BASIC ELECTRICAL THEORY . . . . .	4-2	SERVICE PRECAUTIONS . . . . .	4-39
HOW DOES ELECTRICITY WORK: THE WATER ANALOGY . . . . .	4-2	STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) . . . . .	4-44
OHM'S LAW . . . . .	4-2	TROUBLESHOOTING . . . . .	4-40
BATTERIES . . . . .		<b>CLEARING A SUBMERGED MOTOR . . . . .</b>	<b>2-79</b>
BATTERY CHARGERS . . . . .	4-44	COMBUSTION . . . . .	3-6
CONSTRUCTION . . . . .	4-43	ABNORMAL COMBUSTION . . . . .	3-6
LOCATION . . . . .	4-43	COMBUSTION RELATED PISTON FAILURES . . . . .	3-6
MAINTENANCE . . . . .	2-29	FACTORS AFFECTING COMBUSTION . . . . .	3-6
CLEANING . . . . .	2-30	COMMANDER SIDE MOUNT REMOTE CONTROL BOX (MERCURY) . . . . .	9-2
ELECTROLYTE LEVEL . . . . .	2-29	ASSEMBLY . . . . .	9-5
MARINE BATTERIES . . . . .	4-42	CLEANING & INSPECTING . . . . .	9-5
RATINGS . . . . .	4-43	DESCRIPTION & OPERATION . . . . .	9-2
REPLACING CABLES . . . . .	4-44	DISASSEMBLY . . . . .	9-3
SAFETY PRECAUTIONS . . . . .	4-43	REMOVAL & INSTALLATION . . . . .	9-2
STORAGE . . . . .	2-31	TROUBLESHOOTING . . . . .	9-2
TESTING . . . . .	2-30	COMPRESSION TESTING . . . . .	2-33
BEARINGS . . . . .	6-70	LEAK TESTING . . . . .	2-35
INSPECTION . . . . .	6-70	LOW COMPRESSION . . . . .	2-34
BEFORE/AFTER EACH USE . . . . .	2-2	TUNE-UP COMPRESSION CHECK . . . . .	2-33
VISUALLY INSPECTING THE BOAT & MOTOR . . . . .	2-3	CONNECTING RODS . . . . .	6-68
<b>BOAT MAINTENANCE . . . . .</b>	<b>2-29</b>	INSPECTION . . . . .	6-68
BATTERIES . . . . .	2-29	CONTROL CABLES . . . . .	9-20
FIBERGLASS HULL . . . . .	2-31	REMOVAL & INSTALLATION . . . . .	9-20
INTERIOR . . . . .	2-32	2.5/3.3 HP MODELS . . . . .	9-20
<b>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) . . . . .</b>	<b>1-10</b>	4/5 HP MODELS . . . . .	9-20
ANCHORS . . . . .	1-10	6-25 HP MODELS . . . . .	9-20
BAILING DEVICES . . . . .	1-10	30/40 HP & 40/50 HP (2- AND 3-CYL) MODELS . . . . .	9-21
COMPASS . . . . .	1-10	55 HP & LARGER MODELS . . . . .	9-21
FIRST AID KIT . . . . .	1-10	<b>COOLING SYSTEM . . . . .</b>	
OAR/PADDLE . . . . .	1-10	DESCRIPTION & OPERATION . . . . .	5-12
TOOLS AND SPARE PARTS . . . . .	1-12	FLUSHING THE COOLING SYSTEM . . . . .	2-10
VHF-FM RADIO . . . . .	1-10	FLUSHING JET DRIVES . . . . .	2-12
<b>BOATING SAFETY . . . . .</b>	<b>1-4</b>	THERMOSTAT . . . . .	5-15
COURTESY MARINE EXAMINATIONS . . . . .	1-10	TROUBLESHOOTING . . . . .	5-12
REGULATIONS FOR YOUR BOAT . . . . .	1-4	WATER PUMP . . . . .	5-19
REQUIRED SAFETY EQUIPMENT . . . . .	1-5	<b>COOLING SYSTEM FLOW SCHEMATICS . . . . .</b>	<b>5-41</b>
BUY OR REBUILD? . . . . .	6-60	CRANKSHAFT . . . . .	6-69
<b>CARBURETED FUEL SYSTEM . . . . .</b>	<b>3-12</b>	INSPECTION . . . . .	6-69
DESCRIPTION & OPERATION . . . . .	3-12	CRANKSHAFT POSITION SENSOR (CPS)	
ENRICHENER SYSTEMS . . . . .	3-41	DESCRIPTION & OPERATION . . . . .	4-27
FUEL PUMP . . . . .	3-37	EFI . . . . .	3-60
TROUBLESHOOTING THE FUEL SYSTEM . . . . .	3-15	OPTIMAX . . . . .	3-91
2.5/3.3 HP MODELS . . . . .	3-18	TESTING . . . . .	4-27
CLEANING & INSPECTION . . . . .	3-20	CYLINDER BLOCK & HEAD . . . . .	6-62
OVERHAUL . . . . .	3-19	GENERAL INFORMATION . . . . .	6-62
REMOVAL & INSTALLATION . . . . .	3-18	INSPECTION . . . . .	6-63

# 10-16 MASTER INDEX

CYLINDER BORES	6-63	DRIVE BELT	2-25
INSPECTION	6-64	INSPECTION	2-26
REFINISHING	6-64	REMOVAL & INSTALLATION	2-26
<b>DESCRIPTION &amp; OPERATION</b>		<b>ELECTRIC FUEL PUMP</b>	
AIR COMPRESSOR	3-78	EFI	3-67
AIR PRESSURE REGULATOR	3-87	OPTIMAX	3-104
AIR TEMPERATURE SENSOR (ATS)	3-58	<b>ELECTRICAL COMPONENTS</b>	4-2
ALTERNATOR (EXTERNAL)	4-45	GROUND	4-3
CARBURETED FUEL SYSTEM	3-12	LOAD	4-3
CDI & MODULAR CDI SYSTEMS	4-10	POWER SOURCE	4-2
CHARGING CIRCUIT	4-39	PROTECTIVE DEVICES	4-3
COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2	SWITCHES & RELAYS	4-3
COOLING SYSTEM	5-11	WIRING & HARNESSSES	4-4
CRANKSHAFT POSITION SENSOR (CPS)	4-27	<b>ELECTRICAL SWITCH/SOLENOID SERVICE</b>	<b>4-61</b>
DETONATION (KNOCK) SENSOR & MODULE	3-61	IGNITION KEY SWITCH	4-61
DIRECT INJECTOR	3-96	KILL SWITCH	4-62
ELECTRIC FUEL PUMP - EFI	3-67	NEUTRAL SAFETY SWITCH	4-63
ELECTRIC FUEL PUMP(S) - OPTIMAX	3-104	START BUTTON	4-63
ELECTRONIC/ENGINE CONTROL MODULE (ECM)	3-62	<b>ELECTRICAL TESTING</b>	4-6
ELECTRONIC FUEL INJECTION (EFI)	3-45	OPEN CIRCUITS	4-6
ENGINE TEMPERATURE SENSORS (ETS)	3-55	RESISTANCE	4-6
ENRICHENER SYSTEMS	3-41	SHORT CIRCUITS	4-6
FUEL INJECTOR - OPTIMAX	3-97	VOLTAGE	4-6
FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY & AIR INTAKE PLENUM		VOLTAGE DROP	4-6
EFI	3-47	<b>ELECTRONIC ENGINE/PROPULSION CONTROL MODULE (ECM)</b>	
FUEL PRESSURE REGULATOR - EFI	3-72	EFI	3-62
FUEL PRESSURE REGULATOR - OPTIMAX	3-98	OPTIMAX	3-95
FUEL (AND AIR) RAIL	3-106	<b>ELECTRONIC FUEL INJECTION (EFI)</b>	<b>3-45</b>
GAS ASSIST TILT SYSTEM	8-6	AIR TEMPERATURE SENSOR (ATS)	3-58
HAND REWIND STARTER	10-2	CRANKSHAFT POSITION SENSOR (CPS)	3-60
IGNITION COILS	4-28	DESCRIPTION & OPERATION	3-45
IGNITION MODULE (CD UNIT/CDM)	4-331	DETONATION (KNOCK) SENSOR & MODULE	3-61
INJECTION SYSTEM	5-4	ELECTRIC FUEL PUMP	3-67
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - EFI	3-58	<b>ELECTRICAL SYSTEM CHECKS</b>	2-40
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR - OPTIMAX	3-92	BATTERY	2-40
MECHANICAL FUEL PUMP - EFI	3-63	INTERNAL WIRING HARNESS	2-40
MECHANICAL TILT (UNASSISTED)	8-2	STARTER MOTOR	2-40
OIL LEVEL SENSOR (SWITCH)	5-40	ELECTRONIC/ENGINE CONTROL MODULE (ECM) - EFI	3-62
OPTIMAX DIRECT FUEL INJECTION (DFI)	3-73	ELECTRONIC/PROPULSION CONTROL MODULE (ECM/PCM) - OPTIMAX	3-95
PCM & DIGITAL INDUCTIVE SYSTEMS	4-11	ENGINE TEMPERATURE SENSORS (ETS)	3-55
PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10	FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY & AIR INTAKE PLENUM	3-47
PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14	FUEL PRESSURE REGULATOR	3-72
PTT - 3 RAM INTEGRAL	8-24	MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	3-58
RECTIFIER	4-47	MECHANICAL FUEL PUMP - EFI	3-63
REMOTE CONTROLS - DTS UNITS	9-11	MECHANICAL FUEL PUMP - OPTIMAX	3-100
SHIFT INTERRUPT SWITCH	3-94	THROTTLE POSITION SENSOR (TPS)	3-60
STARTER MOTOR	4-55	TROUBLESHOOTING	3-45
STARTER MOTOR CIRCUITS	4-51	VAPOR SEPARATOR TANK (VST) ASSEMBLY	3-68
STARTER RELAY/SOLENOID	4-53	WATER SENSOR	3-62
STATOR/CHARGE COIL	4-22	<b>ELECTRONIC IGNITION SYSTEMS</b>	4-8
STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL)	4-44	COMPONENT TESTING	4-12
TEMPERATURE SENSORS (ATS, CTS AND ETS)	3-89	DESCRIPTION & OPERATION	4-10
TEMPERATURE SWITCH (WARNING SYSTEM)	5-38	CDI & MODULAR CDI SYSTEMS	4-10
THROTTLE POSITION SENSOR (TPS) - EFI	3-60	PCM & DIGITAL INDUCTIVE SYSTEMS	4-11
THROTTLE POSITION SENSOR (TPS) - OPTIMAX	3-91	DIAGNOSTIC CHARTS	4-13
TILLER HANDLE	9-16	SYSTEM TYPES & COMPONENTS	4-8
TRACKER VALVE (V6 ONLY)	3-107	1-CYLINDER IGNITION	4-8
TRIGGER COILS	4-25	2-CYLINDER IGNITION	4-8
VAPOR SEPARATOR - OPTIMAX	3-108	3- & 4-CYL IGNITION SYSTEMS (EXC. OPTIMAX MOTORS)	4-8
VAPOR SEPARATOR TANK (VST) ASSEMBLY - EFI	3-68	CARBURETED V6 & 2001 EFI IGNITION SYSTEMS	4-10
WATER SENSOR	3-62	OPTIMAX & 2002 AND LATER EFI IGNITION SYSTEMS	4-10
<b>DETERMINING POWERHEAD CONDITION</b>	6-60	<b>TROUBLESHOOTING</b>	4-11
<b>DETONATION (KNOCK) SENSOR &amp; MODULE</b>	3-61	SPARK PLUGS & CHECKING FOR SPARK	4-11
DESCRIPTION & OPERATION	3-61	TROUBLESHOOTING WITH MINIMAL TEST EQUIPMENT	4-11
TESTING	3-61	TROUBLESHOOTING BATTERY-DRIVEN IGNITIONS	4-12
<b>DIGITAL REMOTE UNITS</b>	9-14	TROUBLESHOOTING ALTERNATOR-DRIVEN IGNITIONS	4-12
EXPLODED VIEWS	9-14	<b>ELECTRONIC SHIFT CONTROL (ESC)</b>	9-12
<b>DIRECT INJECTOR</b>	3-96	ACTUATOR ADJUSTMENT	9-13
DESCRIPTION & OPERATION	3-96	SHIFT ACTUATOR REMOVAL & INSTALLATION	9-12
REMOVAL & INSTALLATION	3-96	SHIFT OVERRIDE PROCEDURE	9-13
TESTING	3-96		

ELECTRONIC THROTTLE CONTROL (ETC) . . . . .	9-13	FUEL LINES & FITTINGS . . . . .	3-8
REMOVAL & INSTALLATION . . . . .	9-13	SERVICE . . . . .	3-11
ENGINE COVERS (TOP COVER & COWLING) . . . . .	2-10	TESTING . . . . .	3-9
REMOVAL & INSTALLATION . . . . .	2-10	FUEL PRESSURE REGULATOR . . . . .	
<b>ENGINE MAINTENANCE . . . . .</b>	<b>2-10</b>	EFI . . . . .	3-72
AIR FILTER . . . . .	2-27	OPTIMAX . . . . .	3-98
ANODES (ZINCS) . . . . .	2-24	FUEL PUMP - CARBURETTED . . . . .	3-37
COOLING SYSTEM . . . . .	2-10	REMOVAL & INSTALLATION . . . . .	3-39
DRIVE BELT . . . . .	2-25	OVERHAUL . . . . .	3-40
ENGINE COVERS . . . . .	2-10	TESTING . . . . .	3-37
FUEL FILTER/FUEL WATER SEPARATOR . . . . .	2-14	FUEL SYSTEM PRESSURIZATION . . . . .	3-4
JET DRIVE IMPELLER . . . . .	2-23	PRESSURIZING THE FUEL SYSTEM . . . . .	3-5
OIL FILTER . . . . .	2-28	RELEASING FUEL SYSTEM PRESSURE . . . . .	3-5
PROPELLER . . . . .	2-17	FUEL SYSTEM SERVICE CAUTIONS . . . . .	3-2
2-STROKE OIL . . . . .	2-12	FUEL TANK . . . . .	3-7
ENGINE & SERIAL NUMBER IDENTIFICATION . . . . .	2-2	SERVICE . . . . .	3-7
ENGINE TEMPERATURE SENSORS (ETS) . . . . .	3-55	<b>FUEL TANK &amp; LINES . . . . .</b>	<b>3-6</b>
DESCRIPTION & OPERATION . . . . .	3-55	FUEL LINES & FITTINGS . . . . .	3-8
REMOVAL & INSTALLATION . . . . .	3-57	FUEL TANK . . . . .	3-7
TESTING . . . . .	3-56	GAS ASSIST DAMPER . . . . .	8-6
ENRICHENER SYSTEMS . . . . .	3-41	OVERHAUL (55-90 HP ONLY) . . . . .	8-8
DESCRIPTION & OPERATION . . . . .	3-41	REMOVAL & INSTALLATION . . . . .	8-6
FUEL PRIMER HOSE ROUTING DIAGRAMS . . . . .	3-42	TESTING . . . . .	8-6
TESTING THE ELECTRIC PRIMER . . . . .	3-42	<b>GAS ASSIST TILT SYSTEM . . . . .</b>	<b>8-6</b>
THERMAL AIR VALVE CIRCUIT . . . . .	3-44	DESCRIPTION & OPERATION . . . . .	8-6
EXHAUST GASES . . . . .	7-3	GAS ASSIST DAMPER . . . . .	8-6
<b>FASTENERS, MEASUREMENTS AND CONVERSIONS . . . . .</b>	<b>1-27</b>	INTRODUCTION . . . . .	8-6
BOLTS, NUTS AND OTHER THREADED RETAINERS . . . . .	1-27	GEARCASE REPAIR & OVERHAUL TIPS . . . . .	7-4
STANDARD AND METRIC MEASUREMENTS . . . . .	1-27	GEARCASE - 2.5/3.3 HP MODELS (W/NON-SHIFTING GEARCASES) . . . . .	7-4
TORQUE . . . . .	1-27	ASSEMBLY . . . . .	7-6
FIBERGLASS HULL . . . . .	2-31	CLEANING & INSPECTION . . . . .	7-6
INSPECTION & CARE . . . . .	2-31	DISASSEMBLY . . . . .	7-5
FLYWHEEL . . . . .	4-18	REMOVAL & INSTALLATION . . . . .	7-4
REMOVAL & INSTALLATION . . . . .	4-18	SHIMMING . . . . .	7-7
1 & 2-CYLINDER POWERHEADS . . . . .	4-18	GEARCASE - 2.5/3.3 HP & 4/5 HP MODELS	
3- AND 4-CYLINDER POWERHEADS . . . . .	4-19	(W/SHIFTING GEARCASES) . . . . .	7-8
6-CYLINDER POWERHEADS . . . . .	4-21	ASSEMBLY . . . . .	7-11
FUEL . . . . .	3-2	BEARING CARRIER & PROPELLER SHAFT . . . . .	7-15
ALCOHOL-BLENDED FUELS . . . . .	3-3	DRIVESHAFT NEEDLE BEARING . . . . .	7-14
HIGH ALTITUDE OPERATION . . . . .	3-3	DRIVESHAFT, PINION GEAR & WATER PUMP BASE . . . . .	7-15
OCTANE RATING . . . . .	3-2	FORWARD GEAR & BEARING . . . . .	7-13
RECOMMENDATIONS . . . . .	3-3	SLIDING CLUTCH ASSEMBLY - 2.5/3.3 HP MODELS . . . . .	7-11
STALE/CONTAMINATED FUEL . . . . .	3-3	SLIDING CLUTCH ASSEMBLY - 4/5 HP MODELS . . . . .	7-13
VAPOR PRESSURE . . . . .	3-3	WATER PUMP BASE PLATE . . . . .	7-15
FUEL (AND AIR) RAIL . . . . .	3-106	CLEANING & INSPECTION . . . . .	7-11
DESCRIPTION & OPERATION . . . . .	3-106	DISASSEMBLY . . . . .	7-9
REMOVAL & INSTALLATION . . . . .	3-106	BEARING CARRIER & PROPELLER SHAFT . . . . .	7-9
<b>FUEL &amp; COMBUSTION BASICS . . . . .</b>	<b>3-2</b>	DRIVESHAFT & WATER PUMP BASE . . . . .	7-10
COMBUSTION . . . . .	3-6	FORWARD GEAR & BEARING . . . . .	7-111
FUEL . . . . .	3-2	REMOVAL & INSTALLATION . . . . .	7-8
FUEL SYSTEM PRESSURIZATION . . . . .	3-4	SHIMMING . . . . .	7-16
FUEL SYSTEM SERVICE CAUTIONS . . . . .	3-2	GEARCASE - 6-25 HP MODELS . . . . .	7-17
<b>FUEL/OIL ROUTING DIAGRAMS (EFI) . . . . .</b>	<b>3-115</b>	ASSEMBLY . . . . .	7-23
FUEL FILTER/FUEL WATER SEPARATOR . . . . .	2-14	BEARING CARRIER . . . . .	7-26
FUEL FILTER SERVICE . . . . .	2-15	DRIVESHAFT NEEDLE BEARING(S) . . . . .	7-24
DISPOSABLE INLINE FILTERS . . . . .	2-15	DRIVESHAFT & PINION GEAR . . . . .	7-25
DISPOSABLE INLINE FUEL/WATER SEPARATORS . . . . .	2-16	FORWARD GEAR & BEARING . . . . .	7-24
SERVICEABLE CANISTER-TYPE INLINE FILTERS . . . . .	2-16	SLIDING CLUTCH . . . . .	7-23
RELEASING FUEL SYSTEM PRESSURE . . . . .	2-14	WATER PUMP PLATE . . . . .	7-25
FUEL INJECTOR - OPTIMAX . . . . .	3-97	CLEANING & INSPECTION . . . . .	7-21
DESCRIPTION & OPERATION . . . . .	3-97	DISASSEMBLY . . . . .	7-18
REMOVAL & INSTALLATION . . . . .	3-98	DRIVESHAFT & PINION GEAR REMOVAL . . . . .	7-19
TESTING . . . . .	3-98	FORWARD GEAR & BEARING . . . . .	7-19
FUEL INJECTORS, FUEL RAIL, REED ASSEMBLY &		DRIVESHAFT SEALS, BUSHINGS AND/OR NEEDLE BEARINGS . . . . .	7-20
AIR INTAKE PLENUM - EFI . . . . .	3-47	PROPELLER SHAFT & BEARING CARRIER . . . . .	7-18
DESCRIPTION & OPERATION . . . . .	3-47	REMOVAL & INSTALLATION . . . . .	7-17
CLEANING & INSPECTION . . . . .	3-55	SHIMMING . . . . .	7-27
REMOVAL & INSTALLATION . . . . .	3-49	GEARCASE - 30/40 HP (2-CYL) & 40/50 HP (3-CYL) MODELS . . . . .	7-28
TESTING THE INJECTORS . . . . .	3-48	ASSEMBLY . . . . .	7-32
		BEARING CARRIER ASSEMBLY . . . . .	7-34
		DRIVESHAFT, SHIFT SHAFT & BEARINGS . . . . .	7-33
		FORWARD GEAR, BEARING & RACE . . . . .	7-32

# 10-18 MASTER INDEX

PROPELLER SHAFT ASSEMBLY .....	7-35	DISASSEMBLY - 2005 & LATER MODELS	
PROPELLER SHAFT & BEARING CARRIER INSTALLATION .....	7-36	W/SERIAL #1B504989 AND ABOVE .....	7-74
CLEANING & INSPECTION .....	7-30	BEARING CARRIER REMOVAL & DISASSEMBLY .....	7-74
DISASSEMBLY .....	7-28	DRIVESHAFT & BEARINGS REMOVAL/SERVICE .....	7-74
BEARING CARRIER & PROPELLER SHAFT .....	7-28	NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL .....	7-75
DRIVESHAFT, SHIFT SHAFT & BEARINGS .....	7-29	PROPELLER SHAFT REMOVAL & DISASSEMBLY .....	7-75
FORWARD GEAR & BEARING .....	7-30	SHIFT SHAFT DISASSEMBLY .....	7-75
REMOVAL & INSTALLATION .....	7-28	REMOVAL & INSTALLATION .....	7-69
SHIMMING .....	7-36	SHIMMING - 2001-05 MODELS THRU SERIAL #1B504988 .....	7-85
GEARCASE - 55/60 (3-CYL) NON-BIGFOOT,		GEARCASE - 3.0L V6 OPTIMAX PRO/SPORT XS MODELS .....	7-90
60 HP BIGFOOT & 75-125 HP MODELS .....	7-36	ASSEMBLY .....	7-95
ASSEMBLY .....	7-45	BEARING CARRIER ASSEMBLY .....	7-96
BEARING CARRIER ASSEMBLY & INSTALLATION .....	7-49	BEARING CARRIER INSTALLATION .....	7-97
DRIVESHAFT & BEARINGS .....	7-47	DRIVESHAFT PINION NEEDLE BEARING INSTALLATION .....	7-95
FORWARD GEAR, BEARING & RACE .....	7-47	NOSE CONE GEAR BEARING RACE OR ADAPTER .....	7-95
PROPELLER SHAFT ASSEMBLY .....	7-49	PROPELLER SHAFT ASSEMBLY .....	7-96
SHIFT SHAFT INSTALLATION .....	7-46	PROPELLER SHAFT, DRIVESHAFT & PINION GEAR .....	7-96
CLEANING & INSPECTION .....	7-42	SHIFT SHAFT ASSEMBLY .....	7-95
DISASSEMBLY .....	7-38	CLEANING & INSPECTION .....	7-93
BEARING CARRIER REMOVAL & DISASSEMBLY .....	7-38	DISASSEMBLY .....	7-90
DRIVESHAFT & BEARINGS .....	7-39	BEARING CARRIER REMOVAL & DISASSEMBLY .....	7-91
FORWARD GEAR, BEARING & RACE .....	7-41	DRIVESHAFT & BEARINGS REMOVAL/SERVICE .....	7-92
GENERAL .....	7-38	NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL .....	7-93
PROPELLER SHAFT DISASSEMBLY .....	7-39	PRE-DISASSEMBLY INSPECTION .....	7-91
SHIFT SHAFT REMOVAL .....	7-42	PROPELLER SHAFT REMOVAL & DISASSEMBLY .....	7-92
GENERAL INFORMATION .....	7-36	SHIFT SHAFT DISASSEMBLY .....	7-93
REMOVAL & INSTALLATION .....	7-36	REMOVAL & INSTALLATION .....	7-90
SHIMMING .....	7-51	SHIMMING .....	7-97
GEARCASE - 135-200 HP (2.5L) V6 MODELS .....	7-54	<b>GENERAL INFORMATION (WHAT EVERYONE SHOULD</b>	
ASSEMBLY .....	7-62	<b>KNOW ABOUT MAINTENANCE) .....</b>	<b>2-2</b>
BEARING CARRIER ASSEMBLY .....	7-72	BEFORE/AFTER EACH USE .....	2-2
BEARING CARRIER, PROPELLER SHAFT & SHIFT SHAFT		ENGINE & SERIAL NUMBER IDENTIFICATION .....	2-2
DRIVESHAFT LOWER NEEDLE BEARING INSTALLATION .....	7-62	MAINTENANCE COVERAGE IN THIS MANUAL .....	2-2
DRIVESHAFT & PINION GEAR .....	7-63	MAINTENANCE EQUALS SAFETY .....	2-2
NOSE CONE GEAR, BEARING & RACE .....	7-62	OUTBOARDS ON SAILBOATS .....	2-2
PROPELLER SHAFT ASSEMBLY .....	7-64	HAND REWIND STARTER .....	10-2
SHIFT SHAFT ASSEMBLY .....	7-64	DESCRIPTION & OPERATION .....	10-2
CLEANING & INSPECTION .....	7-58	TROUBLESHOOTING .....	10-2
DISASSEMBLY .....	7-55	HAND REWIND STARTER - 2.5/3.3 HP .....	10-2
BEARING CARRIER REMOVAL & DISASSEMBLY .....	7-55	ASSEMBLY & INSTALLATION .....	10-3
DRIVESHAFT & BEARINGS .....	7-57	CLEANING & INSPECTION .....	10-2
GENERAL INFORMATION .....	7-55	REMOVAL & DISASSEMBLY .....	10-2
NOSE CONE GEAR, BEARING & RACE .....	7-58	HAND REWIND STARTER - 4/5 HP .....	10-4
PROPELLER SHAFT DISASSEMBLY .....	7-56	ASSEMBLY & INSTALLATION .....	10-6
SHIFT SHAFT DISASSEMBLY .....	7-56	CLEANING & INSPECTION .....	10-6
REMOVAL & INSTALLATION .....	7-54	REMOVAL & DISASSEMBLY .....	10-4
SHIMMING .....	7-65	HAND REWIND STARTER - 6-25 HP .....	10-8
GEARCASE - CONVENTIONAL 200-250 HP (3.0L) V6 MODELS .....	7-68	ASSEMBLY .....	10-11
ASSEMBLY - 2001-05 MODELS THRU SERIAL #1B504988 .....	7-79	CLEANING & INSPECTION .....	10-10
BEARING CARRIER ASSEMBLY .....	7-80	DISASSEMBLY .....	10-10
BEARING CARRIER INSTALLATION .....	7-82	REMOVAL & ROPE REPLACEMENT .....	10-8
DRIVESHAFT PINION NEEDLE BEARING INSTALLATION .....	7-79	ROPE REPLACEMENT & INSTALLATION .....	10-11
NOSE CONE GEAR BEARING RACE OR ADAPTER .....	7-79	HAND REWIND STARTER - 30 HP AND LARGER .....	10-11
PROPELLER SHAFT ASSEMBLY .....	7-80	ASSEMBLY & INSTALLATION .....	10-14
PROPELLER SHAFT, DRIVESHAFT AND PINION GEAR .....	7-81	CLEANING & INSPECTION .....	10-14
SHIFT SHAFT ASSEMBLY .....	7-80	REMOVAL & DISASSEMBLY .....	10-11
ASSEMBLY - 2005 & LATER MODELS		<b>HOW TO USE THIS MANUAL .....</b>	<b>1-2</b>
W/SERIAL #1B504989 & ABOVE .....	7-82	AVOIDING COMMON MISTAKES .....	1-2
BEARING CARRIER ASSEMBLY & ADAPTER .....	7-83	AVOIDING TROUBLE .....	1-2
BEARING CARRIER INSTALLATION .....	7-84	CAN YOU DO IT? .....	1-2
DRIVESHAFT PINION NEEDLE BEARING INSTALLATION .....	7-82	DIRECTIONS AND LOCATIONS .....	1-2
NOSE CONE GEAR BEARING RACE .....	7-82	MAINTENANCE OR REPAIR? .....	1-2
PROPELLER SHAFT ASSEMBLY .....	7-83	PROFESSIONAL HELP .....	1-2
PROPELLER SHAFT, DRIVESHAFT & PINION GEAR .....	7-83	PURCHASING PARTS .....	1-2
SHIFT SHAFT ASSEMBLY .....	7-83	WHERE TO BEGIN .....	1-2
CLEANING & INSPECTION .....	7-75	IGNITION COILS .....	4-28
DISASSEMBLY - 2001-05 MODELS THRU SERIAL #1B504988 .....	7-70	DESCRIPTION & OPERATION .....	4-28
BEARING CARRIER REMOVAL & DISASSEMBLY .....	7-70	REMOVAL & INSTALLATION .....	4-29
DRIVESHAFT & BEARINGS REMOVAL/SERVICE .....	7-71	TESTING .....	4-28
NOSE CONE GEAR BEARING & RACE/ADAPTER REMOVAL .....	7-72	IGNITION KEY SWITCH .....	4-61
PROPELLER SHAFT REMOVAL & DISASSEMBLY .....	7-72	TESTING .....	4-61
SHIFT SHAFT DISASSEMBLY .....	7-73	MERCURY COMMANDER 2000 KEYSWITCH .....	4-61
		LATE MODEL 3 & 4-POSITION MERCURY KEY SWITCHES .....	4-62

<p>IGNITION MODULE (CD UNIT/CDM) . . . . . 4-331</p> <p>DESCRIPTION &amp; OPERATION . . . . . 4-31</p> <p>REMOVAL &amp; INSTALLATION . . . . . 4-36</p> <p>2.5/3.3 HP MODELS . . . . . 4-36</p> <p>4/5 HP MODELS . . . . . 4-36</p> <p>6/8, 9.9/10/15 &amp; 20/20 JET/25 HP MODELS . . . . . 4-36</p> <p>30/40 HP 2-CYL MODELS . . . . . 4-36</p> <p>40-250 HP . . . . . 3-</p> <p>4- AND 6-CYLINDER MODELS . . . . . 4-36</p> <p>SPECIFICATIONS . . . . . 4-38</p> <p>TESTING . . . . . 4-32</p> <p><b>IGNITION SYSTEMS</b></p> <p>CRANKSHAFT POSITION SENSOR (CPS) . . . . . 4-27</p> <p>ELECTRONIC IGNITION SYSTEMS . . . . . 4-8</p> <p>FLYWHEEL . . . . . 4-18</p> <p>GENERAL INFORMATION . . . . . 4-8</p> <p>IGNITION COILS . . . . . 4-28</p> <p>IGNITION MODULE (CD UNIT/CDM) . . . . . 4-331</p> <p>INSPECTION . . . . . 2-40</p> <p>SPECIFICATIONS . . . . . 4-38</p> <p>STATOR/CHARGE COIL . . . . . 4-22</p> <p>TRIGGER COILS . . . . . 4-25</p> <p><b>INJECTION SYSTEM . . . . . 5-2</b></p> <p>GENERAL INFORMATION . . . . . 5-2</p> <p>OIL LINES . . . . . 5-11</p> <p>OIL PUMP . . . . . 5-8</p> <p>OIL TANK . . . . . 5-4</p> <p>TROUBLESHOOTING . . . . . 5-4</p> <p>INTERIOR . . . . . 2-32</p> <p>INSPECTION &amp; CARE . . . . . 2-32</p> <p>INTRODUCTION TO TUNE-UPS . . . . . 2-32</p> <p><b>JET DRIVE . . . . . 7-99</b></p> <p>DESCRIPTION &amp; OPERATION . . . . . 7-99</p> <p>JET DRIVE ADJUSTMENTS . . . . . 7-105</p> <p>JET DRIVE AND/OR IMPELLER ASSEMBLY . . . . . 7-99</p> <p>JET DRIVE ADJUSTMENTS . . . . . 7-105</p> <p>GATE LINKAGE ADJUSTMENTS . . . . . 7-105</p> <p>TRIM ADJUSTMENT . . . . . 7-106</p> <p>JET DRIVE AND/OR IMPELLER ASSEMBLY . . . . . 7-99</p> <p>CLEANING &amp; INSPECTION . . . . . 7-104</p> <p>DISASSEMBLY &amp; ASSEMBLY . . . . . 7-102</p> <p>REMOVAL &amp; INSTALLATION . . . . . 7-99</p> <p>JET DRIVE BEARING . . . . . 2-8</p> <p>DAILY BEARING LUBRICATION . . . . . 2-8</p> <p>GREASE REPLACEMENT . . . . . 2-9</p> <p>RECOMMENDED LUBRICANT . . . . . 2-8</p> <p>JET DRIVE IMPELLER . . . . . 2-23</p> <p>IMPELLER CLEARANCE . . . . . 2-24</p> <p>INSPECTION . . . . . 2-23</p> <p>KILL SWITCH . . . . . 4-62</p> <p>TESTING . . . . . 4-62</p> <p><b>LOWER UNIT</b></p> <p>DRAINING &amp; FILLING . . . . . 2-7</p> <p>EXHAUST GASES . . . . . 7-3</p> <p>GEARCASE REPAIR &amp; OVERHAUL TIPS . . . . . 7-4</p> <p>GEARCASE - 2.5/3.3 HP MODELS (W/NON-SHIFTING GEARCASES) . . . . . 7-4</p> <p>GEARCASE - 2.5/3.3 HP &amp; 4/5 HP MODELS (W/SHIFTING GEARCASES) . . . . . 7-8</p> <p>GEARCASE - 6-25 HP MODELS . . . . . 7-17</p> <p>GEARCASE - 30/40 HP (2-CYL) &amp; 40/50 HP (3-CYL) MODELS . . . . . 7-28</p> <p>GEARCASE - 55/60 (3-CYL) NON-BIGFOOT, 60 HP BIGFOOT &amp; 75-125 HP MODELS . . . . . 7-36</p> <p>GEARCASE - 135-200 HP (2.5L) V6 MODELS . . . . . 7-54</p> <p>GEARCASE - CONVENTIONAL 200-250 HP (3.0L) V6 MODELS . . . . . 7-68</p> <p>GEARCASE - 3.0L V6 OPTIMAX PRO/SPORT XS MODELS . . . . . 7-90</p> <p>GENERAL INFORMATION . . . . . 7-2</p> <p>OIL LEVEL &amp; CONDITION . . . . . 2-7</p> <p>OIL RECOMMENDATIONS . . . . . 2-6</p> <p>SHIFTING PRINCIPLES . . . . . 7-2</p> <p>TROUBLESHOOTING . . . . . 7-3</p> <p>LUBRICATING THE MOTOR . . . . . 2-5</p>	<p><b>LUBRICATION . . . . . 2-4</b></p> <p>ABOUT LUBRICATION . . . . . 2-4</p> <p>JET DRIVE BEARING . . . . . 2-8</p> <p>LOWER UNIT . . . . . 2-6</p> <p>LUBRICATING THE MOTOR . . . . . 2-5</p> <p>LUBRICATION INSIDE THE BOAT . . . . . 2-6</p> <p>POWER TRIM/TILT RESERVOIR . . . . . 2-9</p> <p>LUBRICATION INSIDE THE BOAT . . . . . 2-6</p> <p>MAINTENANCE COVERAGE IN THIS MANUAL . . . . . 2-2</p> <p>MAINTENANCE EQUALS SAFETY . . . . . 2-2</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR</p> <p>EFI . . . . . 3-58</p> <p>OPTIMAX . . . . . 3-92</p> <p>MECHANICAL FUEL PUMP</p> <p>EFI . . . . . 3-63</p> <p>OPTIMAX . . . . . 3-100</p> <p><b>MECHANICAL TILT (UNASSISTED) . . . . . 8-2</b></p> <p>DESCRIPTION &amp; OPERATION . . . . . 8-2</p> <p>INTRODUCTION . . . . . 8-2</p> <p>SERVICING . . . . . 8-2</p> <p>NEUTRAL SAFETY SWITCH . . . . . 4-63</p> <p>TESTING . . . . . 4-63</p> <p>OIL &amp; TEMPERATURE WARNING SYSTEMS . . . . . 5-31</p> <p>CHECKING THE WARNING SYSTEM CIRCUIT . . . . . 5-31</p> <p>TROUBLESHOOTING A WARNING SYSTEM ACTIVATION . . . . . 5-32</p> <p>OPTIMAX &amp; CARBURETED/EFI V6 MOTOR WARNING SYSTEM OIL</p> <p>OIL FILTER . . . . . 2-28</p> <p>REMOVAL &amp; INSTALLATION . . . . . 2-28</p> <p>OIL LEVEL SENSOR (SWITCH) . . . . . 5-40</p> <p>DESCRIPTION &amp; TESTING . . . . . 5-40</p> <p>OIL LINES . . . . . 5-11</p> <p>CAUTIONS . . . . . 5-11</p> <p>OIL PUMP . . . . . 5-8</p> <p>BLEEDING THE SYSTEM . . . . . 5-9</p> <p>ELECTRIC PUMPS . . . . . 5-9</p> <p>MECHANICAL PUMPS . . . . . 5-9</p> <p>CONTROL ROD ADJUSTMENT . . . . . 5-8</p> <p>REMOVAL &amp; INSTALLATION . . . . . 5-8</p> <p>ELECTRONIC PUMPS . . . . . 5-8</p> <p>MECHANICAL PUMPS . . . . . 5-8</p> <p>TESTING OIL PUMP DISCHARGE RATE . . . . . 5-10</p> <p>OIL TANK . . . . . 5-4</p> <p>CLEANING &amp; INSPECTION . . . . . 5-7</p> <p>REMOVAL &amp; INSTALLATION . . . . . 5-4</p> <p>30-60 HP MODELS . . . . . 5-4</p> <p>75/65 JET/90 &amp; 80 JET/115/125 HP MODELS . . . . . 5-6</p> <p>75/90/115/125 HP 1.5L OPTIMAX MODELS . . . . . 5-6</p> <p>135-250 HP MODELS - ENGINE MOUNTED OIL RESERVOIR . . . . . 5-6</p> <p>135-250 HP MODELS - REMOTE OIL TANK . . . . . 5-7</p> <p><b>OPTIMAX DIRECT FUEL INJECTION (DFI) . . . . . 3-73</b></p> <p>AIR COMPRESSOR . . . . . 3-78</p> <p>AIR PRESSURE REGULATOR . . . . . 3-87</p> <p>CRANKSHAFT POSITION SENSOR (CPS) . . . . . 3-91</p> <p>DESCRIPTION &amp; OPERATION . . . . . 3-73</p> <p>DIRECT INJECTOR . . . . . 3-96</p> <p>ELECTRIC FUEL PUMP(S) . . . . . 3-104</p> <p>ELECTRONIC/PROPULSION CONTROL MODULE (ECM/PCM) . . . . . 3-95</p> <p>FUEL INJECTOR . . . . . 3-97</p> <p>FUEL PRESSURE REGULATOR . . . . . 3-98</p> <p>FUEL (AND AIR) RAIL . . . . . 3-106</p> <p>MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR . . . . . 3-92</p> <p>MECHANICAL FUEL PUMP . . . . . 3-100</p> <p>SHIFT INTERRUPT SWITCH . . . . . 3-94</p> <p>TEMPERATURE SENSORS (ATS, CTS AND ETS) . . . . . 3-89</p> <p>THROTTLE BODY, AIR INTAKE PLENUM &amp; REED BLOCK . . . . . 3-112</p> <p>THROTTLE POSITION SENSOR (TPS) . . . . . 3-91</p> <p>TRACKER VALVE (V6 ONLY) . . . . . 3-107</p> <p>TROUBLESHOOTING . . . . . 3-75</p> <p>VAPOR SEPARATOR . . . . . 3-108</p> <p>OUTBOARDS ON SAILBOATS . . . . . 2-2</p> <p>PISTON PINS . . . . . 6-66</p>
---	---

# 10-20 MASTER INDEX

INSPECTION .....	6-66	POWERHEAD - 6/8 & 9.9/10/15 HP .....	6-8
PISTON RINGS .....	6-66	CLEANING & INSPECTION .....	6-12
INSPECTION .....	6-67	DISSASSEMBLY & ASSEMBLY .....	6-8
PISTONS .....	6-64	REMOVAL & INSTALLATION .....	6-8
GENERAL INFORMATION .....	6-64	POWERHEAD - 20/20 JET/25 HP .....	6-12
INSPECTION .....	6-65	CLEANING & INSPECTION .....	6-16
POWER TRIM/TILT RESERVOIR .....	2-9	DISSASSEMBLY & ASSEMBLY .....	6-13
FLUID LEVEL/CONDITION .....	2-9	REMOVAL & INSTALLATION .....	6-12
RECOMMENDED LUBRICANT .....	2-9	POWERHEAD - 30/40 HP 2-CYLINDER .....	6-17
<b>POWER TILT/TRIM - SMALL MOTOR, SINGLE RAM INTEGRAL</b> .....	<b>8-10</b>	CLEANING & INSPECTION .....	6-22
DESCRIPTION & OPERATION .....	8-10	DISSASSEMBLY & ASSEMBLY .....	6-18
INTRODUCTION .....	8-10	REMOVAL & INSTALLATION .....	6-17
PTT HYDRAULIC CYLINDER .....	8-13	POWERHEAD - 40/40 JET/50/55/60 HP 3-CYLINDER .....	6-22
PTT HYDRAULIC PUMP .....	8-13	REMOVAL & INSTALLATION .....	6-22
TROUBLESHOOTING .....	8-11	DISSASSEMBLY & ASSEMBLY .....	6-23
<b>POWER TILT/TRIM - MID-RANGE MOTOR, SINGLE RAM INTEGRAL</b> .....	<b>8-14</b>	CLEANING & INSPECTION .....	6-27
DESCRIPTION & OPERATION .....	8-14	POWERHEAD - 75/65 JET/90 HP & 80 JET/115/125 HP .....	6-27
INTRODUCTION .....	8-14	CLEANING & INSPECTION .....	6-35
PTT ASSEMBLY .....	8-19	DISSASSEMBLY & ASSEMBLY .....	6-28
TROUBLESHOOTING .....	8-15	REMOVAL & INSTALLATION .....	6-27
<b>POWER TILT/TRIM SYSTEM - 3 RAM INTEGRAL</b> .....	<b>8-24</b>	POWERHEAD - 75/90/115 HP OPTIMAX .....	6-35
DESCRIPTION & OPERATION .....	8-24	CLEANING & INSPECTION .....	6-42
INTRODUCTION .....	8-24	DISSASSEMBLY & ASSEMBLY .....	6-37
PTT ASSEMBLY .....	8-29	REMOVAL & INSTALLATION .....	6-35
TILT ROD .....	8-33	POWERHEAD - 135-200 HP (2.5L) V6 .....	6-42
TRIM MOTOR & PUMP .....	8-34	CLEANING & INSPECTION .....	6-52
TRIM ROD & CAP .....	8-30	DISSASSEMBLY & ASSEMBLY .....	6-44
TRIM SENDER & GAUGE .....	8-35	135-175 Hp (2.5L) V6 OPTIMAX .....	6-44
TROUBLESHOOTING .....	8-25	150-200 HP (2.5L) V6 .....	6-48
<b>POWERHEAD BREAK-IN</b> .....	<b>6-71</b>	REMOVAL & INSTALLATION .....	6-42
BREAK-IN PROCEDURES .....	6-71	POWERHEAD - 200-250 HP (3.0L) V6 .....	6-52
<b>POWERHEAD MECHANICAL</b> .....	<b>6-2</b>	CLEANING & INSPECTION .....	6-60
GENERAL INFORMATION .....	6-2	DISSASSEMBLY & ASSEMBLY .....	6-54
2.5/3.3 HP POWERHEADS .....	6-3	REMOVAL & INSTALLATION .....	6-52
4/5 HP POWERHEADS .....	6-5	PROPELLER .....	2-17
6/8 & 9.9/10/15 HP POWERHEADS .....	6-8	GENERAL PROPELLER INFORMATION .....	2-17
20/20 JET/25 HP POWERHEADS .....	6-12	CAVITATION .....	2-18
30/40 HP 2-CYLINDER POWERHEADS .....	6-17	CUPPING .....	2-18
40/40 JET/50/55/60 HP 3-CYLINDER POWERHEADS .....	6-22	DIAMETER & PITCH .....	2-17
75/65 JET/90 HP & 80 JET/115/125 HP POWERHEADS .....	6-27	PROGRESSIVE PITCH .....	2-18
75/90/115 HP OPTIMAX POWERHEADS .....	6-35	PROPELLER RAKE .....	2-18
135-200 HP (2.5L) V6 POWERHEADS .....	6-42	PROPELLER SELECTION .....	2-17
200-250 HP (3.0L) V6 POWERHEADS .....	6-52	ROTATION .....	2-18
POWERHEAD OVERHAUL TIPS .....	6-61	SHOCK ABSORBERS .....	2-18
CAUTIONS .....	6-61	VIBRATION .....	2-18
CLEANING .....	6-61	INSPECTION .....	2-19
POWERHEAD PREPARATION .....	6-61	REMOVAL & INSTALLATION .....	2-19
<b>POWERHEAD RECONDITIONING</b> .....	<b>6-60</b>	CASTELLATED NUT PROPS .....	2-21
BEARINGS .....	6-70	SHEAR PIN PROPS .....	2-20
BUY OR REBUILD? .....	6-60	PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM .....	8-19
CONNECTING RODS .....	6-68	OVERHAUL .....	8-20
CRANKSHAFT .....	6-69	REMOVAL & INSTALLATION .....	8-19
CYLINDER BLOCK & HEAD .....	6-62	SYSTEM BLEEDING .....	8-20
CYLINDER BORES .....	6-63	PTT ASSEMBLY - 3 RAM INTEGRAL .....	8-29
DETERMINING POWERHEAD CONDITION .....	6-60	REMOVAL & INSTALLATION .....	8-29
PISTON PINS .....	6-66	SYSTEM BLEEDING .....	8-30
PISTON RINGS .....	6-66	PTT HYDRAULIC CYLINDER .....	8-13
PISTONS .....	6-64	REMOVAL & INSTALLATION .....	8-13
POWERHEAD OVERHAUL TIPS .....	6-61	PTT HYDRAULIC PUMP .....	8-13
POWERHEAD PREPARATION .....	6-61	OVERHAUL .....	8-14
REED VALVES .....	6-71	REMOVAL & INSTALLATION .....	8-13
POWERHEAD - 2.5/3.3 HP .....	6-3	SYSTEM BLEEDING .....	8-14
CLEANING & INSPECTION .....	6-5	RECTIFIER .....	4-47
DISSASSEMBLY & ASSEMBLY .....	6-3	DESCRIPTION & OPERATION .....	4-47
REMOVAL & INSTALLATION .....	6-3	REMOVAL & INSTALLATION .....	4-48
POWERHEAD - 4/5 HP .....	6-5	EXTERNAL RECTIFIERS (FLYWHEEL STATOR MODELS) .....	4-48
CLEANING & INSPECTION .....	6-6	INTERNAL RECTIFIERS (ALTERNATOR MODELS) .....	4-49
DISSASSEMBLY & ASSEMBLY .....	6-5	TESTING .....	4-47
REMOVAL & INSTALLATION .....	6-5	RECTIFIER /REGULATOR .....	4-49
POWERHEAD - 6/8 & 9.9/10/15 HP .....	6-8	REMOVAL & INSTALLATION .....	4-50
CLEANING & INSPECTION .....	6-12	EXTERNAL REGULATORS (FLYWHEEL STATOR MODELS) .....	4-50
DISSASSEMBLY & ASSEMBLY .....	6-8	INTERNAL REGULATORS (ALTERNATOR MODELS) .....	4-50
REMOVAL & INSTALLATION .....	6-8		
POWERHEAD - 20/20 JET/25 HP .....	6-12		
CLEANING & INSPECTION .....	6-16		
DISSASSEMBLY & ASSEMBLY .....	6-13		
REMOVAL & INSTALLATION .....	6-12		
POWERHEAD - 30/40 HP 2-CYLINDER .....	6-17		
CLEANING & INSPECTION .....	6-22		
DISSASSEMBLY & ASSEMBLY .....	6-18		
REMOVAL & INSTALLATION .....	6-17		
POWERHEAD - 40/40 JET/50/55/60 HP 3-CYLINDER .....	6-22		
REMOVAL & INSTALLATION .....	6-22		
DISSASSEMBLY & ASSEMBLY .....	6-23		
CLEANING & INSPECTION .....	6-27		
POWERHEAD - 75/65 JET/90 HP & 80 JET/115/125 HP .....	6-27		
CLEANING & INSPECTION .....	6-35		
DISSASSEMBLY & ASSEMBLY .....	6-28		
REMOVAL & INSTALLATION .....	6-27		
POWERHEAD - 75/90/115 HP OPTIMAX .....	6-35		
CLEANING & INSPECTION .....	6-42		
DISSASSEMBLY & ASSEMBLY .....	6-37		
REMOVAL & INSTALLATION .....	6-35		
POWERHEAD - 135-200 HP (2.5L) V6 .....	6-42		
CLEANING & INSPECTION .....	6-52		
DISSASSEMBLY & ASSEMBLY .....	6-44		
135-175 Hp (2.5L) V6 OPTIMAX .....	6-44		
150-200 HP (2.5L) V6 .....	6-48		
REMOVAL & INSTALLATION .....	6-42		
POWERHEAD - 200-250 HP (3.0L) V6 .....	6-52		
CLEANING & INSPECTION .....	6-60		
DISSASSEMBLY & ASSEMBLY .....	6-54		
REMOVAL & INSTALLATION .....	6-52		
PROPELLER .....	2-17		
GENERAL PROPELLER INFORMATION .....	2-17		
CAVITATION .....	2-18		
CUPPING .....	2-18		
DIAMETER & PITCH .....	2-17		
PROGRESSIVE PITCH .....	2-18		
PROPELLER RAKE .....	2-18		
PROPELLER SELECTION .....	2-17		
ROTATION .....	2-18		
SHOCK ABSORBERS .....	2-18		
VIBRATION .....	2-18		
INSPECTION .....	2-19		
REMOVAL & INSTALLATION .....	2-19		
CASTELLATED NUT PROPS .....	2-21		
SHEAR PIN PROPS .....	2-20		
PTT ASSEMBLY - MID-RANGE MOTOR, SINGLE RAM .....	8-19		
OVERHAUL .....	8-20		
REMOVAL & INSTALLATION .....	8-19		
SYSTEM BLEEDING .....	8-20		
PTT ASSEMBLY - 3 RAM INTEGRAL .....	8-29		
REMOVAL & INSTALLATION .....	8-29		
SYSTEM BLEEDING .....	8-30		
PTT HYDRAULIC CYLINDER .....	8-13		
REMOVAL & INSTALLATION .....	8-13		
PTT HYDRAULIC PUMP .....	8-13		
OVERHAUL .....	8-14		
REMOVAL & INSTALLATION .....	8-13		
SYSTEM BLEEDING .....	8-14		
RECTIFIER .....	4-47		
DESCRIPTION & OPERATION .....	4-47		
REMOVAL & INSTALLATION .....	4-48		
EXTERNAL RECTIFIERS (FLYWHEEL STATOR MODELS) .....	4-48		
INTERNAL RECTIFIERS (ALTERNATOR MODELS) .....	4-49		
TESTING .....	4-47		
RECTIFIER /REGULATOR .....	4-49		
REMOVAL & INSTALLATION .....	4-50		
EXTERNAL REGULATORS (FLYWHEEL STATOR MODELS) .....	4-50		
INTERNAL REGULATORS (ALTERNATOR MODELS) .....	4-50		



# HAND REWIND STARTER 10-21

TESTING .....	4-49	STARTER RELAY/SOLENOID .....	4-53
REED VALVES .....	6-71	DESCRIPTION & OPERATION .....	4-53
INSPECTION .....	6-71	REMOVAL & INSTALLATION .....	4-54
REMOTE (SHIFT & THROTTLE) CABLES .....	9-9	REMOTE-MOUNTED .....	4-54
INSTALLATION & ADJUSTMENT - TO THE POWERHEAD .....	9-9	STARTER-MOUNTED .....	4-54
40-125 HP (3- AND 4-CYLINDER) MODELS .....	9-9	TESTING .....	4-53
135-250 HP (V6) MODELS .....	9-10	STATOR/CHARGE COIL .....	4-22
RIGGING & MEASUREMENT FOR REPLACEMENT .....	9-9	DESCRIPTION & OPERATION .....	4-22
RE-COMMISSIONING .....	2-78	REMOVAL & INSTALLATION .....	4-23
REMOVAL FROM STORAGE .....	2-78	TESTING .....	4-22
<b>SAFETY IN SERVICE .....</b>	<b>1-12</b>	STATOR/BATTERY CHARGE COIL (UNDER FLYWHEEL) .....	4-44
DO'S .....	1-12	DESCRIPTION & OPERATION .....	4-44
DON'TS .....	1-13	TESTING .....	4-44
SHIFT INTERRUPT SWITCH .....	3-94	<b>STORAGE (WHAT TO DO BEFORE &amp; AFTER) .....</b>	<b>2-76</b>
DESCRIPTION & OPERATION .....	3-94	RE-COMMISSIONING .....	2-78
REMOVAL & INSTALLATION .....	3-94	WINTERIZATION .....	2-76
TESTING .....	3-94	TEMPERATURE SENSORS (ATS, CTS AND ETS) .....	3-89
SHIFTING PRINCIPLES .....	7-2	DESCRIPTION & OPERATION .....	3-89
COUNTER-ROTATING UNIT .....	7-2	REMOVAL & INSTALLATION .....	3-91
STANDARD ROTATING UNIT .....	7-2	TESTING .....	3-89
NON-REVERSE TYPE .....	7-2	TEMPERATURE SWITCH (WARNING SYSTEM) .....	5-38
REVERSE TYPE .....	7-2	CHECKING CONTINUITY .....	5-39
<b>SHOP EQUIPMENT .....</b>	<b>1-17</b>	DESCRIPTION & OPERATION .....	5-38
CHEMICALS .....	1-17	OPERATIONAL TEMPERATURE SWITCH CHECK .....	5-38
SAFETY TOOLS .....	1-17	TEST EQUIPMENT .....	4-4
SPARK PLUG WIRES .....	2-39	JUMPER WIRES .....	4-4
REMOVAL & INSTALLATION .....	2-39	MULTI-METERS .....	4-5
TESTING .....	2-39	TEST LIGHTS .....	4-4
SPARK PLUGS .....	2-35	THERMOSTAT .....	5-15
INSPECTION & GAPPING .....	2-39	EXPLODED VIEWS .....	5-17
SPARK PLUG HEAT RANGE .....	2-35	REMOVAL & INSTALLATION .....	5-15
READING SPARK PLUGS .....	2-37	THROTTLE BODY, AIR INTAKE PLENUM & REED BLOCK .....	3-112
REMOVAL & INSTALLATION .....	2-36	REMOVAL & INSTALLATION .....	3-112
<b>SPECIFICATIONS .....</b>	<b>1-17</b>	THROTTLE POSITION SENSOR (TPS) .....	
CAPACITIES .....	2-85	EFI .....	3-60
CARBURETOR SET-UP .....	3-121	OPTIMAX .....	3-91
CONVERSION FACTORS .....	1-28	TILLER HANDLE .....	9-16
COOLING SYSTEM .....	5-44	REMOVAL & INSTALLATION .....	9-16
ENGINE REBUILDING .....	6-73	2.5/3.3 HP MODELS .....	9-16
ENGINE TORQUE .....	6-77	4/5 HP MODELS .....	9-17
FUEL INJECTION COMPONENT ADJUSTMENT .....	3-122	6-25 HP MODELS .....	9-18
GENERAL ENGINE .....	2-81	30/40 HP & 40/50 HP (2- AND 3-CYL) MODELS .....	9-18
IGNITION SYSTEMS .....	4-38	55 HP & LARGER MODELS .....	9-19
MAINTENANCE INTERVALS .....	2-83	TILT ROD - 3 RAM INTEGRAL .....	8-33
SPARK PLUG DIAGNOSIS .....	2-88	REMOVAL & INSTALLATION .....	8-33
TUNE-UP .....	2-86	<b>TIMING &amp; SYNCHRONIZATION .....</b>	<b>2-41</b>
TYPICAL TORQUE VALUES - METRIC BOLTS .....	1-29	2.5/3.3 HP MODELS .....	2-42
TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS .....	1-30	IGNITION TIMING .....	2-42
2-STROKE MOTOR FUEL:OIL RATIO .....	2-84	THROTTLE JET NEEDLE .....	2-42
START BUTTON .....	4-63	IDLE SPEED .....	2-43
TESTING .....	4-63	4/5 HP MODELS .....	2-43
<b>STARTER CIRCUIT .....</b>	<b>4-51</b>	IGNITION TIMING .....	2-43
STARTER MOTOR .....	4-55	IDLE SPEED & MIXTURE ADJUSTMENT .....	2-44
STARTER MOTOR CIRCUITS .....	4-51	6/8 & 9.9/10/15 HP MODELS .....	2-45
STARTER RELAY/SOLENOID .....	4-53	IDLE SPEED .....	2-45
STARTER MOTOR .....	4-55	LOW SPEED MIXTURE .....	2-45
CLEANING & INSPECTION .....	4-60	IGNITION TIMING .....	2-46
DESCRIPTION .....	4-55	IDLE WIRE .....	2-47
REMOVAL & INSTALLATION .....	4-55	20/20 JET/25 HP MODELS .....	2-47
25 HP & SMALLER MOTORS .....	4-55	CARBURETOR & LINKAGE .....	2-47
30 HP & LARGER MOTORS .....	4-55	IGNITION TIMING .....	2-48
OVERHAUL .....	4-57	IDLE SPEED & MIXTURE .....	2-49
25 HP & SMALLER MOTORS .....	4-57	30/40 HP 2-CYLINDER MODELS .....	2-50
30 HP & LARGER MOTORS - CENTRIFUGAL-DRIVEN STARTER .....	4-58	IDLE SPEED & MIXTURE ADJUSTMENTS .....	2-50
30 HP & LARGER MOTORS - SOLENOID-DRIVEN STARTER .....	4-59	REMOTE CONTROL CABLE INSTALLATION .....	2-50
PINION GEAR REPLACEMENT - OPTIMAX MOTORS .....	4-57	IGNITION TIMING .....	2-51
STARTER MOTOR CIRCUITS .....	4-51	OIL PUMP .....	2-52
DESCRIPTION & OPERATION .....	4-51	40-125 HP CARBURETED 3 & 4-CYL MODELS .....	2-52
TROUBLESHOOTING .....	4-51	CARBURETOR SYNCHRONIZATION .....	2-52
		IGNITION TIMING .....	2-54
		IDLE SPEED .....	2-55

# 10-22 MASTER INDEX

75/90/115 HP OPTIMAX MODELS	2-55	TRIM MOTOR & PUMP - 3 RAM INTEGRAL	8-34
THROTTLE LINKAGE ADJUSTMENT	2-55	REMOVAL & INSTALLATION	8-35
150-200 HP (2.5L) V6 CARBURETED MODELS	2-56	TESTING THE MOTOR	8-34
IGNITION TIMING POINTER ADJUSTMENT	2-56	TRIM ROD & CAP - 3 RAM INTEGRAL	8-30
CARBURETOR SYNCHRONIZATION	2-57	REMOVAL & INSTALLATION	8-30
IGNITION TIMING	2-58	TRIM SENDER & GAUGE - 3 RAM INTEGRAL	8-35
IDLE SPEED ADJUSTMENT	2-59	ADJUSTING AN ANALOG SENDER	8-36
150-200 HP (2.5L) V6 EFI - 2001 MODELS ONLY	2-59	TESTING THE TRIM SENDER	8-35
TIMER POINTER ADJUSTMENT	2-59	TRIM SENDER & GAUGE WIRING	8-36
TRIGGER LINK ROD & PRELIMINARY ADJUSTMENTS	2-59	TRIM/TILT SYSTEMS	
THROTTLE CAM	2-59	GAS ASSIST TILT SYSTEM	8-6
STATIC IDLE TIMING	2-59	MECHANICAL TILT (UNASSISTED)	8-2
STATIC MAXIMUM TIMING	2-61	PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
MAXIMUM THROTTLE ADJUSTMENT	2-62	PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-14
THROTTLE POSITION SENSOR (TPS)	2-62	PTT - 3 RAM INTEGRAL	8-24
DYNAMIC IDLE TIMING	2-62	<b>TROUBLESHOOTING</b>	<b>5-4</b>
IDLE SPEED	2-63	BASIC OPERATING PRINCIPLES	1-13
THROTTLE VALVE & OIL PUMP SYNCHRONIZATION	2-63	CHARGING CIRCUIT	4-39
THROTTLE CABLE PRELOAD	2-63	CHARGING SYSTEMS	4-40
DETONATION CONTROL SYSTEM	2-63	COOLING SYSTEM	5-12
DYNAMIC MAXIMUM TIMING	2-63	COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2
150-200 HP (2.5L) V6 EFI - 2002 & LATER MODELS	2-64	ELECTRICAL SYSTEMS	4-6
THROTTLE CAM ADJUSTMENT	2-64	ELECTRONIC FUEL INJECTION (EFI)	3-45
IGNITION TIMING CHECK	2-64	FUEL SYSTEM	3-15
MAXIMUM THROTTLE ADJUSTMENT	2-64	HAND REWIND STARTER	10-2
THROTTLE POSITION SENSOR	2-65	LOWER UNIT	7-3
IDLE SPEED	2-65	OIL INJECTION SYSTEM	5-4
THROTTLE CABLE INSTALLATION	2-66	OPTIMAX DIRECT FUEL INJECTION (DFI)	3-75
THROTTLE PLATE SCREW	2-66	PTT - SMALL MOTOR, SINGLE RAM INTEGRAL	8-10
135-175 HP (2.5L) V6 OPTIMAX MODELS	2-66	PTT - MID-RANGE MOTOR, SINGLE RAM INTEGRAL	8-15
THROTTLE CAM ADJUSTMENT	2-66	PTT - 3 RAM INTEGRAL	8-25
MAXIMUM THROTTLE ADJUSTMENT	2-67	STARTER MOTOR CIRCUITS	4-51
THROTTLE POSITION SENSOR	2-67	WARNING SYSTEM CIRCUIT	5-4
IDLE SPEED	2-67	WARNING SYSTEMS	5-32
THROTTLE PLATE SCREW	2-67	<b>TUNE-UP</b>	<b>2-32</b>
CRANKSHAFT POSITION SENSOR (CPS)	2-67	COMPRESSION TESTING	2-33
225-250 HP (3.0L) V6 EFI - 2001 MODELS ONLY	2-67	ELECTRICAL SYSTEM CHECKS	2-40
TIMER POINTER ADJUSTMENT	2-68	FUEL SYSTEM CHECKS	2-41
CRANKSHAFT POSITION SENSOR ADJUSTMENT	2-68	IGNITION SYSTEM	2-40
THROTTLE CAM ADJUSTMENT	2-68	INTRODUCTION TO TUNE-UPS	2-32
THROTTLE VALVE & OIL PUMP SYNCHRONIZATION	2-69	SPARK PLUG WIRES	2-39
MAXIMUM THROTTLE ADJUSTMENT	2-69	SPARK PLUGS	2-35
THROTTLE POSITION SENSOR (TPS) ADJUSTMENT	2-69	TIMING & SYNCHRONIZATION	2-41
IDLE SPEED	2-70	TUNE-UP SEQUENCE	2-32
200-250 HP (3.0L) V6 EFI - 2002 & LATER MODELS	2-70	2.5/3.3 HP MODELS	2-42
THROTTLE CAM ADJUSTMENT	2-70	4/5 HP MODELS	2-43
IGNITION TIMING CHECK	2-70	6/8 & 9.9/10/15 HP MODELS	2-45
MAXIMUM THROTTLE ADJUSTMENT	2-70	20/20 JET/25 HP MODELS	2-47
THROTTLE POSITION SENSOR	2-71	30/40 HP 2-CYLINDER MODELS	2-50
IDLE SPEED	2-71	40-125 HP CARBURETED 3 & 4-CYL MODELS	2-52
THROTTLE CABLE INSTALLATION	2-71	75/90/115 HP OPTIMAX MODELS	2-55
THROTTLE PLATE SCREW	2-72	150-200 HP (2.5L) V6 CARBURETED MODELS	2-56
200-250 HP (3.0L) V6 OPTIMAX MODELS	2-72	150-200 HP (2.5L) V6 EFI - 2001 MODELS ONLY	2-59
CRANKSHAFT POSITION SENSOR ADJUSTMENT	2-72	150-200 HP (2.5L) V6 EFI - 2002 & LATER MODELS	2-64
THROTTLE CAM ADJUSTMENT	2-72	135-175 HP (2.5L) V6 OPTIMAX MODELS	2-66
MAXIMUM THROTTLE ADJUSTMENT	2-73	225-250 HP (3.0L) V6 EFI - 2001 MODELS ONLY	2-67
THROTTLE POSITION SENSOR	2-75	200-250 HP (3.0L) V6 EFI - 2002 & LATER MODELS	2-70
IDLE SPEED	2-75	200-250 HP (3.0L) V6 OPTIMAX MODELS	2-72
THROTTLE PLATE SCREW	2-75	<b>TUNE-UP SEQUENCE</b>	<b>2-32</b>
<b>TOOLS</b>	<b>1-19</b>	<b>UNDERSTANDING &amp; TROUBLESHOOTING ELECTRICAL SYSTEMS</b>	<b>4-2</b>
ELECTRONIC TOOLS	1-23	BASIC ELECTRICAL THEORY	4-2
HAND TOOLS	1-19	ELECTRICAL COMPONENTS	4-2
MEASURING TOOLS	1-25	ELECTRICAL SYSTEM PRECAUTIONS	4-7
OTHER COMMON TOOLS	1-22	ELECTRICAL TESTING	4-6
SPECIAL TOOLS	1-23	TEST EQUIPMENT	4-4
TRACKER VALVE (V6 ONLY)	3-107	TROUBLESHOOTING ELECTRICAL SYSTEMS	4-6
DESCRIPTION & OPERATION	3-107	WIRE & CONNECTOR REPAIR	4-7
REMOVAL & INSTALLATION	3-108	VAPOR SEPARATOR TANK (VST) ASSEMBLY	
TRIGGER COILS	4-25	EFI	3-68
DESCRIPTION & OPERATION	4-25	OPTIMAX	3-108
REMOVAL & INSTALLATION	4-26		
4/5 HP MODELS	4-26		
EXCEPT 4/5 HP MODELS	4-26		
TESTING	4-25		

<b>WARNING SYSTEMS</b> .....	<b>5-31</b>	<b>WIRING DIAGRAMS</b> .....	<b>4-64</b>
OIL & TEMPERATURE WARNING SYSTEMS .....	5-31	INDEX .....	4-64
OIL LEVEL SENSOR (SWITCH) .....	5-40	1-CYLINDER MOTORS .....	4-66
TEMPERATURE SWITCH (WARNING SYSTEM) .....	5-38	2-CYLINDER MOTORS .....	4-67
TILLER HANDLE .....	9-16	3-CYLINDER MOTORS (EXC. OPTIMAX) .....	4-73
TROUBLESHOOTING CHARTS .....	5-32	CARBURETED 4-CYLINDER & V6 MOTORS .....	4-83
<b>WATER PUMP</b> .....	<b>5-19</b>	EFI V6 MOTORS .....	4-85
CLEANING & INSPECTION .....	5-31	OPTIMAX 3-CYLINDER & V6 MOTORS .....	4-100
REMOVAL & INSTALLATION .....	5-19	INSTRUMENT RIGGING - CARBURETED & 2001 EFI MODELS .....	4-172
2.5/3.3 HP (NON-SHIFTING) MODELS .....	5-19	INSTRUMENT RIGGING - 2002 & LATER EFI MODELS .....	4-175
2.5/3.3 HP (SHIFTING) & 4/5 HP MODELS .....	5-21	INSTRUMENT RIGGING - OPTIMAX MODELS .....	4-187
6/8 & 9.9/10/15 HP MODELS .....	5-22	<b>2-STROKE OIL</b> .....	<b>2-12</b>
20/20 JET/25 HP MODELS .....	5-24	OIL RECOMMENDATIONS .....	2-12
30/40 HP 2-CYLINDER & 40/40 JET/50 HP 3-CYLINDER MODELS .....	5-25	FILLING .....	2-12
55/60 HP 3-CYLINDER MODELS .....	5-26	FUEL:OIL RATIO .....	2-13
65 JET-125 HP MODELS .....	5-27	PRE-MIX .....	2-13
135-200 HP (2.5L) V6 MODELS .....	5-28	OIL INJECTION .....	2-13
200-250 HP (3.0L) V6 MODELS .....	5-29	<b>SPECIFICATIONS</b> .....	<b>1-28</b>
<b>WATER SENSOR</b> .....	<b>3-62</b>	CONVERSION FACTORS .....	1-28
DESCRIPTION, OPERATION & TESTING .....	3-62	TYPICAL TORQUE VALUES - METRIC BOLTS .....	1-29
<b>WINTERIZATION</b> .....	<b>2-76</b>	TYPICAL TORQUE VALUES - U.S. STANDARD BOLTS .....	1-30
PREPPING FOR STORAGE .....	2-76		
STORAGE CHECKLIST (PREPARING THE BOAT & MOTOR) .....	2-76		
WHERE TO STORE YOUR BOAT & MOTOR .....	2-76		
<b>WIRE &amp; CONNECTOR REPAIR</b> .....	<b>4-7</b>		