

TABLE OF CONTENTS

1- DESCRIPTION & OPERATION

BRIEF HISTORY	1-1
PRINCIPLES OF OPERATION	1-2
ENGINE & JET DRIVE	1-3
Cooling System	1-4
Bilge Breather	1-5
IMPELLERS	1-6
REPLACEMENT PARTS	1-6
DEBRIS REMOVAL	1-6
REVERSE CAPABILITY	1-7
SPECIAL FEATURES	1-8
RPM Limiter	1-8
Throttle Opening Limiter	1-8
Self-Circling Mode	1-8

2- SAFETY

INTRODUCTION	2-1
Craft Classification	2-1
Information	2-1
Regulation Enforcement	2-2
MINIMUM LEGAL REQUIRE-- MENTS	2-2
Personal Flotation Devices	2-2
Fire Extinguisher	2-4
MINIMUM LEGAL REGISTRA- TION REQUIREMENTS	2-5
SAFETY PRACTICES	2-5
MOST IMPORTANT WORDS IN THIS MANUAL	2-5
Full Throttle Operation	2-5
Jumping Waves	2-6
Alcohol & Substance Use	2-6
Age Restrictions	2-6
Speed Restrictions	2-6

Shallow Water Operation	2-6
Flame Arrestors	2-7
Fuel System	2-7
Excessive Noise	2-8
Automotive Replacements	2-8
BOATING ACCIDENT REPORTS	2-8
SECURITY	2-8

3- TUNING

INTRODUCTION	3-1
TUNE-UP SEQUENCE	3-1
COMPRESSION CHECK	3-2
SPARK PLUG INSPECTION	3-3
ELECTRICAL POWER SUPPLY	3-3
"Maintenance Free" Batteries	3-4
Standard Batteries	3-4
Jumper Cables	3-4
CARBURETOR ADJUSTMENT	3-5
Fuel & Fuel Tanks	3-5
Draining Fuel Tank	3-5
Low Speed & Idle Adjustments	3-6
SPECIAL TACHOMETER WORDS	3-6
FUEL PUMPS	3-7
Remote Fuel Pump	3-7
Integral Fuel Pump	3-7
CRANKING MTR. & SOLENOID	3-8
Cranking Motor Test	3-8
Solenoid test	3-8
JET PUMP	3-8
Gate Position	3-8
Impeller	3-8

4- MAINTENANCE

INTRODUCTION	4-1
After Use Tasks	4-2

4- MAINTENANCE (CONTINUED)

Cooling	4-2
Flushing Cooling System	4-3
Controlling Corrosion	4-3
Pump Impeller	4-3
SERIAL NUMBERS	4-4
LUBRICATION	4-4
Throttle Cable	4-5
Steering Cable	4-5
Fuel/Oil Mixture	4-7
"Break-in"	4-7
Jet Pump	4-7
INSPECTION & SERVICE	4-7
Fuel Tank, Check Valve & Filter	4-7
Sediment Bowl	4-8
Fuel Tank Filters	4-8
In-Line Filter	4-8
Oil Filter	4-8
Drain Plug	4-8
FLUSHING	
Cooling System	4-9
Bilge System	4-9
IMPELLER CLEARANCE	4-9
PRE-SEASON PREPARATION	4-10
SEALANTS, LUBRICANTS, ETC.	4-13
FIBERGLASS HULLS	4-14
SUBMERGED ENGINE SERVICE	4-14
Salt Water Submersion	4-14
Submerged While Operating	4-15
Fresh Water Submersion	4-15
WINTER STORAGE	4-16
PRE-SEASON CHECK	4-17

5- TROUBLESHOOTING

INTRODUCTION	5-1
Lower than Normal RPM	5-1
Higher than Normal RPM	5-1
Engine Troubleshooting	5-2
Cranking System Test	5-2
Ignition System Test	5-2
Compression Test	5-3
LEAK DOWN PROCEDURE	5-5
FUEL SYSTEM PROBLEMS	5-5
Engine Surge	5-6
Rough Engine Idle	5-7
IGNITION SYSTEM FAULTS	5-7
Intermittent Problems	5-8

Spark Plug Evaluation	5-8
CRANKING SYSTEM FAILURES	5-9
Faulty Symptoms	5-10
Cranking Circuit Tests	5-10
Cranking Motor Relay	5-12
Relay Removal	5-13
Relay Testing	5-13
Relay Installation	5-14
CHARGING SYSTEM	
MALFUNCTIONS	5-15
TROUBLESHOOTING CHARTS	5-16

6- FUEL AND OIL

INTRODUCTION	6-1
GENERAL CARBURETION	
INFORMATION	6-1
FUEL COMPONENTS & AVAIL-	
ABLE GAS	6-3
Leaded Gasoline	6-3
Fuel Filter & Sediment Bowl	6-4
In-Line Fuel Filter	6-4
Fuel Tank Screen Filters	6-4
Air/Fuel Mixture	6-5
Throttle & Choke Valves	6-5
FUEL PUMP	6-5
Remote Pump	6-5
Integral Fuel Pump	6-5
OIL INJECTION	6-5
Fuel/Oil Mixture	6-6
"Break-in" Lubrication	6-6
Removing Fuel from System	6-7
ENGINE REVOLUTION	
LIMITER	6-7
TROUBLESHOOTING	6-7
Fuel Problems	5-7
Fuel Filter & Sediment Bowl	6-8
"Sour" Fuel	6-8
Choke Problems	6-8
Rough Engine Idle	6-8
Excessive Fuel	6-9
Engine Surge	6-9
CARBURETOR MODELS	6-9
SERVICE KEIHIN CDK-34	6-9
Removal & Disassembling	6-10
Cleaning & Inspecting	6-14
Exploded Drawing	6-15
Assembling	6-16

Installation	6-19	Rich Mixture	7-2
Priming	6-21	Too Cool	7-3
Mixture Screws w/Limiter Caps	6-22	Fouled	7-3
Idle Adjustment Screw	6-22	Carbon Deposits	7-3
Low & High Speed Adjustment	6-22	Overheating	7-3
High Altitude Operation	6-22	Electrode Wear	7-3
Choke Cable Adjustment	6-23		
Throttle Cable Adjustment	6-23		
SERVICE KEIHIN CDK-38 & 40		CDI (CAPACITOR DISCHARGE	
CARBURETOR w/INTEGRAL		IGNITION) & CHARGING SYS.	7-4
FUEL PUMP	6-25	Description & Operation --	
Disassembling	6-25	Ignition Circuit	7-4
"Front" Side	6-25	Operation	7-5
"Back" Side	6-27	Special Timing Words	7-5
Cleaning & Inspecting	6-28	Troubleshooting CDI	7-5
Exploded Drawing	6-29	Spark Plugs	7-5
Assembling	6-30	Compression	7-6
Installation	6-32	Testing Ignition Components	7-7
Priming	6-32	Elec. Box Removal -- 550 & 650	7-8
Choke Cable Adjustment	6-32	Elec. Box Removal -- All Others	7-8
Throttle Cable Adjustment	6-33	Exciter Coil Test -- 550	7-9
REMOTE FUEL PUMP	6-33	Pulser Coil Test -- 550	7-9
Theory of Operation	6-33	Exciter Coil Test -- 650	7-9
Pump Pressure Check	6-34	Igniter Test -- 550 & 650	7-10
Pump Volume Check	6-35	Igniter Removal -- 550 & 650	7-10
Servicing Fuel Pump	6-36	Ign.Coil Winding Test -- 550 &	
Removal & Disassembling	6-37	650 -- Secondary Winding	7-10
Cleaning & Inspecting	6-37	Ign. Coil Winding Test -- 750,	
Assembling	6-37	900 & 1100 -- Primary	7-11
OIL INJECTION	6-38	Secondary Winding	7-12
Oil Mixture	6-38	CDI Igniters -- Removal,	
"Break-in" Period	6-38	Installation	7-12
System Components	6-39	Pickup Coil -- 750, 900 & 1100	7-12
Oil Tank	6-39		
Oil Injection Pump	6-39	IGNITION TIMING ADJUST-	
System Inspection	6-39	MENTS	7-14
Oil Pump Output Test	6-40	Timing -- 550 & 650	7-14
Troubleshooting	6-41	Dynamic Check	7-15
First Checks -- Delivery	6-41	Magneto Assembly	7-15
Purging Air from System	6-41	Adjusting Timing	7-16
Purging Air from Pump	6-42		
		CHARGING CIRCUIT	7-17
		Description & Operation	7-17
		Troubleshooting	7-19
		Testing Coil Output	7-19
		Coil Resistance Test	7-21
		Exciter Coil Test -- 750	7-21
		Exciter Coil Test -- 900	7-21
		Charging Coil Output -- 1100	7-21
		Charg. Coil Resistance -- 1100	7-21
7- IGNITION			
INTRODUCTION & CHAPTER			
COVERAGE	7-1		
SPARK PLUG EVALUATION	7-1		
Correct Color	7-2		

8- ENGINE

INTRODUCTION & CHAPTER ORGANIZATION	8-1
TWO-CYCLE ENGINE DESCRIPTION & OPERATION	8-2
Intake/Exhaust	8-2
Lubrication	8-2
Physical Laws	8-2
Actual Operation	8-3
Timing	8-3
SERVICE TWO-CYLINDER ENGINES	8-3
Preliminary Task -- Engine Overhaul	8-4
Removal	8-4
Disassembling	8-9
Cranking Mtr. Removal	8-10
"Pulling" Flywheel	8-11
Magneto Assembly	8-13
Block Disassembling	8-14
Assembling & Installation	8-20
Exploded Drawings	8-21
Lower Half	8-26
Piston Installation	8-28
Block Installation	8-30
Cylinder Head	8-31
Flywheel Installation	8-34
Cranking Motor Installation	8-37
Engine Installation	8-39
Engine Alignment	8-39
Fuel Tank Installation	8-41
Oil Tank Installation	8-42
SERVICE THREE-CYLINDER ENGINE	8-45
Engine Removal	8-45
Exhaust Manifold Removal	8-46
Engine Disassembling	8-47
Cranking Motor Removal	8-48
Pulling the Flywheel	8-48
Cylinder Head Removal	8-50
Exhaust Manifold Removal	8-51
Intake Manifold Removal	8-51
Block Disassembling	8-52
Crankcase Separation	8-54
Crankshaft Disassembling	8-54
ASSEMBLING & INSTALLATION THREE-CYLINDER ENGINE	8-54

EXPLODED DRAWINGS	8-55
Assembling Continues	8-57
Piston Installation	8-58
Reed Block/Intake Manifold	8-61
Exhaust Manifold Installation	8-61
Cylinder Head Installation	8-61
Flywheel Installation	8-63
Coupler Installation	8-63
Flywheel Cover Installation	8-64
Oil Pump Installation	8-64
Cranking Motor Installation	8-65
ENGINE INSTALLATION THREE-CYLINDER SERIES	8-65
Engine Support Equipment	8-66
CLEANING & INSPECTING ALL ENGINES	8-67
Reed Block Service	8-68
Crankshaft Service	8-68
Connecting Rod Service	8-70
Piston Service	8-70
Cylinder Block Service	8-74
Piston Clearance	8-75
Honing Cylinder Walls	8-75
Block & Cyl. Head Warpage	8-77
SEALANTS, LUBRICANTS, ETC.	8-78

9- ELECTRICAL

INTRODUCTION	9-1
BATTERIES	9-1
PWC Batteries	9-1
Construction	9-1
Battery Ratings	9-2
Ampere-Hour	9-2
Cold Cranking Performance	9-2
Reserve Capacity	9-2
Watt-Hour	9-2
Installation	9-2
Service	9-2
Testing	9-4
Hydrometers	9-5
Charging	9-6
Installing	9-6
Jumper Cables	9-7
Storage	9-7
TACHOMETER	9-7
ELECTRICAL SYSTEM -- GENERAL INFORMATION	9-8
Cranking Motor Circuit	9-8

Ignition	9-9	IMPELLER-TO-PUMP CASE	
CRANKING MOTOR CIRCUIT	9-9	CLEARANCE	10-5
Theory of Operation	9-9	Axial Flow Pump	10-5
Cranking Motor Noises	9-10	Mixed Flow Pump	10-6
Faulty Symptoms	9-11	JET PUMP SERVICE	10-6
CRANKING MOTOR TROUBLE-		Removal	10-7
SHOOTING	9-11	Impeller Alignment	10-9
Circuit Tests	9-11	Disassembling	10-10
Motor Relay Removal		Impeller Removal	10-12
for Testing	9-12	Impeller Shaft Removal	10-13
Relay Testing	9-14	Cleaning & Inspecting	10-15
Relay Installation	9-14	Exploded Drawings	10-16
CRANKING MOTOR SERVICE	9-15	Assembling	10-20
Description	9-15	Shimming Procedures -- 550	10-21
Diagrams Inside Elec. Box	9-16	Impeller Installation --550	10-23
Motor Removal	9-18	Impeller Installation -- All	
Disassembling	9-18	Others	10-25
Cleaning & Inspecting	9-21	Pump Installation	10-27
Testing Motor Parts	9-24	BEARING HOUSING SERVICE	10-30
Assembling	9-26	Removal	10-30
Installation	9-27	Disassembling	10-31
TESTING OTHER ELECTRICAL		Cleaning & Inspecting	10-32
COMPONENTS	9-30		
Start Button Test	9-31	11 CONTROL ADJUSTMENTS	
Safety Switch	9-31	INTRODUCTION	11-1
Stop Switch	9-31	STEERING CABLE	11-1
Stop Switch Relay	9-31	REVERSE CABLE	11-2
Electric Bilge Pump	9-32	TRIM CABLE	11-3
Electric Fan	9-32		
Temperature Warning Sys.	9-32	APPENDIX	
Overheat Buzzer	9-33	METRIC CONVERSION CHART	A-1
ELECTRIC TRIM SYSTEM	9-33	RECOMMENDED TORQUE	
		VALUES	A-2
10 JET PUMP		ENGINE SPECIFICATIONS AND	
INTRODUCTION	10-1	TUNE-UP ADJUSTMENTS	A-4
Model Identification and		WIRING DIAGRAMS & COLOR	
Chapter Coverage	10-1	CODE IDENTIFICATION	A-6
Jet Pump Description	10-2	Model 550 Series	A-6
Axial Flow	10-2	Model 650 Series	A-7
Mixed Flow	10-2	Model 750 Series	A-8
IMPELLERS	10-3	Model 750 Hi-Performance	A-9
Cavitation Burns	10-3	Model 900 Hi-Performance	A-10
Cooling Water and Bilge Hoses	10-4	Model 1100 Hi-Performance	A-11