

CONTENTS

1	GENERAL INFORMATION, SAFETY AND TOOLS	HOW TO USE THIS MANUAL	1-2
		BOATING SAFETY	1-4
		BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
		SAFETY IN SERVICE	1-13
		TROUBLESHOOTING	1-13
		SHOP EQUIPMENT	1-17
		TOOLS	1-19
		FASTENERS, MEASUREMENT, AND CONVERSIONS SPECIFICATIONS	1-26 1-28
2	MAINTENANCE AND TUNE-UP	GENERAL INFORMATION	2-2
		ENGINE MAINTENANCE	2-11
		BOAT MAINTENANCE	2-31
		TUNE-UP	2-34
		TIMING AND SYNCHRONIZATION	2-47
		VALVE CLEARANCE	2-74
		CLEARING A SUBMERGED MOTOR	2-80
		SPECIFICATIONS	2-82
3	FUEL SYSTEM	FUEL AND COMBUSTION BASICS	3-2
		FUEL TANK AND LINES	3-5
		CARBURETED FUEL SYSTEM	3-10
		CARBURETOR SERVICE	3-16
		FUEL PUMP SERVICE	3-75
		REED VALVES (2-STROKE MOTORS)	3-87
		SPECIFICATIONS	3-88
4	IGNITION AND ELECTRICAL	UNDERSTANDING AND TROUBLESHOOTING	
		ELECTRICAL SYSTEMS	4-2
		IGNITION SYSTEM	4-8
		YAMAHA MICROCOMPUTER IGNITION SYSTEM (YMIS)	4-42
		CHARGING CIRCUIT	4-52
		CRANKING CIRCUIT	4-59
		SWITCHES/SOLENOIDS	4-69
		TACHOMETERS	4-69
		WIRING DIAGRAMS	4-94
		SPECIFICATIONS	4-76
5	LUBRICATION AND COOLING	OIL INJECTION SYSTEM (2-STROKE)	5-2
		OIL INJECTION SYSTEM (INLINE)	5-10
		OIL INJECTION SYSTEM (V4/V6)	5-22
		OIL INJECTION WARNING SYSTEM	5-31
		LUBRICATION SYSTEM (4-STROKE)	5-38
		COOLING SYSTEM	5-41
		SPECIFICATIONS	5-48

CONTENTS

POWERHEAD MECHANICAL 6-2
POWERHEAD REFINISHING 6-94
POWERHEAD BREAK-IN 6-110
SPECIFICATIONS 6-111

POWERHEAD

6

LOWER UNIT 7-2
LOWER UNIT REMOVAL 7-6
GEARCASE OVERHAUL 7-10
JET DRIVE 7-57

LOWER UNIT

7

HYDRO TILT LOCK SYSTEM 8-2
TRIM & TILT SYSTEMS 8-2
POWER TILT SYSTEM 8-3
POWER TRIM/TILT SYSTEM 8-7

TRIM AND TILT

8

REMOTE CONTROLS 9-2

REMOTE CONTROL

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-17

MASTER INDEX

ANCHORS	1-10	CHOKE SWITCH	4-72
ANODES (ZINCS)	2-28	CHOKE SWITCH	9-2
INSPECTION	2-28	CLEARING A SUBMERGED MOTOR	2-80
SERVICING	2-28	COMBUSTION	3-5
BASIC ELECTRICAL THEORY	4-2	COMPASS	1-11
BATTERY	2-31	COMPRESSION TESTING	2-35
CHARGERS	4-58	CHECK	2-35
CONSTRUCTION	4-55	LOW COMPRESSION	2-36
LOCATION	4-57	CONNECTING RODS	6-99
MAINTENANCE	2-31	CONTROL BOX ASSEMBLY	9-4
MARINE	4-55	CONTROL UNIT (YMIS)	4-46
RATINGS	4-57	COOLING SYSTEM	
REPLACING CABLES	4-58	DESCRIPTION AND OPERATION	5-41
SAFETY PRECAUTIONS	4-58	FLUSHING	2-11
STORAGE	2-33	FLUSHING (JET DRIVES)	2-13
TESTING	2-32	THERMOSTAT	5-47
BAILING DEVICES	1-10	TROUBLESHOOTING	5-43
BASIC OPERATING PRINCIPLES	1-13	WATER PUMP	5-45
BLEED SYSTEM - 2-STROKE	6-96	COURTESY MARINE EXAMINATIONS	1-10
BOAT MAINTENANCE	2-31	CRANKING CIRCUIT	4-59
BATTERIES	2-31	CRANKING MOTOR	4-62
FIBERGLASS HULL	2-33	CRANKING MOTOR CIRCUIT	4-59
INTERIOR	2-33	CRANKING MOTOR RELAY	4-61
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10	DESCRIPTION AND OPERATION	4-59
ANCHORS	1-10	CRANKING MOTOR	4-62
BAILING DEVICES	1-10	CRANKING MOTOR RELAY	4-61
COMPASS	1-11	CRANKSHAFT	6-97
FIRST AID KIT	1-10	CRANKSHAFT POSITION SENSOR	4-48
OAR/PADDLE (SECOND MEANS OF PROPULSION)	1-10	CYLINDER BLOCK	6-102
TOOLS AND SPARE PARTS	1-12	CYLINDER HEAD COMPONENTS - 4-STROKE	6-105
VHF-FM RADIO	1-10	ELECTRICAL COMPONENTS	4-2
BOATING SAFETY	1-4	ELECTRICAL SYSTEM CHECKS	2-44
COURTESY MARINE EXAMINATIONS	1-10	BATTERY	2-44
REGULATIONS FOR YOUR BOAT	1-4	STARTER MOTOR	2-44
REQUIRED SAFETY EQUIPMENT	1-6	WIRING HARNESS	2-44
BREAKER POINT IGNITION SYSTEM	2-41	ELECTRICAL TESTING	4-6
ADJUSTMENT	2-42	ELECTRONIC TOOLS	1-23
CLEANING & INSPECTION	4-35	ENGINE COVERS	2-11
FLYWHEEL INSTALLATION	4-35	ENGINE IDENTIFICATION	2-2
FLYWHEEL REMOVAL	4-33	ENGINE MODEL & SERIAL NUMBERS	2-3
IGNITION COMPONENT SERVICING	4-33	ENGINE MAINTENANCE	2-11
POINT GAP ADJUSTMENT	4-35	ANODES (ZINCS)	2-28
POINT GAP CHECK	4-32	COOLING SYSTEM	2-11
REPLACEMENT	2-42	ENGINE COVERS	2-11
TESTING	2-42	ENGINE OIL (2-STROKE)	2-13
CARBURETED FUEL SYSTEM	3-10	ENGINE OIL AND FILTER (4-STROKE)	2-15
DESCRIPTION AND OPERATION	3-10	FUEL FILTER	2-18
TROUBLESHOOTING	3-13	JET DRIVE IMPELLER	2-27
CARBURETOR IDENTIFICATION	3-16	PROPELLER	2-20
CARBURETOR SERVICE	3-16	TIMING BELT	2-30
IDENTIFICATION	3-16	ENGINE OIL (2-STROKE)	2-13
2 HP CARBS	3-16	CHECKING	2-15
3 HP CARBS	3-20	FILLING	2-14
4/5 HP CARBS	3-24	RECOMMENDATIONS	2-13
9.9 HP 4-STROKE CARBS	3-28	ENGINE OIL & FILTER (4-STROKE)	2-15
6 HP, 8 HP, 9.9 HP (2-STROKE) AND 15 HP CARBS	3-37	CHECKING LEVEL	2-15
20-55 HP (2-CYL) CARBS	3-42	OIL CHANGE & FILTER	2-16
3-CYLINDER CARBS	3-47	RECOMMENDATIONS 21-5	
45/50 HP (4 CYL, 4-STROKE) CARBS	3-60	EXHAUST COVER	6-96
V4 & V6 CARBS	3-65	FASTENERS, MEASUREMENTS AND CONVERSIONS	1-26
CDI IGNITION SYSTEMS	2-43	BOLTS, NUTS & OTHER THREADED RETAINERS	1-26
DESCRIPTION & OPERATION	4-9	STANDARD & METRIC MEASUREMENTS	1-27
INSPECTION	2-43	TORQUE	1-27
INSTALLATION	4-39	FIBERGLASS HULL	2-33
REMOVAL	4-36	FIRST AID KIT	1-10
CDI UNIT AND IGNITION COILS	4-36	FLYWHEEL AND STATOR PLATE	4-22
INSTALLATION	4-39	FUEL AND COMBUSTION BASICS	3-2
REMOVAL	4-36	COMBUSTION	3-5
CHARGING CIRCUIT	4-52	FUEL	3-2
76° V6 MOTOR CHARGING SYSTEM	4-54	FUEL SYSTEM PRESSURIZATION	3-4
BATTERY	4-55	FUEL SYSTEM SERVICE CAUTIONS	3-2
SINGLE-PHASE CHARGING SYSTEM	4-52	FUEL FILTER	2-18
THREE-PHASE CHARGING SYSTEM	4-52	SERVICE	2-19
CHEMICALS	1-17	FUEL LINES AND FITTINGS	3-7
CHOKE SOLENOID	4-73	FUEL PUMP SERVICE	3-75

10-18 MASTER INDEX

FUEL PUMPS.....	3-75	LUBRICATING THE MOTOR.....	2-7
1-2-CYLINDER (2-STROKE).....	3-76	POWER TRIM/TILT RESERVOIR.....	2-10
3-CYLINDER, V4 & V6.....	3-81	LUBRICATION SYSTEM (4-STROKE).....	5-38
4-STROKE.....	3-78	DESCRIPTION AND OPERATION.....	5-38
FUEL PUMPS.....		OIL PRESSURE.....	5-38
1-2-CYLINDER (2-STROKE).....	3-76	OIL PUMP.....	5-40
3-CYLINDER, V4 & V6.....	3-81	MAIN KEY SWITCH.....	4-71
4-STROKE.....	3-78	MAIN OIL TANK (V4/V6).....	5-22
FUEL SYSTEM CHECKS.....	2-44	MEASURING TOOLS.....	1-25
FUEL SYSTEM PRESSURIZATION.....	3-4	NEUTRAL SAFETY SWITCH.....	4-73
FUEL TANK.....	3-5	NEUTRAL SAFETY SWITCH.....	9-2
FUEL TANK AND LINES.....	3-5	OIL INJECTION SYSTEM (INLINE).....	5-10
FUEL LINES AND FITTINGS.....	3-7	OIL INJECTION SYSTEM.....	5-10
FUEL TANK.....	3-5	OIL PUMP.....	5-20
GEARCASE (LOWER UNIT) OIL.....	2-7	OIL INJECTION SYSTEM (V4/V6).....	5-22
GEARCASE OVERHAUL.....	7-10	INJECTION CONTROL LINK ROD.....	5-30
1-2 CYLINDER W/O REVERSE GEAR.....	7-10	MAIN OIL TANK.....	5-22
1-2 CYLINDER W/REVERSE GEAR.....	7-16	OIL PUMP.....	5-25
3-4 CYLINDER INLINE, V4 AND V6.....	7-34	REMOTE OIL TANK.....	5-24
HAND REWIND STARTER.....	10-2	OIL INJECTION SYSTEM (2-STROKE).....	5-2
INTRODUCTION.....	10-2	PRECISION BLEND SYSTEM (PBS).....	5-2
2 HP 2-STROKE POWERHEADS.....	10-2	OIL INJECTION WARNING SYSTEM.....	5-31
ALL OTHER 2-STROKE POWERHEADS (EXCEPT 2 HP).....	10-6	DESCRIPTION & OPERATION.....	5-31
9.9 HP 4-STROKE POWERHEADS.....	10-10	OIL INJECTION WIRING.....	5-37
HAND TOOLS.....	1-19	OIL PUMP.....	
HOW TO USE THIS MANUAL.....	1-2	INLINE.....	5-20
AVOIDING THE MOST COMMON MISTAKES.....	1-3	V4/V6.....	5-25
AVOIDING TROUBLE.....	1-2	4-STROKE.....	5-40
CAN YOU DO IT?.....	1-2	PISTONS.....	6-100
DIRECTIONS AND LOCATIONS.....	1-2	POWER TILT SYSTEM.....	8-3
MAINTENANCE OR REPAIR?.....	1-2	DESCRIPTION & OPERATION.....	8-3
PROFESSIONAL HELP.....	1-3	MAINTENANCE.....	8-4
PURCHASING PARTS.....	1-3	TROUBLESHOOTING.....	8-5
WHERE TO BEGIN.....	1-2	SERVICING.....	8-7
HYDRO TILT LOCK SYSTEM.....	8-2	TILT MOTOR.....	8-7
DESCRIPTION & OPERATION.....	8-2	TILT RELAY.....	8-6
SERVICING.....	8-2	TILT SWITCH.....	8-6
IDLE SPEED.....	2-46	TROUBLESHOOTING.....	8-5
ADJUSTMENT.....	2-46	POWER TRIM/TILT RESERVOIR.....	2-10
IGNITION SYSTEM.....	4-8	FLUID LEVEL/CONDITION.....	2-10
BREAKER POINT IGNITION COMPONENTS.....	4-32	RECOMMENDED LUBRICANT.....	2-10
CAPACITOR DISCHARGE IGNITION (CDI) SYSTEM.....	4-9	POWER TRIM/TILT SWITCH.....	4-70
CDI UNIT AND IGNITION COILS.....	4-36	POWER TRIM/TILT SYSTEM.....	8-7
CONTACT BREAKER POINTS IGNITION (MAGNETO IGNITION).....	4-8	DESCRIPTION & OPERATION.....	8-7
FLYWHEEL AND STATOR PLATE.....	4-22	MAINTENANCE.....	8-9
TROUBLESHOOTING - ALL SYSTEMS.....	4-12	POWER TRIM/TILT SWITCH.....	8-11
INJECTION CONTROL LINK ROD.....	5-30	SERVICING.....	8-12
INTERIOR.....	2-33	TRIM SENSOR.....	8-12
JET DRIVE.....	7-57	TRIM/TILT MOTOR.....	8-12
DESCRIPTION & OPERATION.....	7-57	TRIM/TILT RELAY.....	8-10
JET DRIVE ASSEMBLY.....	7-58	TROUBLESHOOTING.....	8-9
MODEL IDENTIFICATION & SERIAL NUMBERS.....	7-57	POWERHEAD BREAK-IN.....	6-110
JET DRIVE ASSEMBLY.....	7-58	BREAK-IN PROCEDURES.....	6-110
JET DRIVE BEARING.....	2-9	POWERHEAD MECHANICAL.....	6-2
JET DRIVE IMPELLER.....	2-27	GENERAL INFORMATION.....	6-2
KILL SWITCH.....	4-72	2/3 HP 1-CYL.....	6-3
KILL SWITCH.....	9-4	4/5HP 1-CYL.....	6-10
KNOCK SENSOR.....	4-49	9.9 HP 2-CYL.....	4-
LOWER UNIT.....	7-2	STROKE.....	6-16
EXHAUST GASES.....	7-4	6 HP AND LARGER, 2-CYL.....	6-34
GENERAL INFORMATION.....	7-2	3-CYLINDER.....	6-50
SHIFTING PRINCIPLES.....	7-2	45/50 HP, 4-CYL., 4-STROKE.....	6-65
TROUBLESHOOTING.....	7-4	V4 AND V6.....	6-77
LOWER UNIT - NO REVERSE GEAR.....	7-6	POWERHEAD REFINISHING.....	6-94
REMOVAL & INSTALLATION.....	7-6	BLEED SYSTEM - 2-STROKE.....	6-96
LOWER UNIT - WITH REVERSE GEAR.....	7-7	CLEANING & INSPECTION.....	6-94
REMOVAL & INSTALLATION.....	7-7	CONNECTING RODS.....	6-99
LOWER UNIT REMOVAL.....	7-6	CRANKSHAFT.....	6-97
LOWER UNIT - NO REVERSE GEAR.....	7-6	CYLINDER BLOCK.....	6-102
LOWER UNIT - WITH REVERSE GEAR.....	7-7	CYLINDER HEAD COMPONENTS - 4-STROKE.....	6-105
LUBRICATION.....	2-6	EXHAUST COVER.....	6-96
GEARCASE (LOWER UNIT) OIL.....	2-7	GENERAL INFORMATION.....	6-94
JET DRIVE BEARING.....	2-9	PISTONS.....	6-100
LUBRICANTS.....	2-6	REED BLOCK - 2-STROKE.....	6-96
LUBRICATION INSIDE THE BOAT.....	2-7	PRECISION BLEND SYSTEM (PBS).....	5-2

PROPELLER	2-20	THERMO-SENSOR & THERMO-SWITCH.....	4-50
GENERAL INFORMATION.....	2-21	THERMO-SWITCH.....	4-69
INSPECTION	2-24	THREE-PHASE CHARGING SYSTEM	4-52
REMOVAL & INSTALLATION.....	2-24	THROTTLE POSITION SENSOR	4-47
RE-COMMISSIONING	2-79	TILT MOTOR.....	8-7
REED BLOCK - 2-STROKE	6-96	TILT RELAY	8-6
REED VALVES (2-STROKE MOTORS).....	3-87	TILT SWITCH	8-6
REED VALVE BLOCK	3-87	TIMING AND SYNCHRONIZATION	2-47
REGULATIONS FOR YOUR BOAT	1-4	GENERAL INFORMATION.....	2-47
REMOTE CONTROL BOX	9-2	TIMING.....	2-47
REMOTE CONTROLS	9-2	PREPPING THE MOTOR	2-47
CHOKE SWITCH	9-2	SYNCHRONIZATION	2-47
CONTROL BOX ASSEMBLY	9-4	TIMING	2-47
KILL SWITCH.....	9-4	2 HP	2-48
NEUTRAL SAFETY SWITCH.....	9-2	3 HP	2-49
REMOTE CONTROL BOX	9-2	4/5 HP (83/103CC).....	2-49
START BUTTON	9-3	6/8 HP	2-50
WARNING BUZZER/HORN	9-2	9.9 HP 4-STROKE	2-52
REMOTE OIL TANK (V4/V6)	5-24	9.9/15 HP 2-STROKE.....	2-53
REQUIRED SAFETY EQUIPMENT	1-6	20/25 HP (395CC)	2-55
SAFETY IN SERVICE	1-13	20/25 HP (430CC)	2-57
SAFETY TOOLS	1-17	25/30 HP (496CC 2-CYLINDER).....	2-57
SELF-DIAGNOSTIC CODES	4-44	40 HP (2-CYLINDER).....	2-58
SHOP EQUIPMENT	1-17	48/55 HP (2-CYLINDER)	2-59
SINGLE-PHASE CHARGING SYSTEM.....	4-52	25/30 HP (496CC).....	3-
SPARK PLUG WIRES	2-41	CYL.).....	2-61
SPARK PLUGS.....	2-37	28J-50 HP (698CC)	2-63
SPECIAL TOOLS	1-23	50-70 HP (849CC) & 65J-90 HP (1140CC).....	2-63
SPECIFICATIONS	1-28	45/50 HP (4 CYL., 4-STROKE)	2-66
YMIS SENSOR CHARACTERISTICS	4-45	V4/V6 MOTORS WITH CDI	2-70
CAPACITIES.....	2-87	V4/V6 MOTORS WITH YMIS.....	2-73
CARBURETOR SET-UP.....	3-88	TIMING BELT	2-30
CDI UNIT TESTING CHART	4-84	INSPECTOR.....	2-30
CHARGING SYSTEM	4-81	TOOLS	1-19
CONVERSION FACTORS	1-28	ELECTRONIC TOOLS	1-23
COOLING SYSTEM	5-38	HAND TOOLS	1-19
CRANKSHAFT POSITION SENSOR.....	4-83	MEASURING TOOLS	1-25
ENGINE	6-111	OTHER COMMON TOOLS	1-22
ENGINE TORQUE	6-130	SPECIAL TOOLS	1-23
FUEL/OIL RATIO	2-88	TOOLS AND SPARE PARTS	1-12
GENERAL ENGINE	2-82	TRIM SENSOR	8-12
GENERAL ENGINE SYSTEM	2-84	TRIM & TILT SYSTEMS.....	8-2
IGNITION SYSTEM	4-76	INTRODUCTION	8-2
LUBRICATION SERVICES.....	2-86	TRIM/TILT MOTOR.....	4-71
MAINTENANCE INTERVALS.....	2-85	TRIM/TILT MOTOR.....	8-12
METRIC BOLTS - TYPICAL TORQUE VALUES	1-28	TRIM/TILT RELAY.....	4-70
MODEL ID DECODER	2-86	TRIM/TILT RELAY.....	8-10
SELF-DIAGNOSTIC CODES.....	4-44	TROUBLESHOOTING	1-13
SPARK PLUG DIAGNOSIS	2-92	BASIC OPERATING PRINCIPLES	1-13
TUNE-UP	2-89	COMBUSTION RELATED PISTON FAILURES.....	3-16
U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES	1-28	COMMON PROBLEMS	3-14
YMIS SENSOR CHARACTERISTICS	4-45	COOLING SYSTEM	5-44
START BUTTON.....	4-75	CRANKING MOTOR CIRCUIT.....	4-59
START BUTTON.....	9-3	ELECTRICAL SYSTEMS.....	4-6
STORAGE	2-77	LOGICAL	3-14
RE-COMMISSIONING	2-79	LOWER UNIT	7-4
WINTERIZATION	2-77	POWER TILT	8-5
SWITCHES/SOLENOIDS.....	4-69	POWER TRIM/TILT	8-9
CHOKE SOLENOID.....	4-73	THERMOSTAT	5-45
CHOKE SWITCH.....	4-72	YMIS.....	4-42
KILL SWITCH.....	4-72	TUNE-UP	2-34
MAIN KEY SWITCH.....	4-71	BREAKER POINT IGNITION SYSTEM	2-41
NEUTRAL SAFETY SWITCH.....	4-73	CDI/CDI IGNITION SYSTEMS.....	2-43
POWER TRIM/TILT SWITCH.....	4-70	COMPRESSION TESTING	2-35
START BUTTON	4-75	ELECTRICAL SYSTEM CHECKS	2-44
TETHER	4-72	FUEL SYSTEM CHECKS.....	2-44
THERMO-SWITCH.....	4-69	IDLE SPEED ADJUSTMENT	2-46
TRIM/TILT MOTOR	4-71	INTRODUCTION	2-34
TRIM/TILT RELAY	4-70	SPARK PLUG WIRES	2-41
WARNING BUZZER/HORN	4-74	SPARK PLUGS	2-37
TACHOMETERS.....	4-69	TUNE-UP SEQUENCE.....	2-34
TACHOMETER CONNECTIONS.....	4-69	TUNE-UP SEQUENCE.....	2-34
TEST EQUIPMENT	4-4	UNDERSTANDING AND TROUBLESHOOTING	4-2
TETHER	4-72	ELECTRICAL SYSTEMS.....	4-2
THERMOSTAT	5-47	BASIC THEORY	4-2

10-20 MASTER INDEX

COMPONENTS	4-2	GENERAL INFORMATION.....	4-42
SYSTEM PRECAUTIONS	4-7	KNOCK SENSOR.....	4-49
TEST EQUIPMENT	4-4	SELF-DIAGNOSTIC CODES	4-44
TESTING	4-6	TESTING	4-43
TROUBLESHOOTING	4-6	THERMO-SENSOR & THERMO-SWITCH	4-50
WIRE AND CONNECTOR REPAIR	4-7	THROTTLE POSITION SENSOR	4-47
VALVE CLEARANCE.....	2-74	TROUBLESHOOTING	4-42
VALVE LASH	2-74	YMIS SELF DIAGNOSIS	4-42
WARNING BUZZER/HORN	4-74	YMIS SENSOR CHARACTERISTICS	4-45
WARNING BUZZER/HORN	9-2	YMIS SELF DIAGNOSIS	4-42
WATER PUMP	5-45	YMIS SENSOR CHARACTERISTICS	4-45
WINTERIZATION	2-77	1-2 CYL. GEARCASE W/O REVERSE	7-10
WIRE AND CONNECTOR REPAIR	4-7	1-2 CYL. GEARCASE W/REVERSE	7-16
WIRING DIAGRAMS	4-94	2 HP CARBS.....	3-16
LUBRICATION	5-37	2 HP 2-STROKE STARTERS.....	10-2
2 HP ENGINES	4-94	2/3 HP 1-CYL. POWERHEADS	6-3
3 HP ENGINES	4-95	2-STROKE STARTERS (EXCEPT 2 HP).....	10-6
4/5 HP ENGINES	4-95	3 HP CARBS.....	3-22
6/8 HP ENGINES	4-96	3-CYL. POWERHEADS	6-50
9.9/15 HP ENGINES	4-97	3-4 CYL. INLINE, V4 AND V6 GEARCASE	7-34
20/25/30 HP ENGINES	4-99	4/5 HP CARBS	3-24
40 HP ENGINES	4-103	4/5HP 1-CYL. POWERHEADS.....	6-10
45/50 HP ENGINES	4-103	9.9 HP 4-STROKE CARBS	3-28
48/55 HP ENGINES	4-104	9.9 HP 2-CYL., 4-STROKE POWERHEADS	6-16
28J-50 HP ENGINES	4-105	9.9 HP 4-STROKE STARTERS	10-10
50-70 HP ENGINES	4-107	6 HP, 8 HP, 9.9 HP (2-STROKE) & 15 HP CARBS	3-37
65J-90 HP ENGINES	4-108	6 HP AND LARGER, 2-CYL., POWERHEADS	6-34
C75/C80/C85 ENGINES.....	4-110	20-55 HP (2-CYL) CARBS	3-42
V4 ENGINES	4-111	3-CYLINDER CARBS.....	3-47
V6 ENGINES	4-112	45/50 HP (4 CYLINDER, 4-STROKE) CARBS.....	3-60
CONTROL BOX	4-116	45/50 HP, 4-CYLINDER, 4-STROKE POWERHEADS.....	6-65
YAMAHA MICROCOMPUTER IGNITION SYSTEM (YMIS)	4-42	76° V6 MOTOR CHARGING SYSTEM	4-54
CONTROL UNIT.....	4-46	V4 & V6 CARBS	3-65
CRANKSHAFT POSITION SENSOR.....	4-48	V4 AND V6 POWERHEADS.....	6-77