

# TABLE OF CONTENTS

## 1 DESCRIPTION AND OPERATION

BRIEF HISTORY	
PRINCIPLE OF OPERATION	1-2
Axial Flow	1-2
Mixed Flow	1-3
ENGINE & JET DRIVE	1-4
IMPELLERS	1-4
REPLACEABLE PARTS	1-6
DEBRIS REMOVAL AND	
ENGINE OVERHEATING	1-6
REVERSE CAPABILITY	1-7
TEST TANKS	1-7
THROTTLE LIMITER	1-8

## 2 SAFETY

INTRODUCTION	2-1
LEGAL REQUIREMENTS	2-2
Personal Flotation Devices	2-2
Bells, Horns & Whistles	2-3
Fire Extinguishers	2-4
Visual Distress Signals	2-4
LEGAL RESGISTRATION	2-5
SAFETY PRACTICES	2-5
Riding Techniques	2-5
Full Throttle Operation	2-5
Jumping Waves	2-6
Alcohol & Substance Use	2-6
Age Restrictions	2-6
Speed Restrictions	2-6
Operaton at Night	2-6
Shallow Water Operation	2-6
Engine Compartment	
Ventilation	2-7
Flame Arrestors	2-7
Fuel System	2-7
Taking on Fuel	2-7
Excessive Noise	2-8
Automotive Replacement Parts	2-8
Overloading	2-8
BOATING ACCIDENT	
REPORTS	2-8
SECURITY	2-8

## 3 TUNING

INTRODUCTION	3-1
TUNE-UP SEQUENCE	3-1
COMPRESSION CHECK	3-2
SPARK PLUG INSPECTION	3-3
BROKEN REED	3-3
ELECTRICAL POWER SUPPLY	3-4
Filling the Battery	3-4
Jumper Cables	3-5
CARBURETOR ADJUSTMENT	3-5
Low Speed & Idle	3-5
High Speed	3-6
FUEL PUMP	3-7
CRANKING MOTOR AND	
SOLENOID	3-7
Cranking Motor Test	3-7
Solenoid Test	3-7
JET PUMP	3-7
Gate Position	3-7
Impeller	3-8
Modifying For Higher	
Performance	3-8

## 4 MAINTENANCE

INTRODUCTION	4-1
After Use Tasks	4-2
Cooling	4-2
Controlling Corrosion	4-3
Pump Impeller	
SERIAL NUMBERS	4-4
EMERGENCY TETHER	4-5
LUBRICATION -- FULL UNIT	4-6
Throttle Cable	4-7
Steering Cable	4-8
Fuel/Oil Mixture	4-8
Impeller	4-9
INSPECTION AND SERVICE	4-9
Fuel Fill Cap	4-9
Models with Oil Injection	4-10
Water Separator Filter	4-10
Drain Plug	4-10
Rubber Coupler Inspection	4-11

<b>4 MAINTENANCE (Continued)</b>	
PRE-SEASON PREPARATION	4-12
SEALANTS, ADHESIVES, AND FUEL STABILIZERS	4-14
Sealants and Adhesives	4-15
Lubricants	4-15
Fuel Stabilizer	
FIBERGLASS HULLS	4-16
Cleaning, Waxing, Polishing	4-16
SUBMERGED ENGINE SERVICE	4-16
Salt Water Submersion	4-16
WINTER STORAGE	4-18
PRE-SEASON CHECK	4-19

## 5 TROUBLESHOOTING

INTRODUCTION	5-1
Engine Troubleshooting	5-1
Troubleshooting Check	5-2
Cranking System Test	5-2
Ignition System Test	5-2
Compression Test	5-3
MECHANICAL ENGINE PROBLEMS	5-4
Engine Noises	5-4
FUEL SYSTEM PROBLEMS	5-5
Engine Surge	5-6
Rough Engine Idle	5-6
IGNITION SYSTEM FAULTS	5-6
SPARK PLUG EVALUATION	5-7
CRANKING SYSTEM FAILURES	5-9
Battery Test	5-9
Cable Connection Test	5-9
Starter Relay Test	5-10
Cranking Circuit Resistance	5-10
Cranking Voltage Tests	5-10
CHARGING SYSTEM	5-12
TROUBLESHOOTING CHARTS	5-12

## 6 FUEL AND OIL

INTRODUCTION	6-1
GENERAL CARBURETOR INFO.	6-1
Diaphragm Carburetors	6-1
Fuel/Oil Mixture	6-2
Air/Fuel Mixture	6-3
Water Separator Filter	6-3
FUEL PUMP	6-3
Integral Fuel Pump	6-4
FUEL IN THE SYSTEM	6-4
Leaded Gasoline	6-4

Removing Fuel From System	6-4
TROUBLESHOOTING	6-5
Fuel Problems	6-5
"Sour" Fuel	6-5
Choke Problems	6-5
Rough Engine Idle	6-6
Excessive Fuel Consumption	6-6
Engine Surge	6-7
CARBURETOR MODELS	6-7
SERVICE CARBURETOR/S -- Mikuni BN38 and BN44	6-7
Removal	6-8
Disassembly	6-10
Cleaning & Inspectin	6-15
Assembling	6-18
Bench Adjustments	6-24
Installation	6-26
Choke Cable Adjustment	6-28
Throttle Cable Adjustment	6-28
OIL INJECTION	6-28
System Components	6-29
Main Oil Tank	6-29
Sub Oil Tank	6-30
Oil Injection Pump	6-30
System Inspection	6-30
Troubleshooting	6-30

## 7 IGNITION

INTRODUCTION & CHAPTER COVERAGE	7-1
SPARK PLUG EVALUATION	7-2
CAPACITOR DISCHARGE (CDI) AND DIGITAL CDI	7-4
TROUBLESHOOTING	7-5
TESTING COMPONENTS	7-6
General Inspections	7-7
Preliminary Tasks (650/700)	7-7
Preliminary Tasks (1100/1200)	7-8
Pulser Coil Test	7-8
Charge Coil Test	7-8
Ignition Coil Test	7-8
CDI Resistance Test	7-9
Rectifier/Regulator Test	7-11

## 8 ENGINE

INTRODUCTION	8-1
TWO-CYCLE ENGINE D & O	8-2
ACTUAL OPERATION	8-2
ENGINE SERVICE	8-3
Preliminary Tasks	8-4

Engine Removal	8-4	Construction	9-1
Disassembling	8-4	Ratings	9-2
Flywheel	8-7	Service	9-2
Magneto & Stator	8-8	TACHOMETER	9-7
Muffler & Exhaust Sys.	8-9	ELECTRICAL SYSTEM	9-7
Intake Manifold	8-11	CHARGING CIRCUIT SERVICE	9-8
Cylinder Head	8-12	CRANKING MOTOR CIRCUIT	9-8
Pistons & Rings	8-12	TROUBLESHOOTING	9-10
Separate Cylinder Blocks	8-14	TESTING COMPONENTS	9-10
Cleaning & Inspecting	8-29	SERVICE	9-12
Assembling	8-14	Removal	9-12
Crankcase	8-14	Disassembling	9-13
Pistons, Rings & Rods	8-16	Cleaning & Inspecting	9-14
Cylinder Head	8-18	Testing Motor Parts	9-15
Muffler & Exhaust Sys.	8-19	Assembling	9-17
Cranking Motor	8-22	Installation	9-17
Stator Plate	8-22		
Flywheel	8-23	<b>10 JET PUMP</b>	
Oil Pump	8-26	INTRODUCTION	10-1
Engine Installation	8-26	JET PUMP SERVICE	10-4
Engine Alignment	8-27	Disassembling	10-5
Closing Tasks	8-27	Impeller Removal	10-6
Break-in Procedures	8-28	Impeller Shaft Removal	10-7
Cleaning and Inspecting	8-29	Cleaning & Inspecting	10-9
Reed Block Service	8-29	Assembling	10-13
Exhaust Cover	8-30	Installation	10-17
Bleed System	8-30	INTERMEDIATE HOUSING	10-18
Crankshaft Service	8-30	Removal	10-19
Connecting Rod Service	8-33	Disassembling	10-19
Piston Service	8-33	Cleaning & Inspecting	10-21
Ring End Gap	8-35	Assembling	10-21
Piston Ring Side Clearance	8-36	Installation	10-23
Cylinder Service	8-37		
Block and Cylinder Head	8-39	<b>11 CONTROL ADJUSTMENTS</b>	
SELANTS, ADHESIVES, LUBRI-		INTRODUCTION	11-1
CANTS & FUEL STRAINERS	8-40	ADJUSTMENTS	11-1
<b>9 ELECTRICAL</b>		Throttle Lever Adjustment	11-1
INTRODUCTION	9-1	Choke Cable Adjustment	11-1
BATTERIES	9-1	Steering Cable Adjustment	11-3