

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED)	1-10
SAFETY IN SERVICE	1-13
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

ENGINE & DRIVE MAINTENANCE	2-2
FLUIDS & LUBRICANTS	2-34
PWC MAINTENANCE	2-44
WINTER STORAGE	2-49
SPRING COMMISSIONING	2-50
TROUBLESHOOTING	2-51
FIRING ORDERS	2-74
SPECIFICATIONS	2-74

3

FUEL SYSTEM

FUEL & COMBUSTION BASICS	3-2
FUEL TANK & LINES	3-5
ELECTRONIC FUEL INJECTION SYSTEM	3-18
FIRING ORDERS	3-74
SPECIFICATIONS	3-74
COMPONENT LOCATIONS	3-87

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
ELECTRONIC IGNITION & CHARGING SYSTEMS	4-13
STARTING SYSTEM	4-39
ELECTRICAL SWITCH/SOLENOID SERVICE	4-49
COMPONENT LOCATIONS	4-51
WIRING DIAGRAMS	4-51
SPECIFICATIONS	4-92

CONTENTS

EXHAUST SYSTEM
COOLING SYSTEM

5-2
5-15

EXHAUST & COOLING

5

ENGINE MECHANICAL
ENGINE REFINISHING & OVERHAUL
ENGINE BREAK-IN
SPECIFICATIONS

6-2
6-58
6-60
6-61

ENGINE MECHANICAL

6

JET DRIVE

7-2

DRIVE SYSTEM

7

HULL, HELM & STEERING

8-2

HULL, HELM & STEERING

8

MASTER INDEX

8-25

MASTER INDEX

<p>ACCELERATOR POSITION SENSOR (APS) 3-53 REMOVAL & INSTALLATION 3-53 TESTING 3-54</p> <p>AIR COOLER & SUPERCHARGER 6-19 REMOVAL & INSTALLATION 6-19 FX SHO & FZ MODELS w/1812cc ENGINES 6-19</p> <p>AIR FILTER 2-5 DESCRIPTION & OPERATION 2-5 REMOVAL & INSTALLATION 2-5</p> <p>AIR FILTER CASE, COVER OR HOUSING 3-19 REMOVAL & INSTALLATION 3-19</p> <p>ANCHORS 1-10</p> <p>ANODES (ZINCS) 2-44 SERVICING 2-45 ENGINE 2-45 OIL TANK 2-46</p> <p>AVOIDING THE MOST COMMON MISTAKES 1-3</p> <p>AVOIDING TROUBLE 1-2</p> <p>BAILING DEVICES 1-10</p> <p>BASIC ELECTRICAL THEORY 4-2 HOW DOES ELECTRICITY WORK 4-2 OHM'S LAW 4-2</p> <p>BASIC OPERATING PRINCIPLES 1-13 2-STROKE MOTORS 1-14 4-STROKE MOTORS 1-16 COMBUSTION 1-16</p> <p>BATTERY CHARGERS 2-48, 4-38 CHECKING SPECIFIC GRAVITY 2-46 CLEANING 2-46 CONSTRUCTION 4-36 LOCATION 4-37 MARINE BATTERIES 4-36 PRECAUTIONS 2-48, 4-37 RATINGS 4-37 REMOVAL & INSTALLATION 2-47 REPLACING BATTERY CABLES 2-48, 4-38 STORAGE 2-48 TERMINALS 3-47</p> <p>BEFORE/AFTER EACH USE 2-4 VISUALLY INSPECTING THE BOAT & MOTOR 2-4</p> <p>BILGE PUMP 2-26 BILGE STRAINER 2-26 ELECTRIC BILGE PUMP STRAINER 2-27</p> <p>BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) .. 1-10 ANCHORS 1-10 BAILING DEVICES 1-10 COMPASS 1-11 FIRST AID KIT 1-10 OAR/PADDLE (SECOND MEANS OF PROPULSION) 1-10 TOOLS & SPARE PARTS 1-12 VHF-FM RADIO 1-10</p> <p>BOATING SAFETY 1-4 COURTESY MARINE EXAMINATIONS 1-10 REGULATIONS FOR YOUR BOAT 1-4 REQUIRED SAFETY EQUIPMENT 1-6</p> <p>BOLTS, NUTS & OTHER THREADED RETAINERS 1-27</p> <p>BYPASS VALVE MOTOR 3-42 REMOVAL & INSTALLATION 3-42</p> <p>CAMSHAFT POSITION SENSOR (CMP) 3-57 REMOVAL & INSTALLATION 3-57 TESTING & SERVICE 3-57</p>	<p>CAMSHAFTS & SPROCKETS 6-27 INSPECTION 6-32 REMOVAL & INSTALLATION 6-27</p> <p>CAN YOU DO IT? 1-2</p> <p>CHECKS & ADJUSTMENTS 2-28 QSTS CABLE 2-28 SHIFT CABLE 2-29 STEERING CABLE 2-31 THROTTLE CABLE 2-32</p> <p>CHEMICALS 1-17 CLEANERS 1-18 LUBRICANTS & PENETRANTS 1-18 SEALANTS 1-18</p> <p>COMPASS 1-11 INSTALLATION 1-11 PRECAUTIONS 1-12 SELECTION 1-11</p> <p>COMPONENT LOCATIONS 3-87</p> <p>COOLING SYSTEM 5-15 DESCRIPTION & OPERATION 5-15 ENGINE TEMPERATURE SENSOR 5-19 ENGINE THERMO-SWITCH 5-18 FLUSHING 2-8 THERMOSTAT 5-16 TROUBLESHOOTING 5-15 WATER DISTRIBUTION MANIFOLD 5-19 WATER HOSE DIAGRAMS 5-21 WATER INLET STRAINER 5-19 WATER PILOT OUTLET 5-19 WATER PRESSURE CONTROL VALVE 5-20</p> <p>COURTESY MARINE EXAMINATIONS 1-10</p> <p>CYLINDER BLOCK, CRANKCASE & OIL PAN 6-41 CYLINDER BLOCK WARPAGE 6-48 HONING CYLINDER WALLS 6-48 INSPECTION 6-46 REMOVAL & INSTALLATION 6-41</p> <p>CYLINDER COMPRESSION 2-11 CHECKING COMPRESSION 2-11</p> <p>CYLINDER HEAD COVER 6-25 REMOVAL & INSTALLATION 6-25</p> <p>CYLINDER HEAD & VALVETRAIN 6-33 DISASSEMBLY & ASSEMBLY 6-35 INSPECTION 6-37 CHECKING FOR VALVE LEAKAGE 6-38 CYLINDER HEAD SURFACE FLATNESS 6-39 SPRINGS, SEAT & KEEPERS 6-38 VALVE GUIDES 6-38 VALVE SEATS 6-38 VALVES 6-37 REFINISHING & REPAIRING 6-39 CYLINDER HEAD 6-40 SPRINGS, SEATS & KEEPERS 6-39 VALVES 6-39 REMOVAL & INSTALLATION 6-33</p> <p>DESCRIPTION & OPERATION AIR FILTER 2-5 COOLING SYSTEM 5-15 EXHAUST SYSTEM 5-2 IGNITION & CHARGING SYSTEMS 4-13 STARTER 4-42 THERMOSTAT 2-8</p>
---	--

8-26 MASTER INDEX

DIRECTIONS & LOCATIONS	1-2	ENGINE	6-2
DRAIN PLUGS	2-27	REMOVAL & INSTALLATION	6-2
ELECTRICAL COMPONENTS	4-2	998cc & 1052cc ENGINES	6-2
GROUND	4-3	FX HO MODELS & VX MODELS w/1812cc ENGINES	6-3
LOAD	4-4	FX SHO & FZ MODELS w/1812cc ENGINES	6-4
POWER SOURCE	4-2	ENGINE BREAK-IN	6-60
PROTECTIVE DEVICES	4-3	BREAK-IN PROCEDURES	6-60
SWITCHES & RELAYS	4-4	ENGINE CONTROL MODULE (ECM)	3-43
WIRING & HARNESSSES	4-4	ECM PIN-OUTS & CIRCUIT DIAGRAMS	3-45
ELECTRICAL SWITCH/SOLENOID SERVICE	4-49	GENERAL INFORMATION	3-43
ENGINE STOP SWITCH	4-50	REMOVAL & INSTALLATION	3-43
SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	4-49	ENGINE COUPLER	6-5
SLANT DETECTION SWITCH	4-50	ALIGNMENT	6-5
WARNING BUZZER/HORN	4-51	ENGINE MECHANICAL	6-2
ELECTRICAL TESTING	4-6	AIR COOLER & SUPERCHARGER	6-19
OPEN CIRCUITS	4-7	CAMSHAFTS & SPROCKETS	6-27
RESISTANCE	4-7	CYLINDER BLOCK, CRANKCASE & OIL PAN	6-41
SHORT CIRCUITS	4-8	CYLINDER HEAD COVER	6-25
VOLTAGE	4-6	CYLINDER HEAD & VALVETRAIN	6-33
VOLTAGE DROP	4-7	GENERAL INFORMATION	6-2
ELECTRICAL/FUSE BOX	4-8	GENERATOR/FLYWHEEL COVER	6-25
DISASSEMBLY & ASSEMBLY	4-10	ENGINE	6-2
REMOVAL & INSTALLATION	4-8	ENGINE COUPLER	6-5
2002-08 FX MODELS WITH 998cc/1052cc ENGINES	4-8	ENGINE MOUNTS	6-5
VX MODELS w/1052cc ENGINES	4-8	ENGINE TEMPERATURE SWITCH	6-57
REMOVAL, DISASSEMBLY & INSTALLATION	4-11	ENGINE THERMO-SWITCH	6-57
FX, FZ & VX MODELS WITH 1812cc ENGINES	4-11	KNOCK SENSOR	6-57
ELECTRONIC CONTROL MODULE (ECM)	4-26	OIL COOLER	6-13
ELECTRONIC FUEL INJECTION SYSTEM	3-18	OIL PRESSURE SWITCH	6-57
ACCELERATOR POSITION SENSOR (APS)	3-53	OIL PUMP	6-14
AIR FILTER CASE, COVER OR HOUSING	3-19	OIL PUMP & DRIVE GEAR	6-17
BYPASS VALVE MOTOR	3-42	OIL SEPARATOR TANK COVER	6-40
CAMSHAFT POSITION SENSOR (CMP)	3-57	OIL TANK	6-7
ENGINE CONTROL MODULE (ECM)	3-43	PISTONS, CONNECTING RODS & CRANKSHAFT	6-49
GENERAL INFORMATION	3-18	REDUCTION DRIVE GEAR & HOUSING	6-21
FUEL INJECTION BASICS	3-18	WATER JACKET COVER	6-41
FUEL RAIL & INJECTORS	3-25	ENGINE MOUNTS	6-5
INTAKE AIR PRESSURE SENSOR (IAP)	3-59	REMOVAL & INSTALLATION	6-5
INTAKE AIR TEMPERATURE SENSOR (IAT)	3-58	ENGINE OIL	2-35
SELF-DIAGNOSTIC SYSTEM	3-61	OIL LEVEL CHECK	2-35
SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	3-42	OIL & FILTER CHANGE	2-37
THROTTLE BODY ASSEMBLY	3-30	ENGINE REFINISHING & OVERHAUL	6-58
THROTTLE BODY/INTAKE MANIFOLD ASSEMBLY	3-38	GENERAL INFORMATION	6-58
THROTTLE POSITION SENSOR (TPS)	3-51	ENGINE STOP SWITCH	4-50
ELECTRONIC IGNITION & CHARGING SYSTEMS	4-13	TESTING	4-50
BATTERY	4-36	ENGINE TEMPERATURE SENSOR	5-19
DESCRIPTION & OPERATION	4-13	TESTING	5-19
ELECTRONIC CONTROL MODULE (ECM)	4-26	ENGINE TEMPERATURE SWITCH	6-57
FLYWHEEL/FLYWHEEL MAGNETO/ROTOR	4-26	REMOVAL & INSTALLATION	6-57
GENERAL INFORMATION	4-13	TESTING	6-47
GENERATOR/FLYWHEEL COVER	4-31	ENGINE THERMO-SWITCH	
IGNITION COILS	4-32	REMOVAL & INSTALLATION	6-57
RECTIFIER/REGULATOR	4-35	TESTING	5-18
STATOR/LIGHTING COIL & PULSER/PICK-UP COILS	4-34	ENGINE & DRIVE MAINTENANCE	2-2
TROUBLESHOOTING	4-17	AIR FILTER	2-5
ELECTRONIC TOOLS	1-24	BEFORE/AFTER EACH USE	2-4
BATTERY CHARGERS	1-24	BILGE PUMP	2-26
BATTERY TESTERS	1-24	CHECKS & ADJUSTMENTS	2-28
GAUGES	1-25	COOLING SYSTEM	2-8
MULTI-METERS (DVOMS)	1-24	CYLINDER COMPRESSION	2-11
		DRAIN PLUGS	2-27
		FUEL FILTER/WATER SEPARATOR	2-7

<p>FUEL, WATER, OIL & BREATHER LINES 2-27</p> <p>FUSES 2-27</p> <p>IDLE SPEED & MIXTURE 2-15</p> <p>IGNITION TIMING 2-15</p> <p>JET PUMP 2-25</p> <p>SERIAL NUMBERS 2-2</p> <p>SPARK PLUGS 2-12</p> <p>THERMOSTAT 2-8</p> <p>TROLLING SPEED 2-17</p> <p>VALVE CLEARANCE 2-17</p> <p>WATER INLET STRAINER 2-26</p> <p>EXHAUST SYSTEM 5-2</p> <p> DESCRIPTION & OPERATION 5-2</p> <p> EXHAUST TEMPERATURE SENSOR 5-14</p> <p> EXHAUST THERMO-SENSOR 5-14</p> <p> EXHAUST THERMO-SWITCH 5-13</p> <p> FORWARD EXHAUST COMPONENTS 5-6</p> <p> REAR EXHAUST COMPONENTS 5-2</p> <p>EXHAUST TEMPERATURE SENSOR 5-14</p> <p> TESTING 5-14</p> <p>EXHAUST THERMO-SENSOR 5-14</p> <p> TESTING 5-14</p> <p>EXHAUST THERMO-SWITCH 5-13</p> <p> TESTING 5-13</p> <p>FASTENERS, MEASUREMENTS AND CONVERSIONS 1-27</p> <p> BOLTS, NUTS AND OTHER THREADED RETAINERS 1-27</p> <p> STANDARD & METRIC MEASUREMENTS 1-27</p> <p> TORQUE 1-27</p> <p>FIRING ORDERS 2-74</p> <p>FIRST AID KIT 1-10</p> <p>FLUID DISPOSAL 2-34</p> <p>FLUIDS & LUBRICANTS 2-34</p> <p> ENGINE OIL 2-35</p> <p> FLUID DISPOSAL 2-34</p> <p> FUEL & OIL RECOMMENDATIONS 2-34</p> <p> JET PUMP/INTERMEDIATE HOUSING 2-39</p> <p> LUBRICATION POINTS 2-40</p> <p>FLYWHEEL 4-26</p> <p> REMOVAL & INSTALLATION 4-26</p> <p>FLYWHEEL COVER 4-31</p> <p> REMOVAL & INSTALLATION 4-31</p> <p>FLYWHEEL MAGNETO 4-26</p> <p> REMOVAL & INSTALLATION 4-26</p> <p>FORWARD EXHAUST COMPONENTS 5-6</p> <p> REMOVAL 5-6</p> <p> INSTALLATION 5-10</p> <p>FUEL 3-2</p> <p> ALCOHOL-BLENDED FUELS 3-3</p> <p> CHECKING FOR STALE/CONTAMINATED FUEL 3-3</p> <p> GENERAL INFORMATION 3-2</p> <p> HIGH ALTITUDE OPERATION 3-3</p> <p> OCTANE RATING 3-2</p> <p> VAPOR PRESSURE 3-3</p> <p> THE BOTTOM LINE WITH FUELS 3-3</p> <p>FUEL & COMBUSTION BASICS 3-2</p> <p> COMBUSTION 3-4</p> <p> FUEL 3-2</p> <p> GENERAL INFORMATION 3-2</p> <p> PRESSURIZATION 3-4</p> <p> SERVICE CAUTIONS 3-2</p>	<p>FUEL & OIL RECOMMENDATIONS 2-34</p> <p> FUEL 2-34</p> <p> OIL 2-34</p> <p>FUEL, WATER, OIL & BREATHER LINES 2-27</p> <p>FUEL FILTER/WATER SEPARATOR 2-7, 3-5</p> <p>FUEL INJECTION BASICS 3-18</p> <p>FUEL LINES 3-15</p> <p> REMOVAL & INSTALLATION 3-15</p> <p>FUEL PUMP MODULE 3-9</p> <p> CHECKING FUEL PRESSURE 3-12</p> <p> FUEL SENDER 3-11</p> <p> REMOVAL & INSTALLATION 3-9</p> <p>FUEL RAIL & INJECTORS 3-25</p> <p> REMOVAL, DISASSEMBLY & INSTALLATION 3-25</p> <p> TESTING 3-30</p> <p>FUEL SYSTEM PRESSURIZATION 3-4</p> <p> GENERAL INFORMATION 3-4</p> <p> RELIEVING PRESSURE 3-4</p> <p>FUEL SYSTEM SERVICE CAUTIONS 3-2</p> <p>FUEL TANK 3-5</p> <p> REMOVAL & INSTALLATION 3-5</p> <p> FX MODELS 3-5</p> <p> FZR/FZS MODELS 3-6</p> <p> 2005-09 VX MODELS 3-7</p> <p> 2010-11 VX MODELS 3-8</p> <p>FUEL TANK & LINES 3-5</p> <p> GENERAL INFORMATION 3-5</p> <p> FUEL FILTER/WATER SEPARATOR 3-5</p> <p> FUEL LINES 3-15</p> <p> FUEL PUMP MODULE 3-9</p> <p> FUEL TANK 3-5</p> <p> MAIN & FUEL PUMP RELAY 3-13</p> <p>FUSES 2-27</p> <p>GENERATOR COVER 4-31</p> <p> REMOVAL & INSTALLATION 4-31</p> <p>HAND TOOLS 1-19</p> <p> BREAKER BARS 1-21</p> <p> HAMMERS 1-22</p> <p> PLIERS 1-22</p> <p> SCREWDRIVERS 1-22</p> <p> SOCKET SETS 1-19</p> <p> TORQUE WRENCHES 1-20</p> <p> WRENCHES 1-21</p> <p>HANDLEBARS 8-2</p> <p> DISASSEMBLY & ASSEMBLY 8-7</p> <p> REMOVAL & INSTALLATION 8-2</p> <p>HOOD 8-20</p> <p> REMOVAL & INSTALLATION 8-20</p> <p>HOW TO USE THIS MANUAL 1-2</p> <p> AVOIDING THE MOST COMMON MISTAKES 1-3</p> <p> AVOIDING TROUBLE 1-2</p> <p> CAN YOU DO IT? 1-2</p> <p> DIRECTIONS & LOCATIONS 1-2</p> <p> MAINTENANCE OR REPAIR? 1-2</p> <p> PROFESSIONAL HELP 1-3</p> <p> PURCHASING PARTS 1-3</p> <p> WHERE TO BEGIN 1-2</p>
--	--

8-28 MASTER INDEX

HULL, HELM & STEERING	8-2	OIL TANK	6-7
HANDLEBARS	8-2	DISASSEMBLY & ASSEMBLY	6-11
HOOD	8-20	REMOVAL & INSTALLATION	6-7
SHIFT LEVER ASSEMBLY	8-22	OIL COOLER	6-13
STEERING ASSEMBLY	8-9	REMOVAL & INSTALLATION	6-13
STEERING SENSOR	8-19	OIL PRESSURE SWITCH	6-57
IDLE SPEED & MIXTURE	2-15	REMOVAL & INSTALLATION	6-57
IGNITION COILS	4-32	TESTING	6-58
REMOVAL & INSTALLATION	4-32	OIL PUMP	6-14
TESTING	4-33	DISASSEMBLY & ASSEMBLY	6-15
IGNITION TIMING	2-15	998cc ENGINES	6-15
IMPELLER & IMPELLER HOUSING/DUCT	7-18	1052cc ENGINES	6-16
INTAKE AIR PRESSURE SENSOR (IAP)	3-59	REMOVAL & INSTALLATION	6-4
REMOVAL & INSTALLATION	3-60	998cc ENGINES	6-4
TESTING	3-60	1052cc ENGINES	6-15
INTAKE AIR TEMPERATURE SENSOR (IAT)	3-58	OIL PUMP & DRIVE GEAR	6-17
REMOVAL & INSTALLATION	3-58	REMOVAL & INSTALLATION	6-17
TESTING	3-58	OIL SEPARATOR TANK COVER	6-40
INTAKE GRATE, INTAKE DUCT & RIDE PLATE	7-2	REMOVAL & INSTALLATION	6-40
REMOVAL & INSTALLATION	7-2	OTHER COMMON TOOLS	1-22
INTERMEDIATE BEARING HOUSING	7-18	PICK-UP COILS	4-34
DISASSEMBLY & ASSEMBLY	7-19	REMOVAL & INSTALLATION	4-34
REMOVAL & INSTALLATION	7-18	PISTONS, CONNECTING RODS & CRANKSHAFT	6-49
INTERMEDIATE HOUSING	2-39	INSPECTION	6-52
LUBRICATION	2-39	CONNECTING RODS	6-54
JET DRIVE	7-2	CRANKSHAFT	6-55
GENERAL INFORMATION	7-2	OVERSIZE PISTONS & RINGS	6-56
IMPELLER & IMPELLER HOUSING/DUCT	7-18	PISTON PIN CLEARANCE	6-53
INTAKE GRATE, INTAKE DUCT & RIDE PLATE	7-2	PISTON RING END-GAP CLEARANCE	6-53
INTERMEDIATE BEARING HOUSING	7-18	PISTON RING SIDE CLEARANCE	6-53
JET PUMP ASSEMBLY	7-4	MEASURING BEARING CLEARANCE USING PLASTIGAGE(r)	6-56
REVERSE GATE	7-14	REMOVAL & INSTALLATION	6-49
THRUST NOZZLE & NOZZLE RING	7-17	PROFESSIONAL HELP	1-3
JET PUMP ASSEMBLY	7-4	PULSER COILS	4-34
DISASSEMBLY & ASSEMBLY	7-8	REMOVAL & INSTALLATION	4-34
IMPELLER INSPECTION	2-25	PURCHASING PARTS	1-3
LUBRICATION	2-39	PWC MAINTENANCE	2-44
REMOVAL & INSTALLATION	7-4	ANODES (ZINGS)	2-44
KNOCK SENSOR	6-57	BATTERY	2-46
REMOVAL & INSTALLATION	6-57	INSIDE THE VESSEL	2-44
TESTING	6-57	THE PWC'S EXTERIOR	2-44
LIGHTING COIL	4-34	REAR EXHAUST COMPONENTS	5-2
REMOVAL & INSTALLATION	4-34	REMOVAL & INSTALLATION	5-2
LUBRICATION POINTS	2-40	RECTIFIER/REGULATOR	4-35
JET THRUST NOZZLE	2-43	REMOVAL & INSTALLATION	4-35
QSTS CONTROL CABLE	2-42	REDUCTION DRIVE GEAR & HOUSING	6-21
SHIFT & STEERING CABLES	2-43	DISASSEMBLY & ASSEMBLY	6-23
STEERING MASTER ASSEMBLY	2-40	998cc ENGINES	6-23
THROTTLE BODY	2-41	1052cc ENGINES	6-24
THROTTLE CABLE	2-40	REMOVAL & INSTALLATION	6-21
MAIN & FUEL PUMP RELAY	3-13	998cc ENGINES	6-21
REMOVAL & INSTALLATION	3-13	1052cc ENGINES	6-22
TESTING	3-13	REGULATIONS FOR YOUR BOAT	1-4
MAINTENANCE OR REPAIR?	1-2	CAPACITY INFORMATION	1-4
MEASURING TOOLS	1-25	CERTIFICATE OF COMPLIANCE	1-5
DEPTH GAUGES	1-26	DOCUMENTING OF VESSELS	1-4
DIAL INDICATORS	1-26	HULL IDENTIFICATION NUMBER	1-4
MICROMETERS & CALIPERS	1-25	LENGTH OF BOATS	1-4
TELESCOPING GAUGES	1-26	NUMBERING OF VESSELS	1-4
OAR/PADDLE (SECOND MEANS OF PROPULSION)	1-10	REGISTRATION OF BOATS	1-4

<p>SALES & TRANSFERS 1-4 VENTILATION 1-5 VENTILATION SYSTEMS 1-5</p> <p>REQUIRED SAFETY EQUIPMENT 1-6 FIRE EXTINGUISHERS 1-6 PERSONAL FLOTATION DEVICES 1-7 SOUND PRODUCING DEVICES 1-9 TYPES OF FIRES 1-6 VISUAL DISTRESS SIGNALS 1-9 WARNING SYSTEM 1-7</p> <p>REVERSE GATE 7-14 REMOVAL & INSTALLATION 7-14</p> <p>ROTOR 4-26 REMOVAL & INSTALLATION 4-26</p> <p>SAFETY IN SERVICE 1-13 DO'S 1-13 DON'TS 1-13</p> <p>SAFETY TOOLS 1-17 EYE & EAR PROTECTION 1-17 WORK CLOTHES 1-17 WORK GLOVES 1-17</p> <p>SELF-DIAGNOSTIC SYSTEM 3-61 READING TROUBLE CODES 3-62 TROUBLE CODE & SYMPTOM CHARTS 3-63 TROUBLE CODE SYMPTOM TEST CHARTS 3-68</p> <p>SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS 4-49 TESTING 4-49</p> <p>SERIAL NUMBERS 2-2 EMISSION CONTROL LABEL 2-3 ENGINE 2-2 HULL IDENTIFICATION NUMBER (HIN) 2-3 JET PUMP 2-3 PRIMARY I.D. NUMBER 2-3</p> <p>SHIFT LEVER ASSEMBLY 8-22 REMOVAL & INSTALLATION 8-22</p> <p>SHOP EQUIPMENT 1-17 CHEMICALS 1-17 SAFETY TOOLS 1-17</p> <p>SLANT DETECTION SWITCH 4-50 TESTING 4-50</p> <p>SPARK PLUGS 2-12 HEAT RANGE 2-12 INSPECTION & GAPPING 2-14 READING PLUGS 2-14 REMOVAL & INSTALLATION 2-12 SERVICE 2-12</p> <p>SPECIAL TOOLS 1-23</p> <p>SPECIFICATIONS CONVERSION FACTORS 1-28 ELECTRONIC COMPONENT TESTS 4-94 ELECTRONIC SYSTEMS TESTING 4-92 ENGINE 6-61 GENERAL ENGINE 2-76 MAINTENANCE INTERVALS 2-82 METRIC BOLTS - TYPICAL TORQUE VALUES 1-28 MODEL IDENTIFICATION 2-74 TORQUE 6-65 TUNE-UP 2-78 U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES 1-28</p>	<p>SPRING COMMISSIONING 2-50 CHECKLIST 2-50</p> <p>STANDARD & METRIC MEASUREMENTS 1-27</p> <p>START SWITCH 4-42 TESTING 4-42</p> <p>STARTER CLUTCH, STARTER GEAR & IDLE GEAR 4-48 REMOVAL & INSTALLATION 4-48</p> <p>STARTER MOTOR 4-42 ASSEMBLY 4-48 CLEANING & INSPECTION 4-46 DESCRIPTION 4-42 DISASSEMBLY 4-46 EXPLODED VIEWS 4-44 REMOVAL & INSTALLATION 4-42</p> <p>STARTER RELAY 4-40 REMOVAL & INSTALLATION 4-41 TESTING 4-40</p> <p>STARTING SYSTEM 4-39 DESCRIPTION & OPERATION 4-39 START SWITCH 4-42 STARTER CLUTCH, STARTER GEAR & IDLE GEAR 4-48 STARTER MOTOR 4-42 STARTER RELAY 4-40</p> <p>STATOR 4-34 REMOVAL & INSTALLATION 4-34</p> <p>STEERING ASSEMBLY 8-9 DISASSEMBLY & ASSEMBLY 8-14 REMOVAL & INSTALLATION 8-9</p> <p>STEERING SENSOR 8-19 TESTING 8-19</p> <p>TEST EQUIPMENT 4-4 JUMPER WIRES 4-5 MULTI-METERS 4-5 PEAK VOLTAGE READING ADAPTOR 4-6 TEST LIGHTS 4-5</p> <p>THE PWC'S EXTERIOR 2-44 BELOW WATERLINE 2-44 HULL 2-44</p> <p>THERMOSTAT 5-16 DESCRIPTION & OPERATION 2-8, 5-16 REMOVAL & INSTALLATION 2-9, 5-16 TESTING 2-10, 5-17</p> <p>THROTTLE BODY ASSEMBLY 3-30 REMOVAL, DISASSEMBLY & INSTALLATION 3-30 SYNCHRONIZATION 3-34</p> <p>THROTTLE BODY/INTAKE MANIFOLD ASSEMBLY 3-38 REMOVAL & INSTALLATION 3-38</p> <p>THROTTLE POSITION SENSOR (TPS) 3-51 GENERAL INFORMATION 3-51 REMOVAL & INSTALLATION 3-51 TESTING 3-52</p> <p>THRUST NOZZLE & NOZZLE RING 7-17 REMOVAL & INSTALLATION 7-17 FX & FZ MODELS 7-17 VX MODELS 7-18</p> <p>TOOLS 1-19 ELECTRONIC TOOLS 1-24 HAND TOOLS 1-19 MEASURING TOOLS 1-25 OTHER COMMON TOOLS 1-22</p>
--	--

8-30 MASTER INDEX

SPECIAL TOOLS	1-23	VHF-FM RADIO.....	1-10
TOOLS & SPARE PARTS	1-12	WARNING BUZZER/HORN	4-51
TORQUE	1-27	TESTING.....	4-51
TROLLING SPEED	2-17	WATER DISTRIBUTION MANIFOLD	5-19
ADJUSTMENT	2-17	REMOVAL & INSTALLATION	5-19
TRUBLESHOOTING		WATER HOSE DIAGRAMS.....	5-21
BASIC OPERATING PRINCIPLES	1-13	2002 FX w/998cc ENGINES.....	5-21
COOLING SYSTEM	5-15	2003-08 FX w/998cc ENGINES	5-21
ELECTRICAL SYSTEMS	4-6	2004-07 FX w/1052cc ENGINES	5-22
IGNITION & CHARGING SYSTEMS	4-17	2008 FX w/1052cc ENGINES.....	5-23
2002-08 FX w/998cc ENGINES -	2-51	2008-11 FX HO w/1812cc ENGINES	5-24
2004-07 FX HO w/1052cc ENGINES -	2-53	2008-11 FX SHO & FZ w/1812cc ENGINES	5-25
2008 FX HO w/1052cc ENGINES -	2-55	2005-09 VX w/1052cc ENGINES	5-26
2009-11 FX HO w/1812cc ENGINES -	2-57	2010-11 VX w/1052cc ENGINES	5-26
2008-11 FX SHO w/1812cc ENGINES	2-60	2011 VX w/1812cc ENGINES.....	5-27
2009-11 FZX & FZR w/1812cc ENGINES -	2-63	WATER INLET STRAINER	2-26, 5-19
2005-09 VX w/1052cc ENGINES -	2-66	INSPECTION	2-26
2010-11 VX w/1052cc ENGINES -	2-68	WATER JACKET COVER	6-41
2011 VX w/1812cc ENGINES -	2-71	REMOVAL & INSTALLATION	6-41
UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS 4-2		WATER PILOT OUTLET	5-19
BASIC ELECTRICAL THEORY	4-2	REMOVAL & INSTALLATION	5-19
ELECTRICAL COMPONENTS	4-2	WATER PRESSURE CONTROL VALVE	5-20
ELECTRICAL TESTING	4-6	REMOVAL & INSTALLATION	5-20
ELECTRICAL/FUSE BOX.....	4-8	WHERE TO BEGIN.....	1-2
PRECAUTIONS	4-8	WINTER STORAGE	2-49
TEST EQUIPMENT.....	4-4	GENERAL INFORMATION	2-49
TRUBLESHOOTING ELECTRICAL SYSTEMS.....	4-6	PREPPING FOR STORAGE	2-49
WIRE & CONNECTOR REPAIR.....	4-8	WINTER STORAGE CHECKLIST	2-49
VALVE CLEARANCE.....	2-17	WIRE & CONNECTOR REPAIR	4-8
ADJUSTMENT	2-17	WIRING DIAGRAMS.....	4-51